

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Outdoorchef](#) /

› [Outdoorchef Gourmet Check Dual BT Bluetooth Barbecue Thermometer User Manual](#)

Outdoorchef Gourmet Check Dual BT

Outdoorchef Gourmet Check Dual BT Bluetooth Barbecue Thermometer User Manual

Model: Gourmet Check Dual BT (18.212.59)

INTRODUCTION

Thank you for choosing the Outdoorchef Gourmet Check Dual BT Bluetooth Barbecue Thermometer. This device is designed to help you achieve perfect cooking results by accurately monitoring both the core temperature of your food and the ambient temperature of your cooking environment. With its dual-sensor probe and Bluetooth connectivity, you can conveniently track your cooking progress via a dedicated application on your mobile device.

Please read this manual carefully before using the thermometer to ensure proper operation and to maximize its lifespan.

PRODUCT OVERVIEW



Image: The Outdoorchef Gourmet Check Dual BT thermometer, showing the main unit with the Outdoorchef logo and a blue indicator light, connected by a braided metal cable to a stainless steel dual-sensor probe.

The Gourmet Check Dual BT consists of a main unit and a stainless steel probe. The main unit houses the Bluetooth module and display interface, while the probe contains two sensors: one for internal food temperature and another for ambient temperature. The device is battery-powered and designed for ease of use with a companion application.

SETUP AND INITIAL USE

- 1. Insert Batteries:** Open the battery compartment on the main unit and insert the required batteries (type not specified, typically AAA or AA). Ensure correct polarity.
- 2. Download the App:** Search for the official Outdoorchef thermometer application on your smartphone or tablet's app store (e.g., Apple App Store or Google Play Store). Download and install the application.

3. **Power On:** Press the power button on the main unit. A blue indicator light should illuminate, indicating the device is active and ready for Bluetooth pairing.

4. **Pair with Mobile Device:**

- Enable Bluetooth on your smartphone or tablet.
- Open the Outdoorchef application.
- Follow the in-app instructions to search for and connect to your Gourmet Check Dual BT thermometer. The app should display a confirmation once connected.

5. **Probe Connection:** Ensure the stainless steel probe is securely plugged into the main unit's port.

OPERATING INSTRUCTIONS

1. **Probe Placement:** Insert the pointed end of the stainless steel probe into the thickest part of the food you are cooking, avoiding bones. For ambient temperature, position the probe tip in the cooking chamber without touching the food or direct heat source.

2. **Monitor Temperatures:** Once connected, the Outdoorchef app will display real-time readings for both the core food temperature and the ambient cooking temperature.

3. **Set Target Temperatures:** Use the app to select your desired doneness or target temperature for your food. The app may offer preset options for various types of meat and cooking levels.

4. **Timer and Alarm Function:** The integrated timer and alarm function can be set via the app. An alarm will sound on your mobile device when the target temperature is reached or when the set time expires.

5. **Temperature Range:** The thermometer accurately measures temperatures from 0°C to 300°C (32°F to 572°F).

6. **Disconnecting:** After cooking, carefully remove the probe from the food and the cooking environment. Disconnect the thermometer from the app and power off the main unit to conserve battery life.

MAINTENANCE AND CARE

- **Cleaning the Probe:** After each use, allow the probe to cool. Clean the stainless steel probe with warm, soapy water. **Do not immerse the main unit in water.** Wipe the main unit with a damp cloth.
- **Storage:** Store the thermometer and probe in a clean, dry place when not in use.
- **Battery Replacement:** Replace batteries when the display or app indicates low power, or if the device fails to power on.
- **Avoid Extreme Temperatures:** Do not expose the main unit to direct flame or extreme heat. The probe is designed for high temperatures, but the cable and main unit are not.

TROUBLESHOOTING

• **Device Not Powering On:**

- Check if batteries are inserted correctly and have sufficient charge. Replace if necessary.

• **Bluetooth Connection Issues:**

- Ensure Bluetooth is enabled on your mobile device.
- Make sure the thermometer is powered on and within range of your mobile device (typically up to 10 meters, but can vary).
- Close and reopen the Outdoorchef app.

- Restart both your mobile device and the thermometer.
- If the app frequently crashes, ensure it is updated to the latest version. Try reinstalling the app.
- Check if there are any other Bluetooth devices interfering with the connection.

• **Inaccurate Temperature Readings:**

- Ensure the probe is fully and correctly inserted into the food, avoiding bones.
- Verify the probe cable is securely connected to the main unit.
- Check for any visible damage to the probe or cable.

SPECIFICATIONS

Feature	Detail
Model Name	Gourmet Check Dual BT
Model Number	18.212.59
Brand	Outdoorchef
Connectivity Technology	Bluetooth
Display Type	Digital
Exterior Material	Stainless Steel
Power Source	Battery Powered
Special Feature	App Companion
Temperature Range	0°C to 300°C (32°F to 572°F)
Product Dimensions (L x W x H)	3.5 x 2.4 x 18 cm
Weight	310 grams
Color	Grey
Included Components	1 (Thermometer unit with probe)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Outdoorchef website. Information regarding spare parts availability is not provided in this manual.

