

[Manuals.plus](#) /

› [Atlanta](#) /

› Atlanta 1975/0 Quartz Analog Alarm Clock with Night Light User Manual

Atlanta 1975/0

Atlanta 1975/0 Quartz Analog Alarm Clock with Night Light User Manual

Model: 1975/0 | Brand: Atlanta

PRODUCT OVERVIEW

The Atlanta 1975/0 is a practical quartz analog alarm clock designed for clear readability and quiet operation. It features a night light function, a silent sweeping second hand, and a convenient snooze function. This manual provides instructions for setting up, operating, and maintaining your alarm clock.



Front view of the Atlanta 1975/0 Quartz Analog Alarm Clock, showing the white dial with black numbers and hands, and the Atlanta logo.

Key Features:

- **Night Light Function:** A subtle, continuous light illuminates the dial for visibility in low-light conditions. This function is controlled by a light sensor that measures ambient light.
- **Silent Second Hand:** The second hand moves continuously without a ticking sound, ensuring undisturbed sleep.
- **Snooze Function:** Temporarily silences the alarm for approximately 5 minutes before sounding again.
- **Easy-to-Read Dial:** High-contrast dial for clear time display.
- **Battery Operated:** Requires 2 AA batteries (not included).

PACKAGE CONTENTS

Please check the package for the following items:

- Atlanta 1975/0 Quartz Analog Alarm Clock
- User Manual (this document)

Note: 2 AA batteries are required for operation and are not included in the package. Please purchase them separately.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the alarm clock.
2. Remove the cover by sliding or lifting it.
3. Insert 2 new AA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.



Rear view of the alarm clock, illustrating the battery compartment and control knobs for time and alarm settings.

2. Setting the Time

1. Locate the "TIME SET" knob on the back of the clock.
2. Rotate the "TIME SET" knob clockwise or counter-clockwise until the hour and minute hands display the correct current time.

3. Setting the Alarm

1. Locate the "ALARM SET" knob on the back of the clock.
2. Rotate the "ALARM SET" knob to move the alarm hand to your desired alarm time.
3. Ensure the alarm ON/OFF switch (usually a small slider or button) is in the "ON" position to activate the alarm.

OPERATING INSTRUCTIONS

Night Light Function

- The clock features a light sensor that automatically activates a subtle, continuous backlight on the dial when the ambient light is low. This allows for easy time reading in the dark.
- To temporarily increase the brightness of the night light, press the large button located on the top of the clock. The light will brighten for a few seconds and then return to its ambient setting.

Snooze Function

- When the alarm sounds, press the large button on the top of the clock to activate the snooze function.
- The alarm will pause for approximately 5 minutes and then sound again.
- You can repeat the snooze function multiple times.

Turning the Alarm On/Off

- To turn the alarm ON, slide the alarm switch (usually on the back or side) to the "ON" position.
- To turn the alarm OFF completely, slide the alarm switch to the "OFF" position. This will disable the alarm until it is manually turned back on.

MAINTENANCE

Cleaning

- Wipe the clock with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the clock's finish or internal components.

Battery Replacement

- When the clock's display dims, the alarm weakens, or the clock stops functioning, it is time to replace the batteries.
- Follow the "Battery Installation" steps in the Setup section to replace the old batteries with new AA batteries.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working / Display off	Batteries are dead or incorrectly installed.	Replace batteries with new AA batteries, ensuring correct polarity.
Alarm not sounding	Alarm switch is OFF; Alarm time not set correctly; Batteries low.	Ensure alarm switch is ON. Verify alarm hand is set to desired time. Replace batteries.
Night light not working	Ambient light is too bright; Batteries low.	Test in a darker environment. Replace batteries.
Clock making noise (not silent)	Internal mechanism issue.	This model is designed for silent operation. If noise occurs, contact customer support.

SPECIFICATIONS

- **Model:** 1975/0
- **Brand:** Atlanta
- **Color:** White
- **Display Type:** Analog
- **Special Features:** Alarm, Snooze, Night Light, Silent Second Hand
- **Power Source:** Battery Powered (2 x AA batteries, not included)
- **Room Type:** Home Office, Bedroom
- **Shape:** Square (referring to the overall form factor, though the dial is round)
- **Material:** Plastic
- **Frame Material:** Plastic
- **Mounting Type:** Tabletop
- **Movement Type:** Quartz
- **Dimensions:** Approximately 10 x 10 x 4 cm (3.94 x 3.94 x 1.57 inches)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the point of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

If you encounter issues not covered in the troubleshooting section, please contact Atlanta customer service through their official website or the contact information provided with your product.