

[Manuals.plus](#) /

› [Everest](#) /

› Everest SMW-242 Wireless Mouse User Manual

## Everest SMW-242

# Everest SMW-242 Wireless Mouse User Manual

Model: SMW-242

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Everest SMW-242 Wireless Mouse. Please read this manual thoroughly before using the product to ensure proper functionality and to prevent damage.

## PACKAGE CONTENTS

---

- Everest SMW-242 Wireless Mouse
- USB Nano Receiver
- 1 x AA Alkaline Battery
- User Manual (this document)

## SETUP

---

### 1. Inserting the Battery

1. Locate the battery compartment on the underside of the mouse.
2. Gently slide open the battery compartment cover.
3. Insert one AA alkaline battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover until it clicks securely into place.



## *1 Adet AA Alkalin Pil Hediye*

Image: Underside of the mouse showing the battery compartment and an AA battery for installation.

## **2. Connecting the USB Nano Receiver**

1. Locate the USB nano receiver, usually stored within the battery compartment or packaged separately.
2. Plug the USB nano receiver into an available USB port on your computer.
3. Your operating system should automatically detect and install the necessary drivers. This may take a few moments.

# EVEREST



SMW-242 Kırmızı 4D 1600/1200/800 Dpi Kablosuz Mouse

Image: The Everest SMW-242 mouse displayed with its compact USB nano receiver.

### 3. Powering On the Mouse

Most wireless mice have an On/Off switch on the underside. Slide the switch to the "ON" position. The mouse should now be ready for use.

## OPERATING INSTRUCTIONS

---

### Basic Functions

- **Left Click:** Primary selection and activation.
- **Right Click:** Opens contextual menus.
- **Scroll Wheel:** Scrolls documents and web pages vertically. Can also be clicked for middle-click functionality (application dependent).



Image: Top view of the Everest SMW-242 mouse, showing the left/right click buttons, scroll wheel, and DPI adjustment button.

## DPI Adjustment (Sensitivity)

The Everest SMW-242 mouse features adjustable DPI settings, allowing you to change the cursor sensitivity to suit your preference or task. The available DPI settings are 800, 1200, and 1600 DPI.

1. Locate the DPI button, typically positioned behind the scroll wheel.
2. Press the DPI button to cycle through the available sensitivity settings (800 → 1200 → 1600 → 800 DPI).
3. Observe the change in cursor speed on your screen to select your desired sensitivity.

## 4D Functionality

The "4D" designation typically refers to additional functionality beyond standard 2-axis movement and basic clicks. For this mouse, it implies the adjustable DPI settings and potentially the scroll wheel's ability to function as a middle click or other programmable actions depending on the operating system or software. The primary 4D feature highlighted is the adjustable DPI.

## MAINTENANCE

---

### Cleaning the Mouse

- Disconnect the mouse from your computer by removing the USB receiver.
- Use a soft, lint-free cloth lightly dampened with water or a mild cleaning solution to wipe the surface of the mouse.
- Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the mouse.
- For optical sensor cleaning, use a cotton swab lightly dampened with isopropyl alcohol to gently clean the sensor opening on the underside.

## Battery Replacement

When the mouse performance degrades or it stops responding, it is likely time to replace the battery. Follow the steps outlined in the "Inserting the Battery" section under Setup.

## Storage

When not in use for extended periods, it is recommended to turn off the mouse using the On/Off switch and remove the battery to prevent leakage and prolong battery life. Store the USB receiver in its dedicated slot within the mouse or in a safe place to prevent loss.

## TROUBLESHOOTING

Problem	Solution
Mouse not responding or erratic movement.	<ul style="list-style-type: none"><li>• Ensure the mouse is turned ON.</li><li>• Check battery level and replace if necessary.</li><li>• Ensure the USB receiver is securely plugged into a working USB port. Try a different USB port.</li><li>• Move the mouse closer to the USB receiver to reduce interference.</li><li>• Clean the optical sensor on the underside of the mouse.</li><li>• Restart your computer.</li></ul>
Cursor moves too fast or too slow.	<ul style="list-style-type: none"><li>• Press the DPI button on the mouse to adjust sensitivity (800/1200/1600 DPI).</li><li>• Adjust mouse pointer speed settings in your computer's operating system (e.g., Windows Control Panel &gt; Mouse, or macOS System Settings &gt; Mouse).</li></ul>
Wireless connection issues.	<ul style="list-style-type: none"><li>• Avoid using the mouse on metallic surfaces, which can interfere with wireless signals.</li><li>• Ensure no other 2.4 GHz wireless devices are causing interference nearby.</li><li>• Re-pair the mouse and receiver if your mouse has a pairing button (refer to specific product instructions if available, though most plug-and-play mice do not require manual pairing).</li></ul>

## SPECIFICATIONS

Feature	Detail
Model	SMW-242
Connectivity	2.4 GHz Wireless (USB Nano Receiver)
DPI Settings	800 / 1200 / 1600 DPI (Adjustable)
Sensor Type	Optical
Buttons	4D (Left, Right, Scroll Wheel Click, DPI Button)
Power Source	1 x AA Battery

Feature	Detail
Wireless Range	Up to 10 meters (approx. 33 feet)
Weight	0.12 Kilograms (approx. 0.26 lbs)
Compatibility	Windows, Android (with OTG support)

## WARRANTY INFORMATION

---

The Everest SMW-242 Wireless Mouse comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by accident, misuse, abuse, unauthorized modification, or external causes such as liquid damage.

Please retain your proof of purchase for warranty claims. For warranty service, contact your retailer or the manufacturer's customer support.

## SUPPORT

---

If you encounter any issues not covered in this manual or require further assistance, please refer to the following resources:

- **Manufacturer's Website:** Visit the official Everest website for FAQs, driver downloads (if applicable), and additional support information.
- **Retailer Support:** Contact the retailer from whom you purchased the product for assistance.

For general inquiries or technical support, please have your product model number (SMW-242) and proof of purchase ready.

