

Mikado MD-10BT

Mikado MD-10BT FM Radio Bluetooth Speaker User Manual

Model: MD-10BT

1. INTRODUCTION

Thank you for choosing the Mikado MD-10BT FM Radio Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the device to water, moisture, or extreme temperatures.
- Avoid disassembling, repairing, or modifying the device yourself. This may void the warranty and cause damage.
- Keep the device away from direct sunlight and heat sources.
- Use only the specified charging accessories.
- Do not use the device at excessively high volumes for extended periods to prevent hearing damage.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Mikado MD-10BT Bluetooth Speaker
- User Manual
- Warranty Certificate
- Charging Cable (*typically included, though not explicitly listed in original description*)

4. PRODUCT OVERVIEW

The Mikado MD-10BT is a portable Bluetooth speaker with integrated FM radio functionality. It offers a sound power of 95 dB for an enhanced audio experience.



Figure 1: Front view of the Mikado MD-10BT Bluetooth Speaker. This image shows the speaker grille and control panel.

Controls and Ports

While specific button layouts may vary, common controls typically include:

- **Power Button:** To turn the speaker on or off.
- **Mode Button:** To switch between Bluetooth, FM Radio, and other available modes.
- **Volume Buttons:** To adjust the playback volume.
- **Track/Station Navigation Buttons:** To skip tracks in Bluetooth mode or change stations in FM mode.
- **Charging Port:** For connecting the charging cable.

5. SETUP

5.1 Charging the Speaker

1. Connect the charging cable to the speaker's charging port.
2. Plug the other end of the cable into a compatible USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate, typically red, during charging.
4. Once fully charged, the indicator light may change color or turn off. Disconnect the speaker from the power source.

5.2 Power On/Off

- **To Power On:** Press and hold the Power button for a few seconds until you hear an audible prompt or see an indicator light.
- **To Power Off:** Press and hold the Power button again for a few seconds until the device powers down.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Mode

1. Turn on the speaker. It will typically enter Bluetooth pairing mode automatically, indicated by a flashing blue LED.
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices and select "MD-10BT" from the list.
4. Once paired, the speaker will emit a confirmation sound, and the LED indicator will stop flashing and remain solid blue.
5. You can now play audio from your connected device through the speaker.
6. Use the speaker's volume buttons or your connected device's volume controls to adjust the sound level.

6.2 FM Radio Mode

1. Turn on the speaker.
2. Press the Mode button repeatedly until you enter FM Radio mode. You may hear static or a radio station.
3. **Automatic Station Scan:** Press and hold the Play/Pause button (or a dedicated scan button if available) to initiate an automatic scan for FM stations. The speaker will scan and save available stations.
4. **Manual Tuning:** Use the Track/Station Navigation buttons to cycle through the saved stations or manually tune to a frequency.
5. Adjust the volume using the speaker's volume buttons.

7. MAINTENANCE

7.1 Cleaning

- Wipe the speaker's exterior with a soft, dry cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents, as these can damage the surface.
- Avoid getting moisture into any openings.

7.2 Storage

- When not in use for extended periods, store the speaker in a cool, dry place.
- Avoid storing it in areas with extreme temperatures or high humidity.

7.3 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Charge the speaker regularly, even if not in frequent use.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot connect via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode. Turn on Bluetooth on your device. Move device closer to speaker (within 10 meters).
Poor FM radio reception.	Weak signal; interference.	Relocate the speaker to an area with better reception. Extend any built-in antenna if available.
No sound.	Volume too low; device not playing.	Increase volume on both speaker and connected device. Ensure audio is playing on the connected device.

9. SPECIFICATIONS

Feature	Specification
Brand	Mikado
Model Number	MD-10BT
Speaker Maximum Output Power	3 Watt
Frequency Response	16 KHz
Connectivity Technology	Bluetooth
Mount Type	Portable
Speaker Type	Stereo
Features	Bluetooth, Portable
Color	Black
Control Method	Touch
Water Resistance Level	Not Water Resistant
Surround Sound Channel Configuration	1.0
Connection Protocol	EnOcean
Power Source	Battery Powered
Product Weight	0.34 Kilogram
Compatible Devices	Smartphone, Laptop

10. WARRANTY AND SUPPORT

10.1 Warranty Information

This product comes with a manufacturer's warranty for 2 years from the date of purchase. Please refer to your Warranty Certificate for detailed terms and conditions.

10.2 Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact Mikado customer support. You can usually find contact information on the official Mikado website or on your warranty card.