

[Manuals.plus](#) /

› [LKPower](#) /

› LKPower AC Adapter User Manual for Nexxtech N700-PD DL730-PD DVD Player

LKPower 180124323

LKPower AC Adapter User Manual for Nexxtech N700-PD DL730-PD DVD Player

INTRODUCTION

This LKPower AC adapter is designed to provide reliable power for your Nexxtech N700-PD and DL730-PD DVD players. It converts standard AC wall power into the DC power required by your device, enabling operation and battery charging. Manufactured with high-quality materials, this adapter ensures compatibility and performance.

Key features include:

- Input: AC 100-240V 50/60Hz Auto (Worldwide AC Input)
- Over Voltage Protection
- Over Heat Protection
- Tested Units for Great Working Condition

SETUP INSTRUCTIONS

Follow these steps to properly connect your LKPower AC adapter:

1. Ensure your Nexxtech DVD player is powered off before connecting the adapter.
2. Insert the barrel connector of the LKPower AC adapter firmly into the DC input port on your DVD player.
3. Plug the AC adapter into a standard wall electrical outlet. The adapter is compatible with AC 100-240V, 50/60Hz power sources worldwide.



Image: The LKPower AC adapter connected to a wall outlet, ready for use with a device.

OPERATING INSTRUCTIONS

Once the adapter is securely connected to both the wall outlet and your Nexxtech DVD player, it will begin supplying power to the device. If your DVD player has a rechargeable battery, the adapter will also initiate the charging process. Refer to your specific DVD player's user manual for details on charging indicators and battery status.

MAINTENANCE

To ensure the longevity and proper functioning of your LKPower AC adapter, please observe the following maintenance guidelines:

- Keep the adapter in a dry environment and avoid exposure to moisture or liquids.
- Do not expose the adapter to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the adapter to strong impacts.

- Do not attempt to open, disassemble, or repair the adapter yourself. This may void any warranty and poses a safety risk.
- Clean the exterior of the adapter with a soft, dry cloth only. Do not use harsh chemicals or abrasive cleaners.

TROUBLESHOOTING

If you encounter issues with your LKPower AC adapter, please consult the following common troubleshooting steps:

- **Device not powering on or charging:**
 - Verify that the AC adapter's barrel connector is fully inserted into the DC input port of your DVD player.
 - Ensure the adapter is securely plugged into a functional wall electrical outlet. Test the outlet with another device if necessary.
 - Confirm that your DVD player's power switch is in the 'ON' position.
 - Check the adapter cable for any visible damage or kinks. If damaged, discontinue use.
- **Adapter feels warm during use:**
 - It is normal for the adapter to feel slightly warm during operation. If it becomes excessively hot to the touch, disconnect it immediately from the power source and your device. Ensure adequate ventilation around the adapter.

If these steps do not resolve the issue, please contact customer support.

SPECIFICATIONS



Image: The LKPower AC adapter showing its physical dimensions for reference.



Cable Length: 76 inch

Image: The LKPower AC adapter's label displaying electrical specifications and certifications.

Feature	Description
Brand	LKPower
Model Number	180124323
Input Voltage	AC 100-240V, 50/60Hz
Connector Type	Barrel Connector
Compatible Devices	Nexxtech N700-PD, DL730-PD DVD Players
Special Features	Over Voltage Protection, Over Heat Protection, Travel-friendly design
Mounting Type	Wall Mount
Cable Length	76 inches (approx. 193 cm)

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical assistance, please refer to the documentation included with your purchase or contact the retailer from whom you purchased this LKPower AC adapter. You may also visit the LKPower official website for support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0797RVFZW>

More documents and user manuals: <https://manuals.plus/>