



Manuals.plus /

› SuperDi /

› SuperDi Food Processor Slice/Shred Disc Blade Replacement Manual for Hamilton Beach Models 70730, 70740, 70670, 70760

SuperDi Food Processor Slice Shred Disc Blade

SuperDi Food Processor Slice/Shred Disc Blade Replacement Manual

For Hamilton Beach Models 70730, 70740, 70670, 70760

INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your SuperDi Food Processor Slice/Shred Disc Blade. This replacement blade is designed for specific Hamilton Beach food processor models, ensuring precise fit and optimal performance for your food preparation needs. Please read this manual thoroughly before installation and operation.



Image: The SuperDi Food Processor Slice/Shred Disc Blade, a stainless steel disc with various cutting surfaces.

PRODUCT FEATURES

- **Precise Fit:** Engineered as a direct replacement for Hamilton Beach food processor models 70730, 70740, 70670, and 70760, ensuring easy installation and stable operation.
- **Durable Construction:** Manufactured from high-quality stainless steel, offering excellent abrasion resistance and maintaining sharpness for efficient slicing and shredding. Resistant to rust and damage for long-term use.
- **Efficient Cutting:** Features a well-designed 6.5-inch diameter blade capable of quickly and uniformly slicing or julienning vegetables, fruits, and cheeses.
- **Easy to Clean:** The blade can be easily disassembled for thorough cleaning by hand or in a dishwasher, promoting hygiene and extending product lifespan.
- **Economical Solution:** Provides a cost-effective alternative to purchasing a new food processor when the original blade is worn or damaged.

Fit for hamilton beach food processor blade



Stainless steel



Tartness



Easy installation



Long lasting

PLEASE NOTE When using this product,
use caution or wear gloves to prevent cuts



Image: The SuperDi blade shown alongside a food processor, illustrating its key features.

COMPATIBLE MODELS

This SuperDi Food Processor Slice/Shred Disc Blade is specifically designed to be compatible with the following Hamilton Beach food processor models:



Model 70730



Model 70740



Model 70670



Model 70760

COMPATIBLE MODELS

Fits Hamilton Beach Models: 70730, 70740, 70670, 70760.



70730



70740




70670



70760

ANGLE SHOWCASE

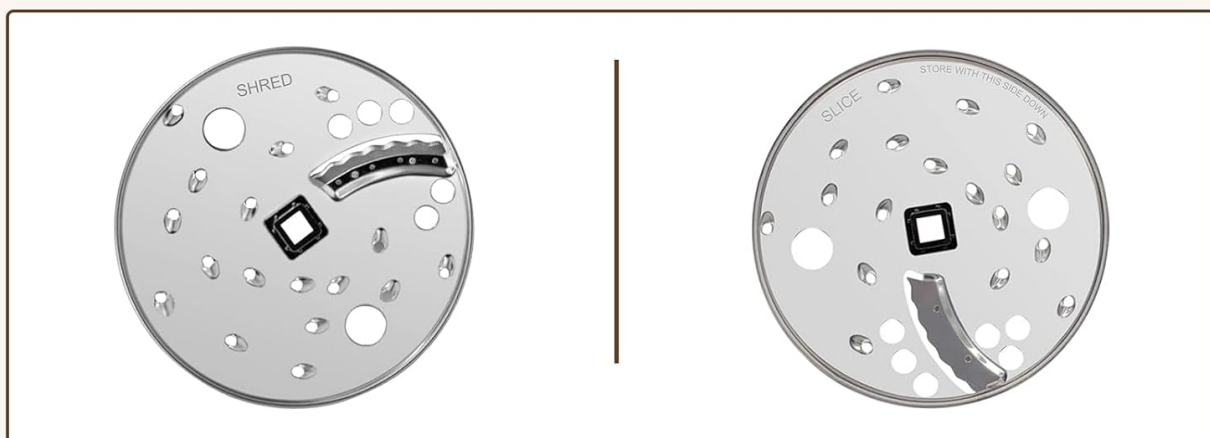

FRONT

BACK

Image: Visual representation of compatible Hamilton Beach food processor models.

SAFETY INFORMATION

Always exercise caution when handling the slice/shred disc blade. The edges are sharp and can cause injury. It is recommended to wear protective gloves during installation, removal, and cleaning to prevent cuts. Ensure the food processor is unplugged before assembling or disassembling any parts.

SETUP AND INSTALLATION

1. **Unpack:** Carefully remove the new SuperDi Slice/Shred Disc Blade from its packaging.
2. **Prepare Food Processor:** Ensure your Hamilton Beach food processor is unplugged and the processing bowl is empty and clean.
3. **Position Blade:** Place the disc blade onto the central shaft within the food processor bowl. Ensure it sits securely and flat. The central square opening on the blade should align with the food processor's drive shaft.
4. **Secure Lid:** Place the food processor lid onto the bowl and lock it into position according to your food processor's specific instructions.

SLICE SHRED DISC BLADE FOR HAMILTON

**FIT FOR BEACH FOOD PROCESSOR
70730 70670 70740 70760**



Image: Detailed view of the blade's cutting surfaces and central attachment point.

OPERATING INSTRUCTIONS

Once the blade is securely installed and the food processor is assembled, you can begin processing food.

1. **Prepare Ingredients:** Cut food items into appropriate sizes to fit through the food chute.
2. **Power On:** Plug in your food processor.
3. **Feed Food:** Turn on the food processor to the desired setting (slice or shred, if applicable to your model). Slowly feed the food items into the food chute using the food pusher. Do not use your fingers or other utensils to push food.
4. **Process:** Allow the blade to efficiently slice or shred the ingredients.
5. **Turn Off:** Once processing is complete, turn off and unplug the food processor before removing the lid and bowl.

Your browser does not support the video tag.

Video: Demonstration of the SuperDi Food Processor Shred Disc Blade in action, shredding ingredients in a Hamilton Beach food processor.

Efficient cutting

Food Processor Slice are able to evenly cut vegetables, fruits, cheese and other ingredients into thin slices or julienne.



Image: The blade actively processing food, demonstrating its efficient cutting capability.

REFERENCE EFFECT

(Can be used on a variety of fruits and vegetables)

Before



After



Image: A visual comparison of whole vegetables before processing and the uniformly sliced/shredded results after using the blade.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your SuperDi Slice/Shred Disc Blade.

1. **Disassembly:** After use, ensure the food processor is unplugged. Carefully remove the lid, then lift the disc blade from the central shaft.
2. **Washing:** The blade can be washed by hand using warm, soapy water and a brush to remove food particles. Alternatively, it is dishwasher safe for convenient cleaning.
3. **Drying:** Thoroughly dry the blade immediately after washing to prevent water spots and maintain its pristine condition.
4. **Storage:** Store the blade in a safe place where its sharp edges are protected and it is out of reach of children.

TROUBLESHOOTING

If you encounter any issues with your SuperDi Food Processor Slice/Shred Disc Blade, consider the following:

- **Blade Not Spinning:** Ensure the blade is correctly seated on the food processor's drive shaft and the lid is securely locked. Refer to your food processor's manual for proper assembly.
- **Ineffective Cutting:** Check if the blade is clean and free from obstructions. Ensure food items are cut to an appropriate size for the chute.
- **Difficulty Removing Blade:** If the blade becomes stuck, ensure the food processor is unplugged. Gently twist and lift the blade. Avoid excessive force.

For persistent issues, please contact customer support.

SPECIFICATIONS

Feature	Detail
Manufacturer	fastoworld
Item Weight	4.2 ounces
Package Dimensions	6.65 x 6.5 x 0.75 inches
Item Model Number	Food Processor Slice Shred Disc Blade
Color	Silver
Material	Stainless Steel
Item Package Quantity	1

Slice Shred Disc Blade Size

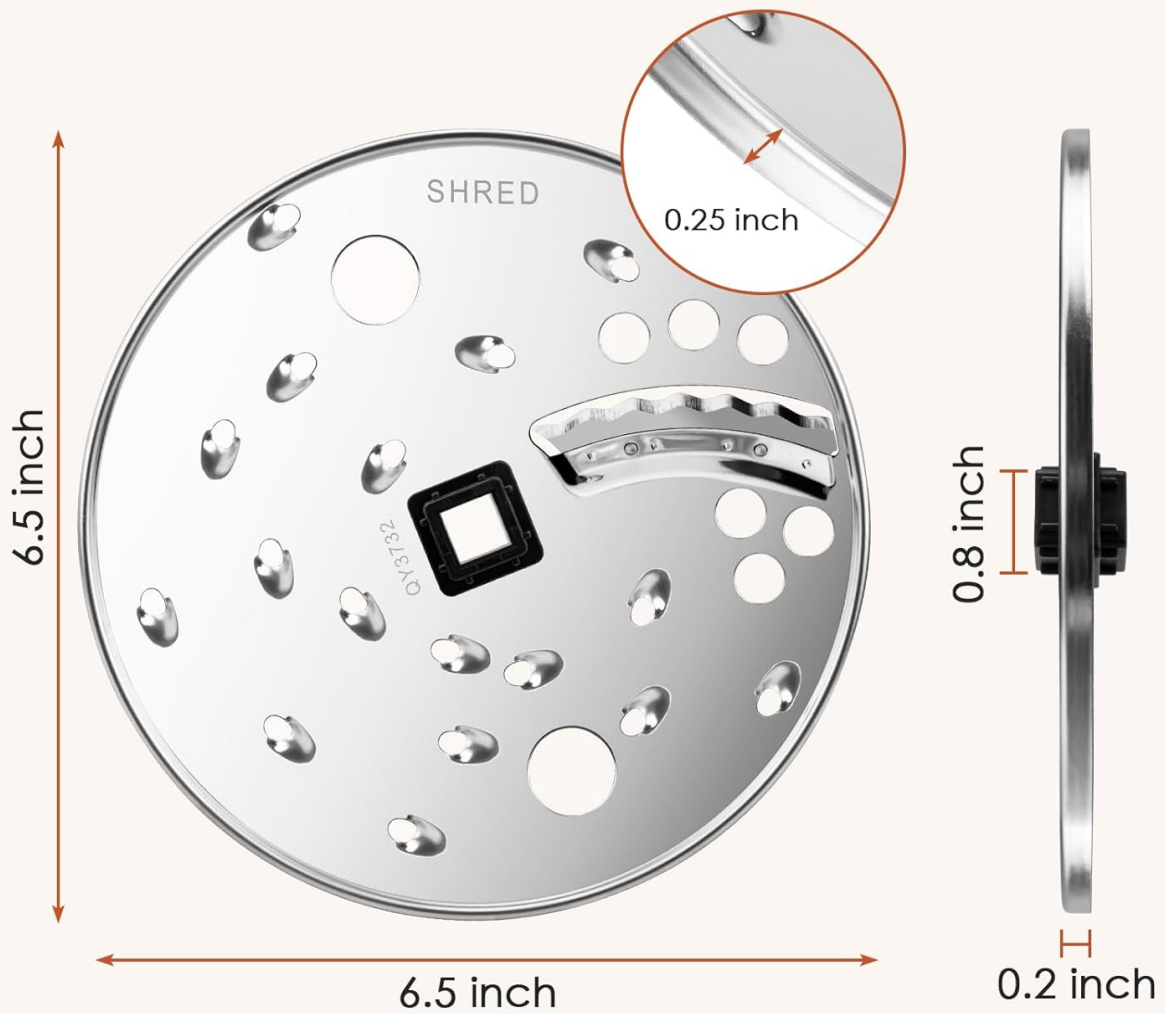


Image: Diagram illustrating the precise dimensions of the SuperDi Food Processor Slice/Shred Disc Blade.

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the SuperDi official website or contact your retailer. Keep your purchase receipt for warranty claims.