

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PASNEW](#) /

› [PASNEW Sport Watch User Manual - Model 611801566925](#)

PASNEW 611801566925

PASNEW Sport Watch User Manual - Model 611801566925

Comprehensive instructions for your PASNEW Sport Watch.

1. INTRODUCTION

Thank you for choosing the PASNEW Sport Watch, Model 611801566925. This watch is designed for durability and functionality, featuring both analog and digital displays, water resistance, and multiple timekeeping functions. This manual provides detailed instructions to help you set up and operate your watch effectively.

2. KEY FEATURES



Figure 2.1: Overview of the PASNEW Sport Watch's key features.

This image illustrates the primary functions of the watch, including LCD display, pointer display (analog), stopwatch, alarm clock, calendar

display, week display, and 100M water resistance.

- **Multi-functionality:** Includes alarm, chronograph (stopwatch), 100m water resistance, luminous (EL backlight), dual time display, and 12/24 hour format.
- **Durable Construction:** Crafted with an ABS plastic case, quality PU plastic strap, thickened hardened glass mirror, stainless steel back cover, and stainless steel buckle.
- **Dual Display:** Features both analog and digital time displays for versatile timekeeping.
- **Long-lasting Battery:** Equipped with a 3-year long-lasting lithium battery.
- **Comfortable Fit:** Designed to fit wrists from 15cm to 26cm, suitable for ages 13 and above.

3. WATCH COMPONENTS

Familiarize yourself with the main components of your PASNEW Sport Watch:



Figure 3.1: Front view of the PASNEW Sport Watch, showing the digital and analog displays, and control buttons.

This image displays the watch face, highlighting the digital time, day, and date, along with the analog hands. The buttons are labeled: "LIGHT" (top left), "MODE" (bottom left), "ST/STP" (top right), and "RESET" (bottom right).

- **Light Button (Top Left):** Activates the EL backlight for visibility in low-light conditions.
- **Mode Button (Bottom Left):** Cycles through different modes: Time, Alarm, Stopwatch, Dual Time.
- **Start/Stop Button (Top Right):** Used to start/stop the stopwatch, adjust settings, or view dual time.

- **Reset Button (Bottom Right):** Used to reset the stopwatch, confirm settings, or switch between 12/24 hour format.
- **Crown (Right Side):** Used to set the analog time. Pull out to adjust, push in to lock.
- **Digital Display:** Shows time, date, day, and other mode-specific information.
- **Analog Display:** Traditional hour, minute, and second hands.
- **Strap:** Durable PU plastic strap with a stainless steel buckle.

4. SETUP INSTRUCTIONS

4.1 Setting Analog Time

1. Pull the crown (right side of the watch) outwards.
2. Rotate the crown to adjust the hour and minute hands to the desired time.
3. Once set, push the crown back into its original position to secure the time.

4.2 Setting Digital Time and Date

1. From the normal time display, press the **MODE** button repeatedly until the seconds start flashing. This indicates you are in setting mode.
2. Press the **RESET** button to cycle through the settings: seconds, hour, minute, month, date, day of the week.
3. Use the **ST/STP** button to increase the flashing value. Hold it down for faster adjustment.
4. After setting each value, press **RESET** to move to the next setting.
5. Once all settings are complete, press the **MODE** button to exit the setting mode.
6. To switch between 12-hour and 24-hour format, press the **RESET** button while the hour is flashing in setting mode.

5. OPERATING INSTRUCTIONS

5.1 Using the Backlight (EL Light)

Press the **LIGHT** button (top left) to illuminate the digital display for a few seconds. This feature is useful in dark environments.



Figure 5.1: The watch display illuminated by the EL backlight.

This image shows the watch face with its green backlight activated, making the digital time and other information clearly visible in the dark.

5.2 Using the Alarm Function

1. From the normal time display, press the **MODE** button once to enter Alarm mode. The alarm time will be displayed.
2. Press the **RESET** button to toggle the alarm ON/OFF. An alarm icon will appear when activated.
3. To set the alarm time, press the **ST/STP** button. The hour digits will flash.
4. Use the **RESET** button to adjust the hour.
5. Press **ST/STP** again to move to the minute digits, then use **RESET** to adjust.

6. Press **ST/STP** once more to confirm and exit alarm setting.
7. Press **MODE** to return to normal time display.

5.3 Using the Stopwatch (Chronograph)

1. From the normal time display, press the **MODE** button twice to enter Stopwatch mode. The display will show "00:00:00".
2. Press the **ST/STP** button to start the stopwatch.
3. Press **ST/STP** again to pause the stopwatch.
4. To resume, press **ST/STP**.
5. To reset the stopwatch to zero, press the **RESET** button while the stopwatch is paused.
6. Press **MODE** to return to normal time display.

5.4 Dual Time Function

The dual time function allows you to keep track of a second time zone.

1. From the normal time display, press the **MODE** button three times to enter Dual Time mode.
2. To set the dual time, press the **ST/STP** button. The hour digits will flash.
3. Use the **RESET** button to adjust the hour.
4. Press **ST/STP** again to move to the minute digits, then use **RESET** to adjust.
5. Press **ST/STP** once more to confirm and exit dual time setting.
6. Press **MODE** to return to normal time display.

6. WATER RESISTANCE GUIDELINES

Your PASNEW Sport Watch is rated for 100 meters (10 ATM) water resistance. This means it is suitable for daily use, including hand washing, showering, and swimming in shallow water. It is not recommended for diving or high-pressure water activities.



Figure 6.1: The watch submerged in water, demonstrating its water resistance.

This image shows the watch fully submerged in a glass of water, illustrating its 100M water resistance capability. The text on the image indicates "90 °C hot water test is ok!", suggesting resistance to temperature variations during water exposure.

- Do not operate buttons while the watch is submerged in water.
- Avoid exposing the watch to hot water or steam for prolonged periods, as this can compromise the seals.
- After exposure to saltwater, rinse the watch with fresh water and dry thoroughly.

7. MAINTENANCE

- Clean the watch regularly with a soft, damp cloth.
- Avoid using chemical cleaners, as they may damage the watch's finish or strap.
- Store the watch in a cool, dry place when not in use.
- Avoid exposing the watch to extreme temperatures or strong magnetic fields.

8. BATTERY REPLACEMENT

The PASNEW Sport Watch uses a lithium metal battery, which is included and designed to last approximately 3 years. When the display becomes dim or functions become erratic, it may be time to replace the battery.

Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is properly maintained. Opening the watch yourself may void the warranty and compromise its water resistance.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the battery (refer to Section 8).
Analog hands are not moving or are incorrect.	Crown is pulled out; battery issue.	Push the crown in completely. If issue persists, replace battery.
Water inside the watch.	Water resistance compromised.	Stop using the watch immediately and take it to a professional for inspection and repair. Avoid operating buttons underwater.
Buttons are unresponsive.	Temporary software glitch; low battery.	Try pressing all buttons simultaneously for a few seconds to reset (if applicable, consult a professional). Check battery.

10. SPECIFICATIONS

- **Model Number:** 611801566925
- **Brand:** PASNEW
- **Case Material:** ABS Plastic
- **Strap Material:** PU Plastic
- **Mirror Material:** Thickened Hardened Glass
- **Back Cover:** Stainless Steel
- **Clasp Type:** Buckle (Stainless Steel)
- **Water Resistance:** 100M (10 ATM)
- **Battery Type:** 1 Lithium Metal battery (included)
- **Battery Life:** Approximately 3 years
- **Functions:** Time (Analog & Digital), Date, Day, Alarm, Stopwatch, Dual Time, EL Backlight, 12/24 Hour Format.
- **Wrist Fit:** 15cm - 26cm
- **Recommended Age:** 13 years and over
- **Package Dimensions:** 3.11 x 2.99 x 2.91 inches
- **Item Weight:** 4.16 ounces

11. PRODUCT VIDEOS

Watch these official product videos for visual demonstrations of the PASNEW Sport Watch.

PASNEW Watches of Physical Display

Your browser does not support the video tag.

This video provides a physical overview of the PASNEW Sport Watch, showcasing its design, strap flexibility, and how it looks on a wrist. It highlights the watch's overall appearance and fit.

PASNEW Multi-function Watch

Your browser does not support the video tag.

This video demonstrates the various functions of the PASNEW watch, including time display, and potentially other features like the stopwatch or alarm, offering a quick visual guide to its capabilities.

100M Luminous Alarm Stopwatch 12/24 Hour Calendar/Week

Your browser does not support the video tag.

This video provides a detailed demonstration of the watch's key features, including its 100M water resistance, luminous display, alarm, stopwatch, and how to switch between 12/24 hour formats, as well as calendar and week display.

12. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact PASNEW customer service through their official channels. Protection plans are available for purchase separately to extend coverage for your device.

- **2-Year Protection Plan:** Available for extended coverage.
- **3-Year Protection Plan:** Available for extended coverage.
- **Complete Protect:** A monthly plan covering eligible past and future purchases.

For further assistance, you may visit the [PASNEW Store on Amazon](#).

