



Manuals.plus /

- › Tissot /
- › Tissot Men's Chrono XL Watch User Manual

Tissot T1166171104701

Tissot Men's Chrono XL Watch User Manual

Model: T1166171104701

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Tissot Men's Chrono XL Stainless Steel Casual Watch, Model T1166171104701. Please read this manual carefully to ensure proper use and longevity of your timepiece.

PRODUCT OVERVIEW



Figure 1: Front view of the Tissot Chrono XL watch, showcasing its grey dial, chronograph subdials, and stainless steel bracelet.



Figure 2: Side view of the Tissot Chrono XL watch as worn on a wrist, highlighting its case thickness and the design of the crown and pushers.



Figure 3: Top-down view of the Tissot Chrono XL watch on a wrist, providing a clear perspective of the dial layout and bracelet fit.



Figure 4: Detailed close-up of the Tissot Chrono XL watch dial, emphasizing the chronograph subdials, hour markers, and hands.

SETUP

Setting Time and Date

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch) to position 2 for date adjustment, or position 3 for time adjustment.
2. **Adjust the date:** In position 2, turn the crown clockwise or counter-clockwise until the correct date is displayed.
3. **Adjust the time:** In position 3, turn the crown to set the hour and minute hands. Ensure to account for AM/PM if setting the date.
4. **Push in the crown:** Once set, push the crown back into position 1 to engage the movement and start the watch.

Adjusting the Bracelet

The stainless steel bracelet can be adjusted by removing or adding links to achieve a comfortable fit. This process typically requires specialized watch tools. It is recommended to have this adjustment performed by a qualified jeweler or watchmaker to prevent damage to the bracelet or watch.

OPERATING THE CHRONOGRAPH

Your Tissot Chrono XL watch features a chronograph function for measuring elapsed time. The chronograph is operated using the push-buttons located on either side of the crown.

- **Start/Stop:** Press the top push-button to start the chronograph. Press it again to stop the measurement.
- **Reset:** After stopping the chronograph, press the bottom push-button to reset all chronograph hands to their zero positions.
- **Split Time (if applicable):** Some chronograph models may offer a split-time function. Refer to the specific movement's detailed instructions if your model supports this.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch, regularly clean the case and bracelet with a soft, damp cloth. For stainless steel, a mild soap solution can be used, followed by thorough rinsing with clean water and drying with a soft cloth. Avoid using harsh chemicals or abrasive materials.

Water Resistance

This watch is water-resistant up to a pressure of 10 bar (100 meters / 330 feet). This makes it suitable for short periods of recreational swimming and showering. *It is not suitable for diving or snorkeling.* Always ensure the crown is fully pushed in before exposing the watch to water. Avoid operating the push-buttons or crown while the watch is wet or submerged.

Battery Replacement

The watch is powered by a Lithium Metal battery. When the battery life is nearing its end, the second hand may jump every few seconds (End-of-Life indicator). Battery replacement should be performed by an authorized Tissot service center or a qualified watch technician to ensure proper sealing and water resistance.

TROUBLESHOOTING

- **Watch not keeping time:**
 - Check if the crown is fully pushed in.
 - The battery may need replacement. Refer to the "Battery Replacement" section.
 - If issues persist after battery replacement, seek professional service.
- **Chronograph hands not resetting to zero:**
 - Ensure the chronograph is stopped before attempting to reset.
 - If hands are misaligned, consult an authorized service center for calibration.
- **Condensation under the crystal:**
 - This indicates a potential breach in water resistance. Immediately take the watch to an authorized service center to prevent internal damage.

SPECIFICATIONS

Feature	Detail
Model Number	T1166171104701
Case Size	45.00 mm
Bandwidth	22 mm
Case Thickness	11.02 mm
Movement	Swiss Quartz
Case Material	316L Stainless Steel
Dial Type	Index plus Arabic, Date display
Bracelet Material	Stainless Steel
Clasp Type	Folding clasp with push-buttons
Water Resistance	10 bar (100 m / 330 Feet)
Product Dimensions	7 x 5 x 7 inches
Item Weight	6.17 ounces
Battery Type	1 Lithium Metal (included)
Country of Origin	Switzerland

WARRANTY AND SUPPORT

Tissot watches typically come with an international warranty covering manufacturing defects. The duration and terms of the warranty may vary by region and point of purchase. It is recommended to retain your proof of purchase.

For warranty claims, service, or technical support, please contact an authorized Tissot service center or visit the official Tissot website for detailed information and contact options. You can find more information about Tissot products and support on their official brand store: [Tissot Official Store on Amazon](#).