

Saved from [manuals.plus](#).

Open the [live page](#) for links to other documents and user manuals.

[Manuals.plus](#) /

› [Royal Gourmet](#) /

› Royal Gourmet PC3401B Dining Cart Table Instruction Manual

Royal Gourmet PC3401B

Royal Gourmet PC3401B Dining Cart Table Instruction Manual

Model: PC3401B

INTRODUCTION

Thank you for choosing the Royal Gourmet PC3401B Dining Cart Table. This versatile cart is designed to enhance your outdoor cooking and dining experience, offering ample workspace and storage. Please read this manual carefully before assembly and use to ensure safe and efficient operation.



Image: The Royal Gourmet PC3401B Dining Cart Table, showcasing its black frame and top, with a side handle and wheels.

SAFETY INFORMATION

Please observe the following safety guidelines:

- Do not exceed the weight capacity of 77 lbs (35 kg) on the tabletop.
- Use caution when moving the cart on uneven surfaces to prevent tipping.
- Keep hands and fingers away from moving parts, especially during assembly and when operating the wheels.
- Do not allow children to play on, with, or around the cart.
- Ensure all bolts and fasteners are securely tightened before use.

PARTS LIST

Before assembly, ensure all parts are present and undamaged. Refer to the included hardware packaging for labeled components.

- Tabletop (1)
- Bottom Shelf (1)

- Legs (4)
- Side Handle (1)
- Wheels (2)
- Tool Hooks (3)
- Cylinder Hook (1)
- Cylinder Base (1)
- Assembly Hardware (bolts, nuts, washers, split pins)



Image: Detailed view of the cart's features: utensil hooks, spacious bottom shelf, ergonomic side handle, and durable wheels.

SETUP AND ASSEMBLY

Assembly typically takes about 20-30 minutes. Follow the step-by-step diagrams provided in your owner's manual. Keep bolts loose until the bottom shelf is in place, then tighten all connections.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify against the parts list.

2. **Assemble Frame:** Attach the front and side cart beams to the legs using the provided bolts. Do not fully tighten bolts at this stage.
3. **Install Bottom Shelf:** Position the bottom shelf between the legs. Ensure the holes for the LP tank hook are oriented correctly (opposite the handle side). Secure with bolts, then tighten all frame bolts.
4. **Attach Wheels:** Slide the wheel axle through the lower holes of the left leg assembly. Attach wheel washers and wheels to the axle from both ends. Secure with split pins and attach rim covers.
5. **Mount Handle:** Attach the side handle to the right leg side of the tabletop using bolts and nuts.
6. **Install Hooks:** Fasten the LP tank hook to the left cart beam and the LP tank base to the left side of the bottom shelf. Attach the utensil hooks to the front cart beam.

For a visual guide, please watch the official assembly video:

Your browser does not support the video tag.

Video: Official Royal Gourmet video demonstrating the assembly and features of the movable dining table.

OPERATING INSTRUCTIONS

The Royal Gourmet PC3401B is designed for versatile use, both indoors and outdoors.

- **Movable Design:** Utilize the side handle and two directional wheels to easily move the cart. Lift the handle side slightly to engage the wheels for smooth transport.
- **Workstation:** The spacious 33.5" x 19.7" tabletop can support up to 77 lbs, making it ideal for most BBQ griddles, pizza ovens, or as a food preparation area.
- **Storage:** Use the double shelves for storing cooking essentials, dishes, or other items. The three tool hooks are perfect for hanging brushes, spatulas, and tongs. The cylinder hook securely holds a 20-pound gas cylinder.
- **Multifunctional Use:** This cart can serve as a kitchen island, BBQ grilling table, griddle stand, pizza oven stand, food prep station, or even a potting bench.




Image: The dining cart table set up outdoors, featuring food preparation on the top surface and various items stored on the lower shelves.



Camping



Garden

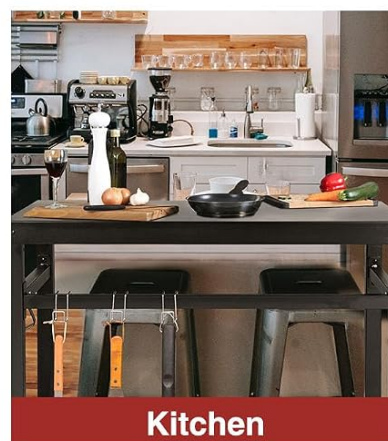

Kitchen

Image: Visual representation of the cart's versatility, illustrating its use in camping, gardening, and as a kitchen island.

MAINTENANCE

To maintain the longevity and appearance of your Royal Gourmet PC3401B Dining Cart Table:

- **Cleaning:** Wipe all surfaces with a dry cloth after each use. For stubborn stains, use a mild soap and water solution, then dry thoroughly. Avoid abrasive cleaners.
- **Storage:** When not in use, especially during harsh weather conditions, store the cart in a dry, protected area or cover it with a suitable outdoor cover to prevent rust and wear.
- **Inspection:** Periodically check all bolts and connections to ensure they remain tight. Re-tighten if necessary.

TROUBLESHOOTING

If you encounter any issues with your dining cart, consider the following:

- **Wobbly Cart:** Ensure all assembly bolts are fully tightened. Check that the cart is on a level surface.
- **Difficulty Moving:** Verify that the wheels are properly installed and free of obstructions. Ensure the cart is lifted slightly by

the handle to engage the wheels effectively.

- **Missing Parts:** If any parts are missing upon unpacking, contact Royal Gourmet customer support immediately.

SPECIFICATIONS

Product Dimensions	23.23"D x 39.57"W x 31.89"H
Tabletop Area	659 sq. in.
Maximum Weight Recommendation	77 lbs (35 kg)
Item Weight	27.1 pounds
Frame Material	Metal (Alloy Steel)
Furniture Finish	Stainless Steel, Black
Number of Shelves	2
Model Number	PC3401B
UPC	859098006780

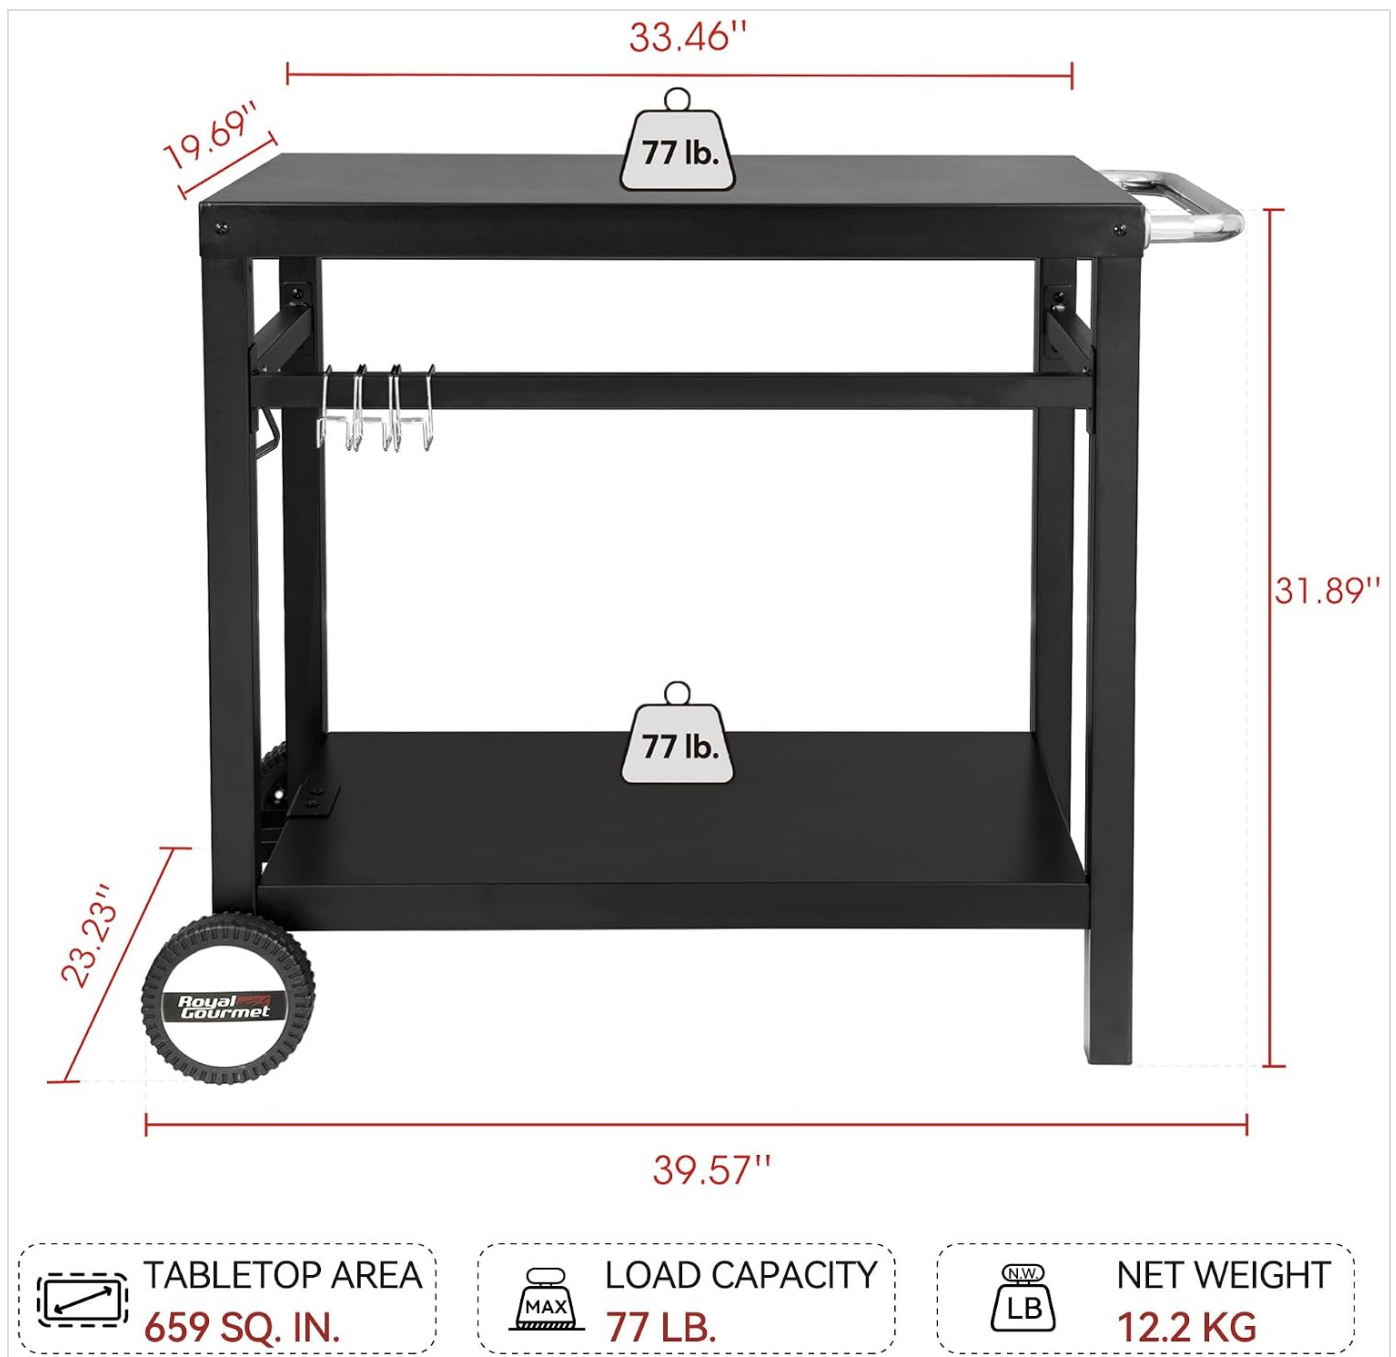


Image: A detailed diagram illustrating the key dimensions and weight capacity of the PC3401B cart.

WARRANTY AND SUPPORT

For warranty information, replacement parts, or customer support, please contact Royal Gourmet directly through their official website or the contact details provided with your purchase. Keep your proof of purchase for warranty claims.

ADDITIONAL INFORMATION

Watch the official product video for more insights into the Royal Gourmet Dining Cart Table:

Your browser does not support the video tag.

Video: An overview of the Royal Gourmet Dining Cart Table with Double-Shelf, highlighting its features and benefits.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0798NMS1G>

More documents and user manuals: **<https://manuals.plus/>**