

Mesqool MQL-CR1007

Mesqool White Noise Sound Machine User Manual

Model: MQL-CR1007

INTRODUCTION

Thank you for choosing the Mesqool White Noise Sound Machine. This device is designed to create a peaceful and relaxing environment, aiding in sleep, concentration, and masking unwanted noise. With its portable design and versatile features, it is an ideal companion for home, office, or travel. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and user satisfaction.

SAFETY INFORMATION

CAUTION: For safe and proper use, always ensure correct battery installation, keep away from children as it is not a toy, and avoid excessive volume levels to prevent hearing damage.

Please read and understand all safety instructions before using the device. Keep this manual for future reference.

PRODUCT OVERVIEW

Key Features:

- 8 Relaxing & Soothing Nature Sounds: Includes white noise, fan, midnight surf, dream shower, snow stream, summer night, storm thunder, and dream forest.
- 3 Auto-Off Timer Options: Set for 15, 30, or 60 minutes, or play continuously all night.
- Dual Power Supply: Operates via AC power adapter or 3 x 'AA' batteries (not included) for backup.
- 2 USB Charging Ports: Conveniently charge your mobile devices (USB charging works only when AC power is connected).
- 3.5mm Earphone/Headphone Jack: For private listening without disturbing others.
- Adjustable Volume: Large rotary knob for precise volume control.
- Portable and Lightweight: Ideal for travel and easy placement in any room.

Components:

The Mesqool White Noise Sound Machine features a compact design with intuitive controls.



Front view of the Mesqool White Noise Sound Machine, showing the speaker grille, sound selection buttons, timer button, and volume knob.

- **Speaker Grille:** Central output for sound.
- **Volume Knob:** Located at the top right, rotates to adjust sound level and turn the unit ON/OFF.
- **Timer Button:** On the left, cycles through 15, 30, 60 minutes, or continuous play.
- **Sound Selection Buttons:** Eight distinct buttons for selecting different nature sounds.
- **USB Charging Ports:** Located on the back for charging external devices.
- **DC Input Jack:** For connecting the AC power adapter.
- **3.5mm Headphone Jack:** For private audio output.
- **Battery Compartment:** On the bottom for 'AA' batteries.

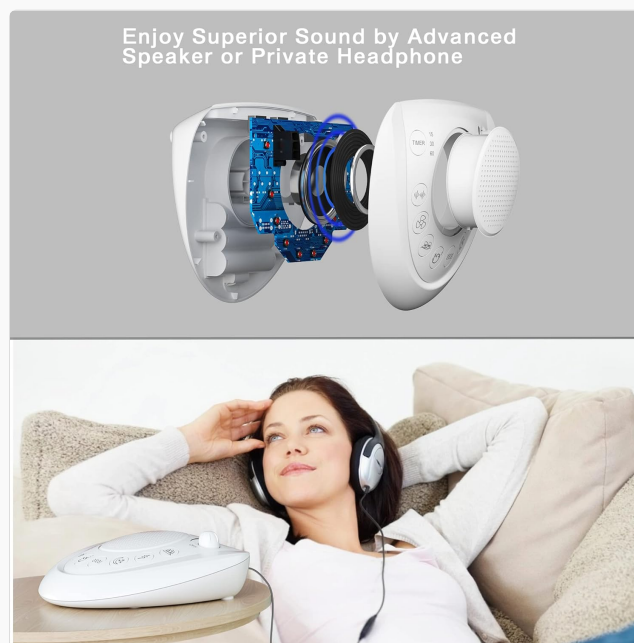


Illustration showing the internal speaker components and a user enjoying sound through headphones connected to the device.

SETUP

Your Mesqool White Noise Sound Machine can be powered by an AC adapter or batteries.

Powering the Device:

1. **AC Power:** Connect the provided AC power adapter to the DC input jack on the back of the unit, then plug the

adapter into a standard wall outlet.

2. **Battery Power (Backup):** Open the battery compartment on the bottom of the unit. Insert 3 x 'AA' batteries (not included), ensuring correct polarity (+/-). Batteries are primarily for backup and to retain settings during power outages.



Image illustrating the connection of the electric power adapter and the placement of 3 'AA' batteries in the battery compartment.

OPERATING INSTRUCTIONS

1. Turning On/Off and Volume Control:

- Rotate the large knob on the top right clockwise to turn the unit ON and increase the volume.
- Rotate the knob counter-clockwise to decrease the volume and turn the unit OFF.



A hand pressing the timer button and an arrow indicating how to rotate the dial to adjust volume quickly.

2. Sound Selection:

Press any of the eight dedicated sound buttons on the front panel to select your desired nature sound. The available

sounds include:

- White Noise (3 variations)
- Fan (3 variations)
- Ocean (3 variations)
- Bird Chirping (3 variations)
- Water Stream (3 variations)
- Summer Night (3 variations)
- Thunder & Rain (3 variations)
- Forest (3 variations)



An image illustrating the 24 non-looping natural sounds available from the device, categorized into 8 main types with 3 variations each.

3. Auto-Off Timer Function:

Press the 'TIMER' button on the left side of the unit to cycle through the auto-off timer options:

- 15 minutes
- 30 minutes
- 60 minutes
- Continuous Play (no timer)

The unit will automatically shut off after the selected time period. If no timer is set, the sound will play continuously until manually turned off.

4. USB Charging Ports:

The two USB ports on the back of the unit allow you to charge your mobile devices. Simply connect your device's USB charging cable to one of the ports. Note that USB charging functionality is only active when the sound machine is connected to AC power.



Image showing the Mesqool sound machine connected to a wall outlet, with two cellphones charging simultaneously via its USB ports.

5. Headphone Use:

For private listening, plug any standard 3.5mm earphone or headphone into the headphone jack located on the back of the unit. The sound will then be routed through your headphones, muting the main speaker.

MAINTENANCE

To ensure the longevity and optimal performance of your Mesqool White Noise Sound Machine, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** If storing the unit for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place away from direct sunlight.
- **Avoid Moisture:** Keep the unit away from water and high humidity.

TROUBLESHOOTING

If you encounter any issues with your Mesqool White Noise Sound Machine, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power/Unit does not turn on.	AC adapter not properly connected; Batteries are dead or incorrectly inserted.	Ensure AC adapter is securely plugged into the unit and wall outlet. If using batteries, replace them with fresh ones and check polarity.
No sound.	Volume is too low; Headphone jack is in use; Sound is not selected.	Increase volume using the rotary knob. Disconnect headphones if plugged in. Press a sound selection button.

Problem	Possible Cause	Solution
USB charging not working.	Unit is not connected to AC power; Charging cable is faulty.	Ensure the unit is powered by the AC adapter. Try a different USB charging cable.
Timer function not working.	Timer not set correctly.	Press the 'TIMER' button repeatedly until the desired time (15, 30, or 60 minutes) is selected.

If the problem persists after trying these solutions, please contact Mesqool customer support for further assistance.

SPECIFICATIONS

Model Number	MQL-CR1007
Product Dimensions	15.75 x 12.45 x 4.32 cm (6.2 x 4.9 x 1.7 inches)
Weight	320 g (0.7 lbs)
Power Source	AC Adapter (included), 3 x 'AA' Batteries (not included)
USB Output	5V 1A
Number of Sounds	8 main sound categories (24 non-looping variations)
Timer Options	15, 30, 60 minutes, Continuous Play
Material	Plastic
Color	White


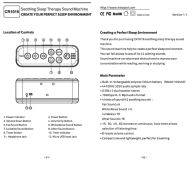 

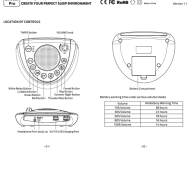 

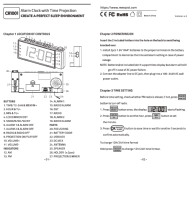 

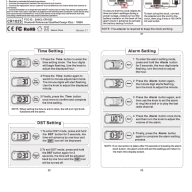 

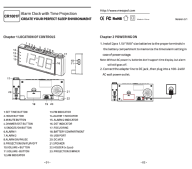 
WARRANTY AND SUPPORT

 
Mesqool provides the following warranty for your White Noise Sound Machine:

- 3-month refund
- 12-month replacement
- 18-month extended warranty

For warranty claims, technical support, or any inquiries, please contact Mesqool customer service through the retailer's platform or the official Mesqool website. Please have your model number (MQL-CR1007) and purchase information ready when contacting support.



 	<p>Mesqool CR1016 Soothing Sleep Therapy Sound Machine User Manual</p> <p>Comprehensive user manual for the Mesqool CR1016 Soothing Sleep Therapy Sound Machine. Discover how to use its 42 calming sounds, auto-timer, and volume controls to create your ideal sleep environment. Includes detailed instructions, sound lists, and operation guidance.</p>
 	<p>Mesqool CR1007 Pro Soothing Sleep Therapy Sound Machine User Manual</p> <p>Official user manual for the Mesqool CR1007 Pro Soothing Sleep Therapy Sound Machine. Learn about its features, setup, operation, battery life, and warranty.</p>
 	<p>Mesqool CR1001 Alarm Clock with Time Projection User Manual</p> <p>User manual for the Mesqool CR1001 Alarm Clock with Time Projection, detailing its features, controls, and operation for creating a perfect sleep environment.</p>
 	<p>Mesqool CR1025 Digital Alarm Clock Radio with Bluetooth and FM</p> <p>User manual for the Mesqool CR1025 digital alarm clock radio. Features include Bluetooth 5.0 speaker, FM radio, night light, USB/Type-C charging, adjustable dimmer, snooze function, and battery backup. Learn how to set alarms, use Bluetooth, tune FM radio, and adjust settings.</p>
 	<p>Mesqool CR1001F Alarm Clock with Time Projection User Manual</p> <p>Detailed user manual for the Mesqool CR1001F alarm clock with time projection. Learn how to set time, alarms, use projection features, adjust brightness, and utilize the USB charging port.</p>

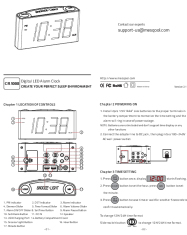 The thumbnail shows the front cover of the user manual. At the top left is a small image of the digital clock device. Below it, the title 'Mesqool CR1008 Digital LED Alarm Clock User Manual' is printed. The cover also features several diagrams: a large one showing the clock's interface with various icons (alarm, snooze, etc.) and a smaller one showing the internal battery compartment. Text on the cover includes 'Mesqool CR1008 Digital LED Alarm Clock User Manual', 'Mesqool CR1008 Digital LED Alarm Clock', and 'Mesqool CR1008 Digital LED Alarm Clock User Manual'.	<p>Mesqool CR1008 Digital LED Alarm Clock User Manual</p> <p>Comprehensive user manual for the Mesqool CR1008 Digital LED Alarm Clock, covering setup, features, operation, and warranty information.</p>
--	---