

Kienzle Digi Solar II

Kienzle Digi Solar II Digital Alarm Clock User Manual

Model: Digi Solar II

INTRODUCTION

Thank you for choosing the Kienzle Digi Solar II Digital Alarm Clock. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read these instructions carefully before use and retain them for future reference.



This image displays the Kienzle Digi Solar II Digital Alarm Clock, highlighting its rectangular shape and digital display. The display typically shows the current time, date, and temperature.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the alarm clock.
2. Open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment. **Batteries are not included.**
4. Close the battery compartment cover securely.

2. Solar Power Function

The Kienzle Digi Solar II features a solar panel designed to extend battery life by up to 5 years under optimal light conditions. For best results, place the alarm clock in an area that receives adequate ambient light. The solar function works in conjunction with the AAA batteries to power the device efficiently.

OPERATING INSTRUCTIONS

Setting the Time

Refer to the buttons on the back or side of the clock. Typically, there will be a 'SET' or 'MODE' button. Press this button repeatedly until the time setting mode is activated. Use the '+' or '-' buttons to adjust the hours and minutes.

Press 'SET' or 'MODE' again to confirm and move to the next setting.

Setting the Alarm

Press the 'ALARM' or 'MODE' button until the alarm time is displayed. Use the '+' or '-' buttons to set the desired alarm time. Confirm with 'ALARM' or 'MODE'. Ensure the alarm function is activated (usually indicated by an alarm icon on the display).

Snooze Function

When the alarm sounds, press the 'SNOOZE' button (often a large button on top of the clock). The alarm will pause for approximately 3 minutes and then sound again. This function can typically be repeated.

Calendar and Temperature Display

The clock automatically displays the current date and temperature. No manual setting is usually required for these features once the time is set. The temperature is measured by an internal sensor.

MAINTENANCE

Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the display or casing.

Battery Replacement

When the display dims or the clock functions become erratic, it is time to replace the AAA batteries. Follow the battery installation steps outlined in the 'Setup' section. Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

- **Clock not turning on:** Ensure batteries are inserted correctly with proper polarity and are not depleted.
- **Display is dim:** Replace the AAA batteries. Ensure the solar panel is exposed to sufficient light.
- **Alarm not sounding:** Verify that the alarm time is set and the alarm function is activated (check for the alarm icon on the display).
- **Incorrect time/date:** Re-set the time and date following the operating instructions.

SPECIFICATIONS

Brand	Kienzle
Model	Digi Solar II
Dimensions	20 x 11 x 05 cm
Shape	Rectangular
Power Source	Solar powered, Electric
Battery Type	2 x AAA (not included)
Features	Digital Display, Musical Alarm, Snooze Function (3/3 minutes), Calendar, Temperature Display

ASIN	B0798PHRYX
------	------------

WARRANTY AND SUPPORT

Specific warranty information for the Kienzle Digi Solar II Digital Alarm Clock is not provided in this manual. For warranty details or technical support, please refer to the product packaging or contact Kienzle customer service directly through their official website or contact channels.