

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Citizen](#) /

› [Citizen Eco-Drive Corso Classic Watch \(Model: BU2070-12L\) Instruction Manual](#)

Citizen BU2070-12L

Citizen Eco-Drive Corso Classic Watch (Model: BU2070-12L) Instruction Manual

Essential information for the proper use and care of your timepiece.

1. INTRODUCTION

The Citizen Eco-Drive Corso Classic Watch (Model: BU2070-12L) is a timepiece designed for reliability and functionality. This watch features Citizen's Eco-Drive technology, which powers the watch using any light source, eliminating the need for regular battery replacement. It includes a stainless steel case, a brown leather strap, a blue dial, and displays for day, date, and 12/24-hour time.



Front view of the Citizen Eco-Drive Corso Classic Watch, Model BU2070-12L, showcasing its blue dial and brown leather strap.

2. SETUP

2.1 Initial Charging

Upon receiving your watch, ensure it is fully charged by exposing the dial to a bright light source (natural or artificial) for several hours. The Eco-Drive movement stores energy in a power cell, allowing the watch to operate for extended periods in darkness once fully charged.

Your browser does not support the video tag.

Video explaining the Citizen Eco-Drive technology and its environmental benefits.

2.2 Setting the Time and Date

To set the time and date on your watch, follow these steps:

1. Pull the crown out to the **second click position**.
2. Rotate the crown to set the hour and minute hands to the correct time.
3. Push the crown back to the **first click position**.
4. Rotate the crown to set the day and date.
5. Push the crown back to the **normal position** to start the watch.

Note: Avoid setting the date between 9:00 PM and 1:00 AM, as this may interfere with the automatic date change mechanism.



Side view of the watch, highlighting the crown used for setting time and date.

3. OPERATING

3.1 Timekeeping

The watch displays time using hour, minute, and second hands. It also features a 12/24-hour sub-dial for military time or a second time zone reference.

3.2 Day and Date Display

Separate sub-dials on the watch face indicate the current day of the week and the date.

3.3 Power Reserve

The Eco-Drive movement ensures continuous operation as long as the watch is exposed to light. Once fully charged, the watch can operate for several months in complete darkness. If the watch's power reserve becomes low, the second hand may begin moving in two-second intervals as a warning. Expose the watch to light to resume normal operation.

Your browser does not support the video tag.

Video demonstrating how Citizen Eco-Drive technology converts light into energy to power the watch.

4. MAINTENANCE

4.1 Cleaning

Regularly wipe the watch case and sapphire crystal with a soft, dry cloth to remove dust and smudges. For the brown leather strap, use a slightly damp cloth and mild soap if necessary, then dry thoroughly. Avoid harsh chemicals or abrasive materials that could damage the watch or strap.

4.2 Water Resistance

This watch is water resistant to **100 meters (333 feet)**. It is suitable for swimming and snorkeling but not for scuba diving. Always ensure the crown is pushed in completely before any water exposure. Do not operate the crown or pushers while the watch is wet or submerged.

4.3 Light Exposure and Storage

To maintain optimal performance and ensure continuous operation, expose the watch to light regularly. When not in use, store the watch in a location where it can receive ambient light, or in a well-lit area, to prevent the power cell from depleting.



Back view of the watch, displaying the stainless steel case back with Citizen Eco-Drive engraving.

5. TROUBLESHOOTING

- **Watch Not Running:** If the watch stops or the second hand moves erratically (e.g., in two-second intervals), it indicates insufficient charge. Expose the watch to bright light for several hours to recharge the power cell.
- **Incorrect Time/Date:** Follow the "Setting the Time and Date" instructions in Section 2.2 to correct

any discrepancies.

- **Condensation Under Crystal:** If condensation appears under the crystal, contact Citizen customer service immediately. This may indicate a breach in water resistance that requires professional inspection and repair.

6. SPECIFICATIONS

Feature	Detail
Model Number	BU2070-12L
Movement	Eco-Drive Quartz (Caliber 8729)
Case Material	Silver-Tone Stainless Steel
Strap Material	Brown Croc Embossed Leather (Calfskin)
Dial Color	Blue
Crystal	Sapphire
Water Resistance	100 Meters (333 feet)
Functions	12/24 Hour Time, Analog Day/Date, Luminous Hands
Power Source	Eco-Drive (light-powered rechargeable power cell)

Your browser does not support the video tag.

Short product showcase of the Citizen Eco-Drive Corso Classic Watch.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Your Citizen Eco-Drive Corso Classic Watch is covered by a **5-Year Limited Warranty**. This warranty covers manufacturing defects under normal use. Please refer to the warranty card included with your purchase for complete details, terms, and conditions.

7.2 Customer Support

For further assistance, service inquiries, or warranty claims, please visit the official Citizen website or contact their customer service department. Ensure you have your model number (BU2070-12L) and proof of purchase available when seeking support.



BU2013-08E
MEN'S CLASSIC

Citizen Eco-Drive: Powered by Light.

© 2023 Citizen Watch Company. All rights reserved.