

[Manuals.plus](#) /

› [Wahl](#) /

› Wahl Clipper Rechargeable Cord/Cordless Haircutting & Trimming Kit - Model 79434 User Manual

Wahl 79434

Wahl Clipper Rechargeable Cord/Cordless Haircutting & Trimming Kit

Model: 79434

Brand: Wahl

1. PRODUCT OVERVIEW

The Wahl Clipper Rechargeable Cord/Cordless Haircutting & Trimming Kit (Model 79434) is a versatile 21-piece set designed for comprehensive grooming. It features a powerful motor, self-sharpening precision blades, and offers both corded and cordless operation for convenience.



Figure 1: Complete 21-piece home haircutting kit, including the clipper, various attachment guards, scissors, comb, blade guard, hard case, oil, and cleaning brushes.

2. SETUP AND CHARGING

2.1 Unpacking the Kit

Carefully remove all components from the packaging. The kit includes:

- Wahl Rechargeable Clipper
- 12 Attachment Guards (ranging from 1/16" to 1")
- Scissors
- Styling Comb
- Blade Guard
- Hard Storage Case
- Hair Clipper Oil
- Cleaning Cloth

- 2 Cleaning Brushes



Figure 2: All components of the Wahl home haircutting kit laid out, emphasizing the comprehensive nature of the set.

2.2 Initial Charging

Before first use, fully charge the clipper. The rechargeable battery provides up to 60 minutes of cordless run time on a full charge. The clipper can also be used while plugged in.

POWERFUL, LONG-LASTING RECHARGEABLE BATTERY



Figure 3: The clipper highlighting its powerful, long-lasting rechargeable battery and 60-minute run time.

2.3 Worldwide Voltage Compatibility

This clipper features worldwide voltage compatibility (100-240V), making it suitable for international travel. Ensure you use the appropriate adapter for your region if necessary.



**CORDLESS
CONVENIENCE
USE ANYTIME, ANYWHERE**

**USE WITH
OR WITHOUT
A CORD**



**The Brand Used
By Professionals®**

Figure 4: Close-up of the clipper indicating its worldwide voltage compatibility (100-240V) and corded/cordless use options.

3. OPERATING INSTRUCTIONS

3.1 Attaching and Detaching Guide Combs

The kit includes 12 attachment guards, also known as guide combs, to achieve various hair lengths. These range from 1/16" (half guide comb) up to 1" (number 8 guide comb). Each measurement represents the cut length of the hair.

ATTACHMENT GUARDS FOR GOOF-PROOF HAIRCUTS



1/16"- 1" GUARDS PLUS LEFT & RIGHT EAR TAPERS

The Brand Used
By Professionals®

Figure 5: A selection of attachment guards, illustrating the range of lengths available for precise haircutting.

To attach a guide comb:

1. Align the blade teeth of the clipper with the front of the guide comb.
2. Gently push the guide comb onto the clipper until you hear an audible click. This indicates a secure fit, ensuring mistake-proof cutting.

To detach a guide comb:

1. Place your thumb at the back of the guide comb.
2. Push the back off first, and the guide comb will roll right off.

3.2 Specialty Guide Combs

The kit also includes specialized guide combs for specific grooming needs:

- **Left and Right Ear Taper Combs:** These combs are designed to smoothly blend hair around the ears. They are tapered, with a short side and a long side, to create a natural transition from longer to shorter hair.

- **Eyebrow Comb:** This comb protects the cutting on both sides, allowing you to trim only a small amount of length from your eyebrows for a neat and clean appearance.



Figure 6: Key features of the Wahl Clipper, including cord/cordless use, powerful motor, removable blades, and goof-proof guards.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Wahl clipper.

4.1 Cleaning the Blades

The clipper features removable stainless-steel precision blades for easy cleaning. After each use, remove the blades and use the included cleaning brushes to remove any trapped hair. The cleaning cloth can be used to wipe down the clipper body.

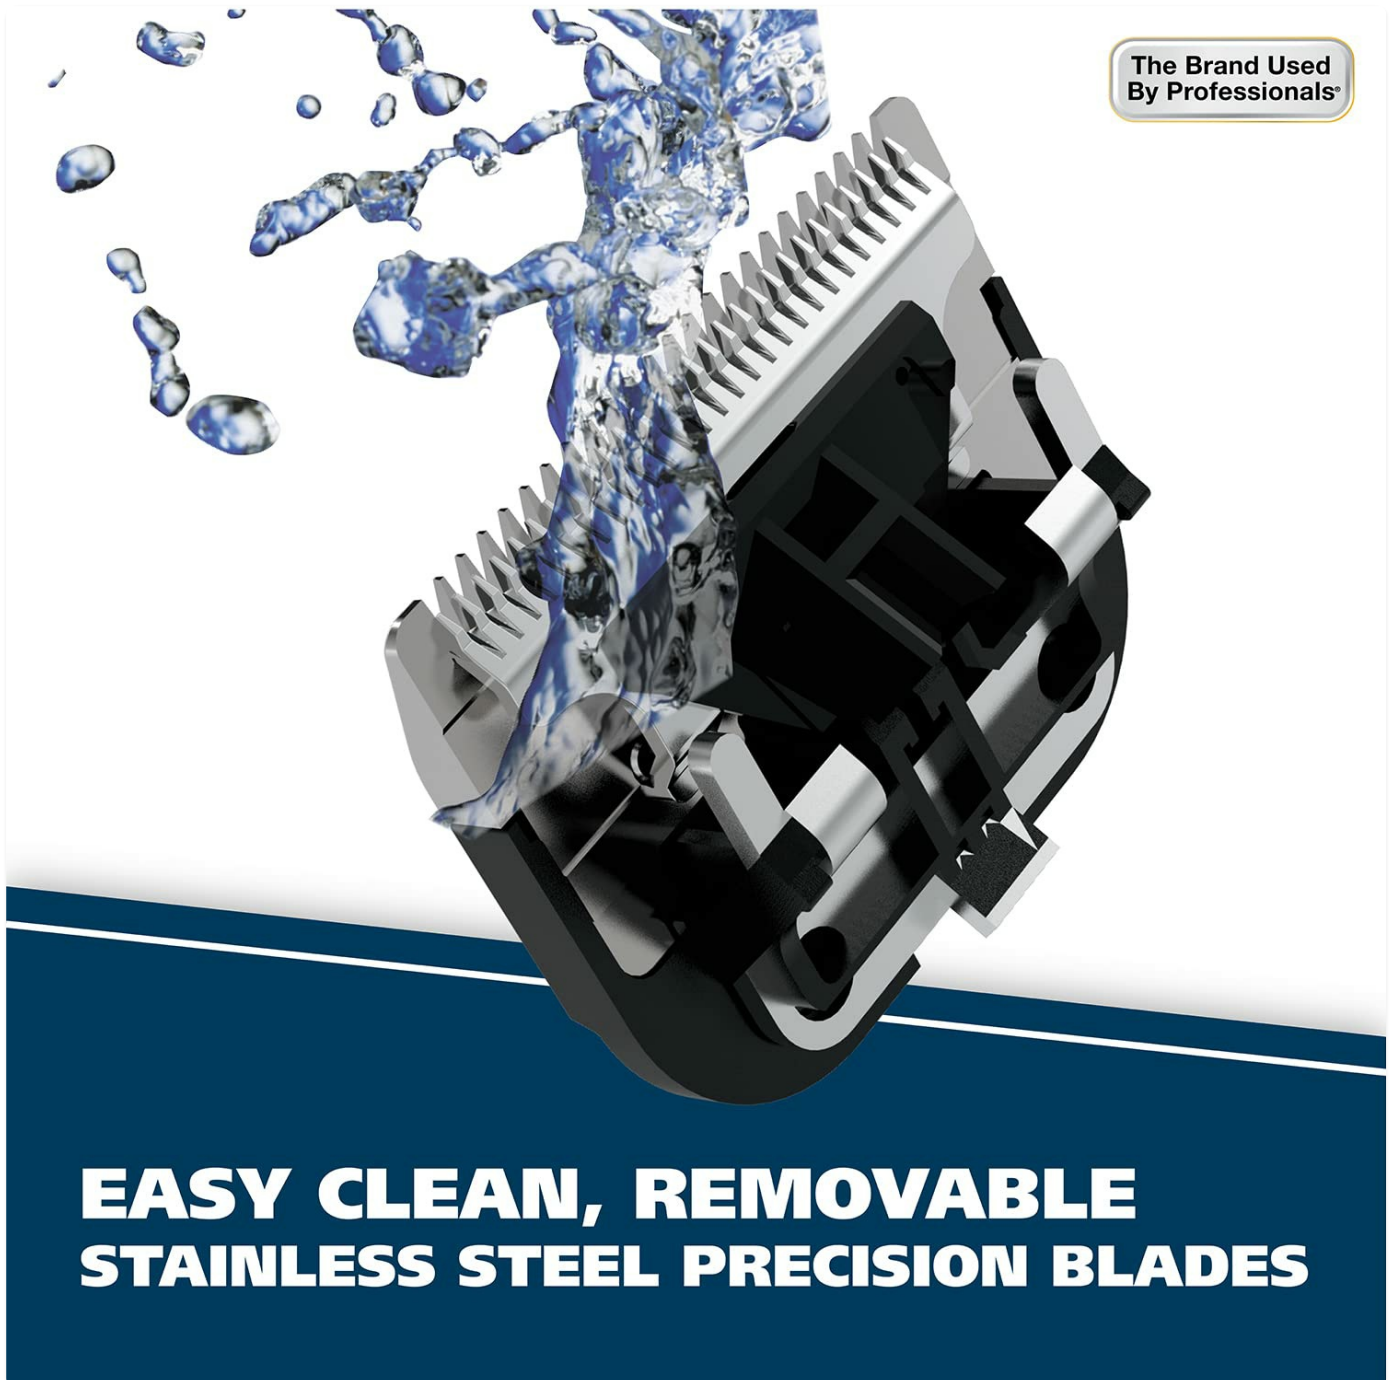


Figure 7: Illustration of the easy-to-clean, removable stainless steel precision blades, showing water for cleaning.

4.2 Oiling the Blades

Regular oiling of the blades is essential for smooth operation and to prevent rust. Apply a few drops of the included hair clipper oil to the blades before and after each use, especially after cleaning. Run the clipper for a few seconds to distribute the oil.

4.3 Safety Information

The clipper is **not waterproof**. Do not submerge it in water. When cleaning the blades with water, ensure they are completely dried before re-attaching them to the clipper body.

5. TROUBLESHOOTING

If you encounter any issues with your Wahl Clipper, please refer to the detailed troubleshooting section in the full user manual provided with your product. For further assistance, contact Wahl customer support.

6. SPECIFICATIONS

Feature	Detail
Model Number	79434
Brand	Wahl
Product Dimensions	7.72 x 11.22 x 3.35 inches
Item Weight	1.81 Pounds (0.82 Kilograms)
UPC	043917104492
GTIN	043917104492
Color	Stainless/Black
Hair Type	All
Recommended Uses	Head, Longer Beards, All Body Grooming

7. WARRANTY AND SUPPORT

7.1 Warranty Information

The Wahl Clipper Rechargeable Cord/Cordless Haircutting & Trimming Kit comes with a**Limited 5-Year Warranty**. Please retain your proof of purchase for warranty claims. Additionally, a **30-Day Money Back Guarantee** is offered.

WARRANTY INFO



Figure 8: Visual representation of the 5-year limited warranty and 30-day money-back guarantee.

7.2 Customer Support

For any questions, concerns, or support needs, please refer to the contact information provided in your product packaging or visit the official Wahl website. Wahl clippers and trimmers have been trusted by professionals since 1919, ensuring quality and reliability.

© 2025 Wahl Clipper Corp. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question