

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER TO3000G 6-Slice Convection Countertop Toaster Oven Instruction Manual

## BLACK+DECKER TO3000G

# BLACK+DECKER TO3000G Convection Countertop Toaster Oven Instruction Manual

Model: TO3000G

## PRODUCT OVERVIEW

The BLACK+DECKER TO3000G Convection Countertop Toaster Oven is designed for versatile cooking, offering faster performance than previous models. It features a spacious interior capable of accommodating a 12-inch pizza or six slices of bread. This appliance provides multiple cooking functions including toasting, baking, and broiling, along with a light-to-dark toast timer for precise results.



This image displays the BLACK+DECKER TO3000G Convection Countertop Toaster Oven. It is a silver appliance with a clear glass door, allowing visibility into the cooking chamber. On the right side, there are three control knobs for temperature, function, and timer

settings. The interior features two rack positions and a removable crumb tray.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- In the event of a food flare-up, keep the door closed and unplug the power cord.

## PRODUCT FEATURES

1. Temperature Control Knob: Adjusts temperature from Warm to 450°F.
2. Function Control Knob: Selects cooking mode (Toast, Broil, Bake, Warm).
3. Timer Control Knob: Sets cooking time up to 60 minutes or "Stay On" for continuous operation. Includes a toast shade setting.
4. Power Indicator Light: Illuminates when the oven is on.
5. Glass Door: Provides visibility of food during cooking.
6. Removable Rack: Adjustable to two positions for various cooking needs.
7. Baking Pan/Broiling Rack: Included accessories for baking and broiling.
8. Crumb Tray: Collects crumbs for easy cleaning.

The control panel on the right side of the oven features three distinct knobs. The top knob controls temperature, ranging from "Warm" to "450°F". The middle knob selects the cooking function, including "Toast", "Broil", "Bake", and "Warm". The bottom knob is the timer, which can be set for up to 60 minutes or to a "Stay On" position for continuous operation. This knob also includes settings for toast shade.

## SETUP

## Before First Use

- Remove all packing material, stickers, and plastic bands from the product.
- Wash all removable parts (baking pan, wire rack, crumb tray) in warm, soapy water. Rinse and dry thoroughly.
- Wipe the interior and exterior of the oven with a damp cloth. Dry thoroughly.
- Place the toaster oven on a flat, stable, heat-resistant surface, ensuring at least 4 inches of space on all sides for proper ventilation.
- Plug the power cord into a standard electrical outlet.

## OPERATING INSTRUCTIONS

### General Operation

- Place food on the wire rack or in the baking pan as appropriate.
- Close the oven door.
- Turn the Function Control Knob to the desired cooking function (Bake, Broil, Toast, Warm).
- Turn the Temperature Control Knob to the desired temperature.
- Turn the Timer Control Knob to the desired cooking time. The power indicator light will illuminate.
- When cooking is complete, the timer will chime, and the oven will turn off.

### Toasting

- Place bread or other items directly on the wire rack.
- Turn the Function Control Knob to "Toast".
- Turn the Temperature Control Knob to "Toast" (usually a specific setting or maximum temperature).
- Turn the Timer Control Knob past the "20" minute mark, then back to the desired toast shade setting.
- The oven will begin toasting.

### Baking

- Place food in the baking pan or an oven-safe dish on the wire rack.
- Turn the Function Control Knob to "Bake".
- Turn the Temperature Control Knob to the desired baking temperature (e.g., 350°F).
- Turn the Timer Control Knob to the desired baking time.

### Broiling

- Place food on the broiling rack within the baking pan.
- Turn the Function Control Knob to "Broil".
- Turn the Temperature Control Knob to "Broil" (usually a specific setting or maximum temperature).
- Turn the Timer Control Knob to the desired broiling time. Monitor food closely as broiling is a fast cooking method.

### Keep Warm

- Place cooked food on the wire rack or in a dish.
- Turn the Function Control Knob to "Warm".
- Turn the Temperature Control Knob to "Warm".
- Turn the Timer Control Knob to "Stay On" or the desired warm time.

## MAINTENANCE AND CLEANING

### Cleaning

- Always unplug the oven and allow it to cool completely before cleaning.
- Remove the crumb tray, wire rack, and baking pan. Wash them in warm, soapy water. Rinse and dry thoroughly.
- Wipe the interior walls with a damp cloth and mild liquid soap. Do not use abrasive cleaners or scouring pads.
- Clean the exterior surface with a damp cloth. Dry thoroughly.
- The glass door can be cleaned with a damp cloth and a non-abrasive cleaner.
- Ensure all parts are completely dry before reassembling and storing the appliance.

### Storage

- Ensure the appliance is cool and dry before storing.
- Store the toaster oven in a clean, dry place.
- Do not wrap the cord tightly around the appliance; coil it loosely to prevent damage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure plug is securely in outlet; check circuit breaker; set timer to desired setting.
Food not cooking evenly.	Incorrect rack position; uneven food placement.	Adjust rack position for optimal heat distribution; arrange food in a single layer.
Excessive smoke during cooking.	Food residue on heating elements or interior; high-fat food.	Clean interior and crumb tray thoroughly; use a baking pan to catch drips for high-fat foods.
Toast is too light/dark.	Toast shade setting incorrect.	Adjust the toast shade setting on the timer knob.

## SPECIFICATIONS

- Brand: BLACK+DECKER
- Model Name: TO3000G (also SPETO3230SBD)
- Color: Silver/Black
- Special Feature: Timer, Convection
- Control Type: Knob
- Door Style: Dropdown Door
- Included Components: Grill (Baking Pan/Broiling Rack)

- Door Material Type: Stainless Steel
- Power Source: AC adapter
- Product Dimensions: 20.45 x 13.8 x 15.3 inches
- Item Weight: 14.2 pounds

## **WARRANTY AND SUPPORT**

For warranty information and customer support, please refer to the contact details provided with your product packaging or visit the official BLACK+DECKER website. Keep your purchase receipt for warranty claims.