

[Manuals.plus](#) /

› [Mobile Spec](#) /

› MobileSpec MBS11181 Stereo Bluetooth Wireless Headphones User Manual

Mobile Spec MBS11181

MobileSpec MBS11181 Stereo Bluetooth Wireless Headphones User Manual

INTRODUCTION

This manual provides detailed instructions for the MobileSpec MBS11181 Stereo Bluetooth Wireless Headphones. These ergonomic headphones feature retractable earbuds and are designed to fit comfortably around your neck. They include a built-in microphone and multiple function buttons for seamless control of music and hands-free calls. Bluetooth technology ensures quick and easy pairing with compatible devices. The headphones are rechargeable and come with a detachable charging cable and extra ear tips.

Key Features

- Adjustable neckband style with retractable earbuds
- Bluetooth technology for wireless connectivity
- Integrated microphone for hands-free calls
- Multi-function buttons on the neckpiece for control
- Rechargeable battery with included detachable charging cable
- In-ear fit type

WHAT'S IN THE BOX

Verify that all items are present in the package:

- MobileSpec MBS11181 Stereo Bluetooth Wireless Headphones
- USB Charging Cable
- User Manual (this document)
- Extra Ear Tips (various sizes)



Image: The included USB charging cable and a selection of black silicone ear tips in various sizes.

PRODUCT OVERVIEW

Familiarize yourself with the components of your MobileSpec MBS11181 headphones.



Image: Front view of the MobileSpec MBS11181 headphones, displaying the flexible neckband and the black retractable earbuds.



Image: Side view of the headphones, showing the control panel on the left side of the neckband. This panel typically includes volume controls, a multi-function button, and a charging port.

SETUP

1. Charging the Headphones

1. Connect the small end of the included USB charging cable to the charging port on the headphone neckband.
2. Connect the larger end of the USB cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. The LED indicator light will illuminate to show charging status. Refer to the LED indicator section for specific light patterns.
4. Once fully charged, the LED indicator will change or turn off. Disconnect the charging cable.

2. Pairing with a Bluetooth Device

1. Ensure the headphones are turned off.
2. Press and hold the Multi-function button (often the power button) for approximately 5-7 seconds until the LED indicator light flashes red and blue alternately, indicating pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, etc.), go to the Bluetooth settings and ensure Bluetooth is enabled.
4. Scan for available devices. You should see "MBS11181" or a similar name appear in the list.
5. Select "MBS11181" to connect.
6. Once successfully paired, the LED indicator on the headphones will typically flash blue slowly or turn solid blue. A voice prompt may also confirm the connection.
7. If prompted for a password, enter "0000".

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the Multi-function button for approximately 3 seconds until the LED indicator flashes

blue and a voice prompt confirms "Power On".

- **Power Off:** Press and hold the Multi-function button for approximately 3-4 seconds until the LED indicator flashes red and a voice prompt confirms "Power Off".

Music Playback

- **Play/Pause:** Press the Multi-function button once.
- **Volume Up:** Press the "+" button.
- **Volume Down:** Press the "-" button.
- **Next Track:** Press and hold the "+" button.
- **Previous Track:** Press and hold the "-" button.

Call Management

- **Answer/End Call:** Press the Multi-function button once.
- **Reject Call:** Press and hold the Multi-function button for approximately 2 seconds.
- **Redial Last Number:** Double-press the Multi-function button.

Retracting Earbuds

- Gently pull the earbud cable to extend it.
- To retract, press the dedicated retraction button (if available) or gently pull the cable slightly further and release to allow it to retract automatically. Avoid forcing the retraction mechanism.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the headphones. Do not use abrasive cleaners or solvents. For ear tips, remove them and clean with mild soap and water, then dry thoroughly before reattaching.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the headphones regularly, even if not in use for extended periods.
- **Cable Care:** When retracting earbuds, ensure the cable is not twisted or snagged to prevent damage to the retraction mechanism.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Battery is depleted.	Charge the headphones fully using the provided USB cable.
Cannot pair with a Bluetooth device.	Headphones not in pairing mode; Bluetooth off on device; device too far.	Ensure headphones are in pairing mode (flashing red/blue). Turn on Bluetooth on your device. Move device closer to headphones (within 10 meters).
No sound or poor sound quality (static).	Volume too low; headphones not properly paired; interference; damaged earbud cable.	Increase volume on both headphones and connected device. Re-pair the headphones. Move away from other wireless devices. Ensure earbud cables are not over-extended or damaged.

Problem	Possible Cause	Solution
Headphones not charging.	Faulty cable; power source issue; charging port damage.	Try a different USB cable or power source. Ensure the charging port is clean and undamaged.
Low battery warning is frequent.	Battery is critically low.	Charge the headphones immediately. The frequent warning is an indication to connect to power.

SPECIFICATIONS

Feature	Specification
Model Number	MBS11181
Brand	Mobile Spec
Connectivity Technology	Bluetooth
Bluetooth Version	5.0
Ear Placement	In Ear
Form Factor	In Ear
Control Type	Media Control
Control Method	Touch (referring to button presses)
Frequency Range	20 Hz - 20,000 Hz
Headphone Jack	USB (for charging)
Item Weight	27.22 g
Compatible Devices	Smartphones, Tablets, Laptops, Desktops, Bluetooth-enabled Devices
Additional Features	Microphone Included, Wireless

WARRANTY AND SUPPORT

The MobileSpec MBS11181 Stereo Bluetooth Wireless Headphones come with a **1 Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical support, or further inquiries, please visit the official Mobile Spec store or contact their customer service department.

You can find more information and support resources by visiting the [Mobile Spec Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question