Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- SILEX /
- > Silex 2439 Stainless Steel Grill and Cooking Plate 2000W User Manual

SILEX 2439

Silex 2439 Stainless Steel Grill and Cooking Plate 2000W User Manual

Model: 2439 | Brand: Silex

1. Introduction

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Silex 2439 Stainless Steel Grill and Cooking Plate. Please read this manual thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions.

- · Read all instructions before using the appliance.
- · Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then
 remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

- Stainless Steel Housing
- Upper Grill Plate
- Lower Grill Plate
- Heat-Resistant Handles
- Temperature Control Dial (numbered 1-5)
- Power Indicator Light
- Non-Stick Coating



Figure 1: The Silex 2439 Grill in its closed position, showcasing the stainless steel exterior and black handles. This view highlights the compact design of the appliance.



Figure 2: The Silex 2439 Grill with its lid open, revealing the non-stick upper and lower cooking plates. This image demonstrates the ample cooking surface available for various food items.



Figure 3: A close-up view of the temperature control dial on the Silex 2439 Grill. The dial is clearly marked with settings from 1 to 5,

4. SETUP AND FIRST USE

- 1. Unpacking: Carefully remove the grill from its packaging. Retain packaging materials for storage or disposal.
- 2. **Initial Cleaning:** Before first use, wipe the cooking plates with a damp cloth or sponge. Dry thoroughly. Do not immerse the appliance in water.
- 3. **Placement:** Place the grill on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the appliance.
- 4. **Power Connection:** Ensure the temperature control dial is set to '0' (off). Plug the power cord into a grounded 230V electrical outlet.
- 5. **Pre-heating:** For the first use, it is recommended to pre-heat the grill for approximately 5-10 minutes on a medium setting (e.g., '3') without food. This helps to burn off any manufacturing residues. A slight odor or smoke may be present during this initial pre-heating; this is normal.
- 6. Cool Down: Allow the appliance to cool completely after the initial pre-heating cycle.

5. OPERATING INSTRUCTIONS

5.1 General Grilling

- 1. **Preparation:** Ensure the grill plates are clean. Lightly brush the cooking plates with a small amount of cooking oil, if desired, for certain foods.
- 2. **Pre-heating:** Close the grill and turn the temperature control dial to your desired setting (1-5). The power indicator light will illuminate. Allow the grill to pre-heat for 5-10 minutes until the indicator light may turn off, signaling it has reached the set temperature.
- 3. **Cooking:** Carefully open the grill and place your food onto the lower cooking plate. Close the lid. The floating hinge design allows for even cooking of thicker items.
- 4. **Monitoring:** Cooking times will vary depending on the type and thickness of the food. Periodically check food for desired doneness.
- 5. **Completion:** Once cooking is complete, carefully remove food using heat-resistant utensils.
- 6. Shut Down: Turn the temperature control dial to '0' (off) and unplug the appliance from the wall outlet.

5.2 Temperature Settings Guide

Setting	Recommended Use	
1-2 (Low)	Warming, gentle cooking, delicate items.	
3 (Medium)	Sandwiches, paninis, vegetables, fish.	
4-5 (High)	Meats, poultry, searing, faster cooking.	

Note: These are general guidelines. Adjust settings based on specific food items and personal preference.

6. CLEANING AND MAINTENANCE

CAUTION: Always unplug the grill and allow it to cool completely before cleaning.

• Exterior: Wipe the exterior stainless steel housing with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

· Cooking Plates:

- For light residue, wipe the non-stick plates with a damp cloth or paper towel.
- For stubborn food residue, dampen a cloth with warm, soapy water and gently wipe the plates. Avoid metal utensils or abrasive materials that can damage the non-stick coating.
- Ensure plates are completely dry before storing or next use.
- Storage: Store the grill in a clean, dry place. The power cord can be wrapped around the base for tidy storage.
- Do Not Immerse: Never immerse the entire appliance, cord, or plug in water or any other liquid.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill does not heat up.	Not plugged in; power outlet malfunction; temperature dial set to '0'.	Ensure the appliance is securely plugged into a working 230V outlet. Turn the temperature dial to a desired setting (1-5). Check household circuit breaker.
Food is not cooking evenly.	Grill not pre-heated sufficiently; uneven food thickness.	Allow the grill to pre-heat fully until the indicator light cycles off. Ensure food items are of similar thickness for best results.
Excessive smoke during cooking.	Food residue on plates; too much oil used; high-fat food.	Clean plates thoroughly before use. Use minimal oil. For high-fat foods, ensure proper ventilation.
Non-stick coating appears damaged.	Use of metal utensils or abrasive cleaners.	Always use wooden, plastic, or silicone utensils. Clean with soft cloths and non-abrasive cleaners.

If the problem persists after attempting these solutions, please contact customer support.

8. PRODUCT SPECIFICATIONS

Model: Silex 2439Power: 2000 WVoltage: 230 V

• Material: Stainless Steel, Metal

· Color: Silver

• Cooking Plate Dimensions: 34 cm x 22 cm

• Product Dimensions (L x W x H):36 cm x 40 cm x 17 cm

• Weight: 7 kg

Features: Double Non-Stick Coating, Scratch-Resistant Plates, Temperature Control Dial

9. WARRANTY INFORMATION

Silex products are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Silex website. Keep your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

For technical assistance, spare parts, or general inquiries, please contact Silex customer service. Contact details can typically be found on the official Silex website or on the product packaging.

Online Resources: www.silex.com (Example link, replace with actual if available)

© 2025 Silex. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - 2439

- 0 C	Silex DS-700 USB Device Server Setup Guide Comprehensive setup guide for the Silex DS-700 USB Device Server, detailing power-on, network configuration, and using USB devices over a network with SX Virtual Link software.	
when the digit international wind states that we will be a province of the control of the contro	Wireless E84 Digital Communication Device WDCD-3310 User Manual User manual for the WDCD-3310 Wireless E84 Digital Communication Device, detailing its functions, specifications, and FCC compliance for semiconductor manufacturing equipment.	
Siles Ethernet-to-Wi-Fi Bridge the state of price of the State of the	Silex Ethernet-to-Wi-Fi Bridge: Guide to Large-scale Setup and Maintenance A comprehensive guide for the large-scale setup and maintenance of Silex Ethernet-to-Wi-Fi Bridges, covering preparation, initial setup, deployment, monitoring, and firmware updates using AMC Manager.	
	Silex DS-700 USB Device Server Setup Guide A comprehensive setup guide for the Silex DS-700 USB Device Server, detailing power-on procedures, network configuration, and the use of SX Virtual Link software for remote USB device access.	
The control of the co	Proctor Silex Panini Press & Compact Grill (Model 25440PS) - Use and Care Manual This document provides instructions, safety precautions, and warranty information for the Proctor Silex Panini Press & Compact Grill, Model 25440PS. It covers operation, cleaning, and maintenance in English, French, and Spanish.	
metrical action of the control of t	Proctor Silex Panini Press & Compact Grill User Manual and Safety Instructions Comprehensive user manual for the Proctor Silex Panini Press & Compact Grill (Model 25440PS),	

including safety precautions, operating instructions, care, cleaning, and warranty information for the

US, Canada, and Mexico.



FSW Refrigeration & Air Conditioning Product Guide | HVAC/R Components

Explore the FSW Product Guide, a comprehensive resource for Refrigeration & Air Conditioning components. Find detailed specifications for tubes, fittings, valves, compressors, evaporators, and more, essential for HVAC/R professionals. lang:en score:21 filesize: 48.51 M page_count: 378 document date: 2025-07-22



[pdf] Guide Warranty Pricing Guide

PRICE GUIDE 1 JULY 2019 2019PriceGuide getknu 2021 03 |||

PRICE GUIDE 1 JULY 2019 FINISHES Please see the Frame Arm Cap Options Index on page 19 for ava ... id Surface Arm Caps COM 3 4 5 6 7 8 9 10 11 1609 1619 1649 1729 1789 1839 1929 2009 2119 **2439** W D H SW SD SH BH AH Weight COM 33.5 30 34 29.5 19.5 18 15.5 26.5 65 3 KAD10BPU ...

lang:en score:20 filesize: 14.07 M page_count: 290 document date: 2020-03-23



[pdf] Guide Warranty Pricing Guide

GSA PRICE GUIDE 1 JULY 2019 2019PriceGuideGSA getknu 2021 03 |||

GSA PRICE GUIDE 1 JULY 2019 FINISHES Please see the Frame Arm Cap Options Index on page 19 for ... hair with Intervening Arm, Urethane Arm Caps COM 3 4 5 6 7 8 9 10 11 2219 2239 2259 2359 **2439** 2519 2619 2729 2889 3129 KAD20IBLW - 2 Seat 29.5 Left Bariatric facing Chair with Interveni...

lang:en score:20 filesize: 13.77 M page_count: 286 document date: 2020-03-23






[pdf] Guide

NAB 2008 Program and Exhibit Guide worldradiohistory Archive Publications ||| 2008 Program Exhibit Guide Welcome to the place where creativity originates, inspiration comes ali ... tates Norway info fileCatalyst.com Phone: 972 446-8742 fjord fjordmedia.com Phone: 613 667-**2439** Fax: 972 389-4301 Phone: 47 3352 1600 Fax: 613 841-7428 Toll Free: 800 858-8800 Fax...


lang:en score:18 filesize: 15.47 M page_count: 302 document date: 2022-03-14

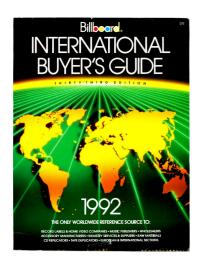

Billboard International Buyer's Guide 1992

The 1992 Billboard International Buyer's Guide is a comprehensive directory for the music and home video industries, listing record labels, music publishers, home video companies, and industry services and suppliers worldwide. It includes contact information, key personnel, and label details for businesses in the music and entertainment sectors.

lang:en score:16 filesize: 29.26 M page_count: 317 document date: 2019-07-11

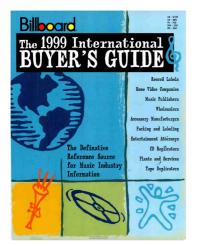

<u>Billboard 1999 International Buyer's Guide: The Definitive Reference for Music Industry Information</u>

The 1999 International Buyer's Guide from Billboard provides a comprehensive listing of companies, record labels, music publishers, wholesalers, manufacturers, entertainment attorneys, and other essential service providers within the global music industry.

lang:en score:16 filesize: 19.36 M page_count: 274 document date: 2022-03-02



[pdf] User Manual Specifications Documentation

lang:en score:12 filesize: 33.42 M page count: 4257 document date: 2022-08-05



[pdf] Test Report

untitled Test Report Silex Technology Inc SDMAC SDIO Wireless Module N6C N6CSDMAC sdmac Report No.: ER/2018/10137 Page 1 of 42 ELECTROMAGNETIC EMISSIONS COMPLIANCE REPORT INTENTIONAL RAD ... z 34 2436 MHz 54 15 2417 MHz 35 2437 MHz 55 16 2418 MHz 36 2438 MHz 56 17 2419 MHz 37 **2439** MHz 57 18 2420 MHz 38 2440 MHz 58 19 2421 MHz 39 2441 MHz 59 FREQUENCY CH 2442 MHz 7...

lang:en score:12 filesize: 627.17 K page count: 42 document date: 2018-03-08



[pdf] Test Report

untitled Test Report Silex Technology Inc PMACS Embedded wireless module N6C N6CPMACS pmacs Report No.: ER/2017/70040-01 Page 1 of 46 ELECTROMAGNETIC EMISSIONS COMPLIANCE REPORT INTENTIONAL ... 48 2431 MHz 49 2432 MHz 50 2433 MHz 51 2434 MHz 52 2435 MHz 53 2436 MHz 54 2437 MHz 55 2438 MHz 56 **2439** MHz 57 2440 MHz 58 2441 MHz 59 FREQUENCY CH 2442 MHz 70 2443 MHz 71 2444 MHz 72 2445 MH...


lang:en score:12 filesize: 539.49 K page count: 46 document date: 2017-10-13



[pdf] Test Report

Test Report Silex Technology Inc SXPCEAC2 SX PCEAC2 N6C N6CSXPCEAC2 sxpceac2 Report No.: ER/2017/C0086 Page 1 of 66 ELECTROMAGNETIC EMISSIONS COMPLIANCE REPORT INTENTIONAL RAD ... z 34 2436 MHz 54 15 2417 MHz 35 2437 MHz 55 16 2418 MHz 36 2438 MHz 56 17 2419 MHz 37 **2439** MHz 57 18 2420 MHz 38 2440 MHz 58 19 2421 MHz 39 2441 MHz 59 FREQUENCY CH 2442 MHz 7...

lang:en score:11 filesize: 739.78 K page count: 66 document date: 2018-07-02

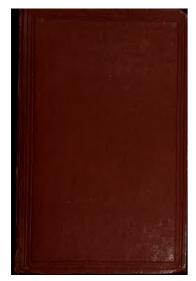

[pdf]

Tombs in and near Rome Sculpture among the Greeks Romans mythology funereal sculpture early Christian archive org details tombsinnearromes00park Parker John Henry 1806 1884 Dec 18 2024 — fire burnt soeffectually that no relics of body could be obtained Instruction official publication 11 Other inscriptions from |||

:: 7 3 THE ARCHAEOLOGY OF ROME. BY JOHN HENRY PARKER, C.B. Hon. M.A. Oxon., F.S.A. Lond.; KEE ... r The Bearded Bacchus. 1395, 2421 Juno Regina. 2475 Pallas. 2425 Venus. 2436 Isis. Medusa. **2439** 2470 Ceres. 1501 Cybele, 1501 Statues of P auns, Muses, Heroes, c. Fauns. 1679, 1680, 2...

lang:en score:11 filesize: 21.82 M page_count: 390 document date: 2014-05-17



[pdf] Test Report

untitled Test Report Silex Technology Inc PMACS Embedded wireless module N6C N6CPMACS pmacs Report No.: ER/2017/70040 Page 1 of 74 ELECTROMAGNETIC EMISSIONS COMPLIANCE REPORT INTENTIONAL RAD ... 48 2431 MHz 49 2432 MHz 50 2433 MHz 51 2434 MHz 52 2435 MHz 53 2436 MHz 54 2437 MHz 55 2438 MHz 56 2439 MHz 57 2440 MHz 58 2441 MHz 59 FREQUENCY CH 2442 MHz 70 2443 MHz 71 2444 MHz 72 2445 MH...

lang:en score:10 filesize: 1.46 M page_count: 74 document date: 2017-08-08



[pdf] Test Report

1 JackyLee 1706TW0113 U3 FCC DSS Test Report Bluetooth rev2 Silex Technology Inc SDMAN Wireless Module N6C N6CSDMAN sdman

MRT Technology Taiwan Co., Ltd Phone: 886-3-3288388 Fax: 886-3-3288918 Web: www.mrt-cert.com Re ... 2429 MHz 28 2430 MHz 30 2432 MHz 31 2433 MHz 33 2435 MHz 34 2436 MHz 36 2438 MHz 37 **2439** MHz 39 2441 MHz 40 2442 MHz 42 2444 MHz 43 2445 MHz 45 2447 MHz 46 2448 MHz 48 24...

lang:en score:10 filesize: 5.03 M page_count: 92 document date: 2017-10-29