

Moose 25254

Moose Games Flipslide Game

OFFICIAL INSTRUCTION MANUAL

Model: 25254 | Brand: Moose Games

1. Introduction

The Flipslide Game is a fast-paced electronic handheld puzzle game designed to challenge your skills and dexterity. It offers an engaging experience for players who enjoy puzzles requiring quick reflexes and focus. With its portable design, the Flipslide Game is suitable for entertainment anywhere, anytime.



Image: Flipslide Game in its retail packaging, showcasing the device and key features.

2. What's in the Box

- 1 x Flipslide console
- Instructions
- 2 x LR44 batteries (included and pre-installed)

3. Setup

The Flipslide Game comes ready to play with batteries pre-installed. No assembly is required.

1. Locate the power switch on the device.

2. Slide the switch to the 'ON' position to begin playing.
3. If the device does not power on, ensure the batteries are correctly seated or replace them if necessary.

4. Operating Instructions

The Flipslide Game features four distinct game modes, each offering a unique challenge:

- **Speed Mode:** Race against the clock to match colors and achieve your highest score.
- **Multiplayer Mode:** Compete with friends and family to see who can flip, slide, and match colors the fastest.
- **Level Mode:** Progress through a series of increasingly difficult levels to demonstrate your mastery.
- **Memory Mode:** Observe and remember the sequence of colors, then repeat them back in the correct order.



Image: The Flipslide Game displaying its four game modes (Speed, Multiplayer, Level, Memory) and four volume settings (Loud, Medium, Quiet, Silent).

How to Play

The core gameplay involves flipping and sliding the colored blocks to match the illuminated lights on the central display.

1. **Observe:** Colored lights will appear on the central display, indicating the target colors.
2. **Flip:** Rotate the side blocks to reveal the correct colors.
3. **Slide:** Move the blocks into position to match the illuminated lights.
4. **Match:** Successfully align the colored blocks with the lights to complete the pattern.



Image: The back of the Flipside Game packaging, detailing the four steps of gameplay: Observe, Flip, Slide, and Match.

Volume Control

The device offers multiple volume settings. Refer to the included instructions for specific details on adjusting the volume to your preference, including a silent mode for quiet play.

5. Safety Information

WARNING: CHOKING HAZARD – Small Parts. Not for children under 3 years.

Always supervise young children during play. Keep batteries out of reach of small children.

6. Specifications

- **Product Dimensions:** 2.99 x 5.98 x 1.93 inches
- **Item Weight:** 4.2 ounces
- **Item Model Number:** 25254
- **Manufacturer Recommended Age:** 8 - 15 years
- **Batteries:** 2 LR44 batteries required (included)
- **Release Date:** April 21, 2018
- **Manufacturer:** Moose Toys

7. Maintenance

To ensure the longevity of your Flipside Game:

- Wipe the device with a dry, soft cloth.
- Avoid exposing the device to water or excessive moisture.
- Store in a cool, dry place when not in use.
- Replace batteries when performance diminishes.

8. Troubleshooting

- **Device not turning on:** Check if the power switch is in the 'ON' position. Ensure batteries are correctly inserted and have sufficient charge. Replace batteries if needed.
- **Lights or sounds not working correctly:** This may indicate low battery power. Replace the batteries.
- **Difficulty with game modes:** Refer to the detailed instructions provided in the box for specific gameplay mechanics of each mode.

9. Warranty and Support

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Moose Toys website.