

## KEMEI KM-1990

# KEMEI KM-1990 Turbo Cordless Hair Clipper User Manual

Model: KM-1990 (9200000090905385)

## 1. INTRODUCTION

---

Thank you for choosing the KEMEI KM-1990 Turbo Cordless Hair Clipper. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new hair clipper. Please read it thoroughly before first use and keep it for future reference.

The KEMEI KM-1990 is a versatile hair clipper designed for precise and efficient hair cutting. It features a powerful motor with two adjustable speeds (Normal/Turbo), an adjustable stainless steel blade, and an intuitive LCD display. Its cordless and corded dual-use capability ensures convenience and uninterrupted operation.



*Image 1.1: Front view of the KEMEI KM-1990 Hair Clipper.*

## **2. SAFETY INFORMATION**

---

To ensure safe operation and prevent injury or damage, please observe the following safety guidelines:

- Do not use the appliance near water sources (e.g., bathtubs, showers, sinks).
- This product is not recommended for use on babies.
- Avoid direct contact with the cutting blades to prevent skin irritation and eye injuries.
- Always clean and maintain the clipper according to the manufacturer's instructions.
- Keep the appliance out of reach of children.

- Ensure the power adapter is compatible with your local voltage (110-240V).

### 3. PACKAGE CONTENTS

Upon opening the package, please verify that all the following items are included:

- 1 x KEMEI KM-1990 Hair Clipper
- 1 x Blade Protective Cover
- 4 x Limit Combs (3mm, 6mm, 10mm, 13mm)
- 1 x Hair Comb
- 1 x Cleaning Brush
- 1 x Power Adapter (Charger)



Image 3.1: KEMEI KM-1990 Hair Clipper and included accessories.

### 4. PRODUCT OVERVIEW

Familiarize yourself with the different parts of your KEMEI KM-1990 hair clipper:



Image 4.1: KEMEI KM-1990 Hair Clipper component diagram.

- **Obtuse Angle Cutter Head:** Designed for safe and precise cutting.
- **Blade Lever:** Adjusts the cutting length of the blade for finer control.
- **On/Off Switch:** Powers the clipper on or off.
- **LCD Display:** Shows remaining battery power, indicates Turbo mode, charging status, and lock state.
- **Cord/Cordless Use Port:** Allows for both wired and wireless operation.

## 5. SETUP

### 5.1. Charging the Device

1. Before first use, fully charge the clipper.
2. Connect the power adapter to the charging port at the bottom of the clipper.
3. Plug the adapter into a suitable electrical outlet (110-240V).
4. The LCD display will show the charging status. A full charge takes approximately 3 hours and provides up to 120 minutes of continuous use.
5. Once fully charged, disconnect the adapter.

## 5.2. Attaching Guide Combs

The clipper comes with four guide combs to achieve different hair lengths:

- 3mm (1/8 inch)
- 6mm (1/4 inch)
- 10mm (3/8 inch)
- 13mm (1/2 inch)

To attach a guide comb:

1. Ensure the clipper is turned off.
2. Align the chosen comb with the clipper blade and slide it on until it clicks securely into place.
3. To remove, gently pull the comb away from the blade.

## 6. OPERATING INSTRUCTIONS

---

### 6.1. Turning On/Off

Press the On/Off switch located on the front of the clipper to turn it on. Press it again to turn it off.

### 6.2. Adjusting Blade Length

The blade lever on the side of the clipper allows for fine adjustment of the cutting length without a guide comb. Move the lever up or down to select your desired blade length for tapering and blending.

### 6.3. Selecting Speed

The clipper features two speeds: Normal and Turbo. The LCD display will indicate when Turbo mode is active. Consult the product's specific controls for switching between these modes, typically a dedicated button or a double-press of the power button.

### 6.4. Hair Cutting Techniques

For best results, ensure hair is clean and dry. Use the appropriate guide comb for the desired length. Start with a longer comb if unsure. Move the clipper against the direction of hair growth for an even cut. For detailed styling, refer to professional hair cutting guides.



Image 6.1: KEMEI KM-1990 Hair Clipper demonstrating its power and battery life.

## 7. MAINTENANCE

Regular cleaning and maintenance will prolong the life of your clipper and ensure optimal performance.

### 7.1. Cleaning the Blades

1. Turn off the clipper and remove any attached guide comb.
2. Use the provided cleaning brush to remove loose hairs from the blades and the clipper body.
3. For a more thorough clean, you may carefully detach the blade set (refer to manufacturer instructions if available for blade removal).
4. Do not rinse the clipper under water unless explicitly stated as waterproof. The KM-1990 is not washable.

### 7.2. Lubrication (Oiling)

After each use, or at least once a month, apply a few drops of clipper oil (not included, but commonly available) to the blades. This helps maintain cutting efficiency and prevents rust.

1. Apply 1-2 drops of oil across the top of the blades.

2. Turn the clipper on for a few seconds to distribute the oil.
3. Wipe off any excess oil with a soft cloth.

### 7.3. Storage

Store the clipper in a dry, cool place, away from direct sunlight and moisture. Keep the blade protective cover on when not in use to prevent damage to the blades.

## 8. TROUBLESHOOTING

If you encounter any issues with your KEMEI KM-1990 hair clipper, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper for at least 3 hours.
	Power adapter or outlet issue.	Check the power adapter connection and try a different outlet.
Poor cutting performance or pulling hair.	Blades are dull or dirty.	Clean the blades thoroughly and apply clipper oil. Consider blade replacement if dullness persists.
	Hair is too thick or wet.	Ensure hair is dry and comb through before cutting. Take smaller sections.
Battery not holding charge.	Battery lifespan reached.	Contact customer support for potential battery replacement or service.

If the problem persists after trying these solutions, please contact KEMEI customer support.

## 9. SPECIFICATIONS

Feature	Detail
Brand	KEMEI
Model Number	KM-1990 (9200000090905385)
Power	5 W
Voltage	110-240 V
Frequency	50/60 Hz
Charging Time	3 hours
Usage Time	120 minutes (continuous)
Power Source	Battery powered and Corded Electric
Blade Material	Stainless Steel

Feature	Detail
Body Material	ABS
Dimensions (Product)	19.5 x 25.5 x 6.8 cm
Weight (Product)	600 g
Suitable for	Hair, beard, mustache, eyebrows, nose, ear, body

## 10. WARRANTY AND SUPPORT

---

For information regarding the product warranty, please refer to the warranty card included with your purchase or visit the official KEMEI website. Warranty terms and conditions may vary by region and retailer.

If you require technical assistance, have questions about your product, or need to report a defect, please contact the retailer where you purchased the KEMEI KM-1990 or refer to the contact information provided on the official KEMEI website.