

[Manuals.plus](#) /

› [HOT TOOLS](#) /

› Hot Tools Pro Artist Black Gold 2100 Turbo Ceramic + Ionic Hair Dryer | Fast Dry, Lightweight 1875W DC Motor

HOT TOOLS HT7017BG

Hot Tools Pro Artist Black Gold 2100 Turbo Ceramic + Ionic Hair Dryer

Instruction Manual

Brand: HOT TOOLS | Model: HT7017BG

INTRODUCTION

Welcome to the Hot Tools Pro Artist Black Gold 2100 Turbo Ceramic + Ionic Hair Dryer instruction manual. This professional hair dryer is designed to provide salon-quality blowouts with reduced frizz and enhanced shine. Its lightweight design and powerful 1875W DC motor ensure quick, quiet, and efficient drying. This manual provides essential information for safe operation, maintenance, and optimal performance of your new hair dryer.



Figure 1: Hot Tools Pro Artist Black Gold 2100 Turbo Ceramic + Ionic Hair Dryer with included concentrator and diffuser attachments.

SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the hair dryer when not in use.
- Keep the power plug and cord away from heated surfaces.
- Clean the dryer regularly by removing the lint filter to prevent fire hazards and maintain performance.
- Be aware of the 8 ft. cord length to avoid accidents and ensure safe operation.
- Do not use this appliance near water, such as bathtubs, showers, basins, or other vessels containing water.
- Do not block the air openings or place the appliance on a soft surface, such as a bed or couch, where the air openings may be blocked.

PRODUCT FEATURES

- **Lightweight Design:** Weighing just over 14 ounces (1.76 pounds total product weight), this dryer is designed for comfortable and effortless styling.
- **Powerful 1875-Watt DC Motor:** Provides high-powered airflow for quick and efficient drying.
- **Ionic Technology:** Reduces frizz and leaves hair with a silky-smooth, healthy-looking finish. Features variable ion settings to control volume and increase shine.
- **Multiple Heat and Speed Settings:** Offers six heat/speed options (High, Medium, Low for both heat and speed) to provide styling versatility for different hair types and textures.
- **Cold Shot Button:** Helps to set your style with a cool burst of air for a longer-lasting hold.
- **Included Attachments:**
 - **Concentrator:** For precise styling and focused airflow.
 - **Diffuser:** To help enhance natural curls or waves and add volume.
- **Removable Lint Filter:** Designed for easy cleaning and maintenance, contributing to longer motor life.
- **Red Light Indicator:** A red light inside the dryer indicates its operational status.



Figure 2: Detailed view of the control panel, featuring Ion Select, Heat (High/Low), and Speed (High/Off/Low) settings.



Figure 3: Close-up of the Turbo Control and Cool Shot button for enhanced drying and style setting.

SETUP

Your Hot Tools hair dryer comes ready for use with minimal setup required.

1. **Unpack:** Carefully remove the hair dryer and all accessories from the packaging.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Attach Accessories (Optional):**
 - To attach the concentrator or diffuser, align the attachment with the nozzle of the dryer and push firmly until it clicks into place.
 - To remove, gently pull the attachment off the nozzle.
4. **Power Connection:** Ensure the voltage of your power outlet matches the 110V requirement of the dryer. Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

Follow these steps for optimal drying and styling results:

1. **Prepare Hair:** For best results, towel-dry your hair to remove excess moisture before blow-drying.
2. **Apply Product (Optional):** If desired, apply a heat protectant or styling product to your hair.
3. **Select Settings:**
 - Choose your desired heat setting (High, Medium, Low) using the HEAT switch.
 - Select your preferred speed setting (High, Medium, Low) using the SPEED switch.
 - Adjust the Ion Select dial to control volume and shine as needed.
4. **Begin Drying:** Turn on the dryer. For general drying, move the dryer continuously over your hair, keeping it a few inches away from your scalp.
5. **Use Concentrator:** For precise styling, attach the concentrator. Direct the powerful airflow to specific sections of hair while brushing.

6. **Use Diffuser:** To enhance natural curls or waves and add volume, attach the diffuser. Gently cup sections of hair with the diffuser and lift towards the scalp.
7. **Set Style with Cold Shot:** Once your hair is almost dry or styled, press and hold the Cold Shot button to deliver a burst of cool air. This helps to lock in your style and add shine.
8. **Finish:** Turn off the dryer and unplug it from the outlet. Allow the appliance to cool down before storing.

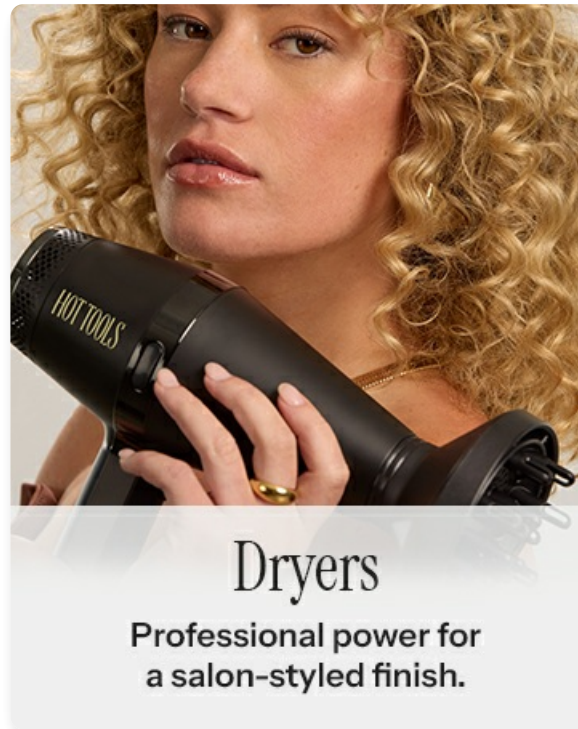


Figure 4: Achieve smooth, shiny results with powerful airflow and ionic technology.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your hair dryer.

- **Cleaning the Lint Filter:**

1. Ensure the dryer is unplugged and completely cool.
2. Locate the removable lint filter at the back of the dryer.
3. Twist or pull to remove the filter cover.
4. Gently clean any accumulated lint or dust from the filter using a soft brush or cloth.
5. Replace the filter cover securely.

Note: Regular cleaning of the lint filter is crucial to prevent overheating and maintain airflow.

- **Storage:** Store the appliance in a cool, dry place when not in use. Do not wrap the cord around the dryer, as this can damage the cord.
- **Cord Care:** Do not pull, twist, or excessively bend the power cord. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

TROUBLESHOOTING

If you experience issues with your Hot Tools hair dryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dryer does not turn on.	No power, faulty switch, or internal issue.	Ensure the dryer is properly plugged into a working outlet. Check if the power switch is in the "ON" position. If the switch feels stuck or unresponsive, contact customer support.
Dryer overheats or shuts off during use.	Blocked air intake/outlet, or prolonged use.	Unplug the dryer and allow it to cool down completely. Clean the lint filter as described in the Maintenance section. Ensure air vents are not blocked during use.
Reduced airflow or weak performance.	Dirty lint filter or internal motor issue.	Clean the lint filter thoroughly. Ensure no hair or debris is obstructing the air intake or outlet.
Hair remains frizzy after drying.	Incorrect ion setting or technique.	Experiment with different Ion Select settings. Ensure hair is not over-dried. Consider using a suitable anti-frizz product before drying.

If the problem persists after trying these solutions, please contact Hot Tools customer support.

SPECIFICATIONS

Feature	Detail
Brand	HOT TOOLS
Model Number	HT7017BG
ASIN	B079FKSN4Z
GTIN / UPC	078729170175
Wattage	1875 watts
Power Source	Corded Electric
Voltage	110V (as per product description)
Technology	Ceramic + Ionic
Color	Black Gold
Product Dimensions	4.4 x 11.2 x 9.8 inches
Item Weight	1.76 Pounds
Manufacturer	Helen of Troy

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Hot Tools customer service directly. Keep your purchase receipt as proof of purchase.

Visit the official Hot Tools website for the most up-to-date support information and product registration:

[Visit the HOT TOOLS Store](#)

© 2025 HOT TOOLS. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question