#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- MXR /
- MXR Classic 108 Fuzz Mini Guitar Pedal Instruction Manual M296

#### **MXR M296**

# MXR Classic 108 Fuzz Mini Guitar Pedal

INSTRUCTION MANUAL - MODEL M296

## Introduction

This manual provides essential information for the proper setup, operation, and maintenance of your MXR Classic 108 Fuzz Mini guitar pedal. The Classic 108 Fuzz Mini delivers vintage fuzz tones in a compact housing, featuring silicon BC-108 transistors for a round and dirty crunch. Please read this manual thoroughly before using the product.

## **Safety Information**

Always ensure proper power supply and connections to prevent damage to the unit or other equipment. Do not expose the pedal to moisture or extreme temperatures. Disconnect power when not in use or during cleaning.

#### **Product Overview**

The MXR Classic 108 Fuzz Mini is a compact guitar effects pedal designed to deliver classic fuzz sounds. It features a simple two-knob interface for intuitive control and a buffer switch for enhanced compatibility with other pedals.

Image: Top view of the MXR Classic 108 Fuzz Mini pedal, highlighting its compact size and control layout.

### **Key Features:**

- · Compact mini housing.
- Classic silicon BC-108 transistor fuzz tone.
- Two-knob interface: Output and Fuzz.
- Buffer switch for improved compatibility with wah pedals and other effects.
- · True bypass switching.

### Setup

Follo	ow these steps to connect your MXR Classic 108 Fuzz Mini to your guitar and amplifier:
1.	<b>Power Connection:</b> The pedal requires a 9-volt DC power adapter (not included). Connect the adapter to the power input jack located at the top of the pedal. Ensure the adapter is center-negative.
	Image: Rear view of the pedal, showing the power input jack for a 9V DC adapter.
2.	<b>Input Connection:</b> Connect your guitar to the INPUT jack on the right side of the pedal using a standard 1/4-inch instrument cable.
3.	Image: Right side view of the pedal, indicating the input jack.  Output Connection: Connect the OUTPUT jack on the left side of the pedal to your amplifier or the next effect in your signal chain using another 1/4-inch instrument cable.
	Image: Left side view of the pedal, indicating the output jack.  Signal Chain Placement: The MXR Classic 108 Fuzz Mini can be placed at various points in your signal chain. For traditional fuzz tones, it is often placed early in the chain, before overdrive or distortion pedals. The buffer switch allows for greater flexibility in placement, especially when used with wah pedals.  erating Instructions
The	MXR Classic 108 Fuzz Mini features a straightforward control layout:
Imag	e: The MXR Classic 108 Fuzz Mini pedal connected with patch cables, ready for use.
•	<b>OUTPUT Knob:</b> Controls the overall output volume of the effect. Turn clockwise to increase volume, counter-clockwise to decrease.
•	<b>FUZZ Knob:</b> Adjusts the intensity of the fuzz effect. Turn clockwise for more aggressive, saturated fuzz, and counter-clockwise for a milder fuzz.
•	<b>BUFFER Switch:</b> This small switch located near the top of the pedal activates or deactivates the internal buffer. When the buffer is engaged, it helps maintain signal integrity and prevents impedance issues, particularly when the pedal is placed before other effects like wah pedals. Experiment with both settings to find what works best with your setup.
•	<b>Footswitch:</b> Engages or bypasses the effect. When the effect is engaged, the LED indicator will illuminate. The pedal features true bypass, ensuring your signal remains unaffected when the pedal is disengaged.

## **Maintenance**

- Cleaning: Use a soft, dry cloth to clean the pedal. Avoid abrasive cleaners or solvents.
- Storage: Store the pedal in a dry environment away from direct sunlight and extreme temperatures.
- Power: Always disconnect the power adapter when the pedal is not in use for extended periods.

# **Troubleshooting**

#### · No Sound:

- Check all cable connections (guitar to input, output to amp).
- Ensure the 9V DC power adapter is correctly connected and functioning.
- Verify that the footswitch is engaged (LED illuminated).

### • Weak or Distorted Sound (unintended):

- Check the power supply; insufficient power can cause poor performance.
- · Adjust the OUTPUT and FUZZ knobs.
- Experiment with the BUFFER switch, especially if using other pedals in the chain.

#### • Excessive Noise:

- Ensure all cables are in good condition and properly shielded.
- Try a different power supply to rule out noise from the adapter.
- Fuzz pedals can be sensitive to placement in the signal chain and other electrical interference.

# **Specifications**

Feature	Specification
Model Number	M296
Item Weight	8 ounces
Product Dimensions	5.5 x 4.5 x 2.5 inches
Voltage	9 Volts DC
Signal Format	Analog
Hardware Interface	1/4-inch Audio

Image: Bottom view of the pedal, displaying product information and regulatory marks.

## **Warranty and Support**

For warranty information or technical support, please refer to the official MXR website or contact your authorized dealer. Keep your purchase receipt as proof of purchase.

© 2025 MXR. All rights reserved.

