

[Manuals.plus](#) /

> [EASY KARAOKE](#) /

> Easy Karaoke Bluetooth Karaoke Machine User Manual

EASY KARAOKE EKG88BBT

Easy Karaoke Bluetooth Karaoke Machine User Manual

Model: EKG88BBT

1. INTRODUCTION

Thank you for purchasing the Easy Karaoke Bluetooth Karaoke Machine. This manual provides essential information for the safe and efficient operation of your new karaoke system. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to rain or moisture.
- Do not block any ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.
- Keep away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Easy Karaoke Bluetooth Karaoke Machine (Model: EKG88BBT)
- 1 x Microphone
- AC Power Adapter
- Auxiliary Cable
- User Manual (this document)



Image: Retail packaging for the Easy Karaoke Bluetooth Karaoke Machine, illustrating the product and its key features.

4. PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your karaoke machine.



Image: The Easy Karaoke Bluetooth Karaoke Machine in black, shown with its included wired microphone. The machine features a top-loading CD compartment and various front-panel controls.



CD/CDG

Multi-Format Playing



Headphone

and AUX Sockets



1 Microphone

2 Mic Sockets for Duets



Stream Songs

from your phone or tablet

Image: Close-up view of the front control panel of the Easy Karaoke Machine, highlighting the CD/CDG, AUX, and Bluetooth mode indicators, volume and echo controls, and playback buttons.

Front Panel Controls:

- **ECHO VOL Knob:** Adjusts the echo effect level for the microphone.
- **MIC VOL Knob:** Controls the microphone volume.
- **CDG/BT/AUX Mode Button:** Toggles between CD/CDG, Bluetooth, and Auxiliary input modes.
- **REPEAT Button:** Repeats the current track or all tracks.
- **PROGRAM Button:** Programs CD tracks for custom playback order.
- **PLAY/PAUSE Button:** Starts or pauses playback.
- **STOP Button:** Stops playback.
- **SKIP Buttons (<< / >>):** Skips to the previous or next track.
- **Power Button:** Turns the unit on or off.
- **Headphone Jack:** For private listening.

- **AUX Input Jack:** Connect external audio devices.
- **Microphone Input Jacks (x2):** Connect microphones.

5. SETUP

5.1 Power Connection

1. Ensure the unit is turned off.
2. Connect the AC power adapter to the DC IN jack on the back of the karaoke machine.
3. Plug the other end of the adapter into a standard wall outlet.

5.2 Microphone Connection

Insert the microphone cable plug into one of the MIC input jacks on the front panel. The unit supports two microphones for duets.

5.3 Audio Output Connection (Optional)

To output audio and lyrics to a TV or external sound system (for CDG discs), connect an RCA audio/video cable (not included) from the AUDIO OUT/VIDEO OUT jacks on the karaoke machine to the corresponding input jacks on your TV or audio system.

6. OPERATING INSTRUCTIONS

6.1 CD/CDG Playback

1. Open the CD compartment lid on top of the unit.
2. Place a CD or CDG disc onto the spindle with the label side facing up.
3. Close the CD compartment lid securely.
4. Press the **Power Button** to turn on the unit.
5. Press the **CDG/BT/AUX Mode Button** until "CDG" or "CD" is displayed.
6. Press the **PLAY/PAUSE Button** to begin playback.
7. Use the **SKIP Buttons** to navigate tracks.
8. Press the **STOP Button** to end playback.

6.2 Bluetooth Audio Streaming

Connect your smartphone, tablet, or other Bluetooth-enabled device to stream music wirelessly.



Fast Wireless Connection)))



Phone



Tablet



Computer



Laptop



Image: Diagram illustrating the Bluetooth connectivity feature, showing the Easy Karaoke Machine wirelessly connecting to a phone, tablet, computer, or laptop for audio streaming.

1. Press the **Power Button** to turn on the unit.
2. Press the **CDG/BT/AUX Mode Button** until "BT" (Bluetooth) is displayed and the Bluetooth indicator light flashes. The unit is now in pairing mode.
3. On your Bluetooth device, enable Bluetooth and search for available devices.
4. Select "EASY KARAOKE" from the list of devices.
5. Once paired, the Bluetooth indicator light will stop flashing and remain solid. You can now play music from your device through the karaoke machine.

6.3 AUX Input

Connect any audio device with a 3.5mm headphone jack using the supplied auxiliary cable.

1. Connect one end of the auxiliary cable to the AUX IN jack on the front panel of the karaoke machine.

2. Connect the other end to the headphone jack or audio output of your external audio device.
3. Press the **CDG/BT/AUX Mode Button** until "AUX" is displayed.
4. Play audio from your external device.

6.4 Microphone Usage

Adjust microphone volume and add echo effects for enhanced vocal performance.



Image: Close-up of the Easy Karaoke microphone, highlighting its ON/OFF switch and indicating the presence of echo effects and the ability to stream free songs from easykaraoke.com.

- Ensure the microphone is connected to a MIC input jack.
- Adjust the **MIC VOL Knob** to control the microphone's output volume.
- Rotate the **ECHO VOL Knob** to add or reduce the echo effect on your vocals.

7. MAINTENANCE

7.1 Cleaning

- Always unplug the unit from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces of the unit.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the CD lens, use a specialized CD lens cleaner disc (not included).

7.2 Storage

When not in use, store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you encounter issues with your karaoke machine, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
No power	Power adapter not connected or outlet not working.	Ensure the power adapter is securely plugged into the unit and a working wall outlet.
No sound from speakers	Volume too low; incorrect mode selected; external audio connection issue.	Increase the master volume. Ensure the correct mode (CDG/BT/AUX) is selected. Check external audio connections if applicable.
Microphone not working	Microphone not plugged in; MIC VOL too low; microphone switch off.	Ensure microphone is fully plugged into the MIC jack. Increase MIC VOL. Check if the microphone's ON/OFF switch is in the ON position.
Bluetooth pairing failed	Unit not in pairing mode; device too far; incorrect device selected.	Ensure the unit is in Bluetooth pairing mode (BT flashing). Move your device closer to the unit. Select "EASY KARAOKE" from your device's Bluetooth list.
CD/CDG disc not playing	Disc inserted incorrectly; disc dirty or scratched; incorrect mode.	Ensure the disc is inserted correctly. Clean the disc with a soft cloth. Try a different disc. Ensure CDG/CD mode is selected.

9. SPECIFICATIONS

Feature	Detail
Model Number	EKG88BBT
Brand	EASY KARAOKE
Connectivity Technology	Bluetooth, Auxiliary (3.5mm Jack)
Power Source	Corded Electric
Included Components	Microphone
Number of Speakers	1
Voltage	230 Volts (AC)

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the retailer where the product was acquired. You may also visit the official Easy Karaoke website for further assistance.

Note: Product specifications and appearance are subject to change without notice.

