

[Manuals.plus](#) /

› [LKPower](#) /

› LKPower AC Adapter User Manual for Tecsun AD1100 CR1100 DSP PLL AM FM Digital Clock Radio

LKPower 180130493

LKPower AC Adapter User Manual

Model: 180130493

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your LKPower AC Adapter. This adapter is designed to provide power to compatible devices, specifically Tecsun AD1100 and CR1100 DSP PLL AM FM Digital Clock Radios. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the adapter to water or excessive moisture.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to disassemble or modify the adapter.
- Ensure the power outlet voltage matches the adapter's input specifications (100-240V AC).
- Unplug the adapter from the power outlet when not in use for extended periods.
- Keep out of reach of children.

3. PRODUCT FEATURES

- High-quality replacement AC wall power charger adapter.
- Universal input: AC 100-240V 50/60Hz (Worldwide AC Input).
- Built-in Over Voltage Protection.
- Built-in Over Heat Protection.
- Tested units for reliable performance.

4. SETUP

Follow these steps to set up your LKPower AC Adapter:

1. **Inspect the Adapter:** Ensure the adapter and its cable are free from any visible damage.
2. **Connect to Device:** Plug the barrel connector end of the adapter cable into the power input port of your Tecsun AD1100 or CR1100 radio.
3. **Connect to Power Outlet:** Insert the two-prong plug of the adapter into a standard AC wall power outlet (100-240V).

4. **Verify Power:** Once connected, your device should receive power. Refer to your device's manual for specific power indicators.



Figure 1: Front and side view of the LKPower AC Adapter, showing the two-prong plug and the barrel connector cable.



Figure 2: The LKPower AC Adapter in use, plugged into a power strip and connected to a digital clock radio.

5. OPERATING INSTRUCTIONS

The LKPower AC Adapter operates automatically once connected. It converts AC power from your wall outlet to the DC power required by your compatible device. No user intervention is required for its operation beyond proper connection.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the adapter. Do not use liquid cleaners or aerosols.
- **Storage:** Store the adapter in a cool, dry place when not in use. Avoid wrapping the cable too tightly.
- **Cable Care:** Do not bend or crimp the power cord excessively. Avoid placing heavy objects on the cord.

7. TROUBLESHOOTING

If your device is not receiving power, consider the following:

- **Check Connections:** Ensure the adapter is securely plugged into both the wall outlet and your device.
- **Test Outlet:** Plug another working appliance into the wall outlet to confirm it is supplying power.
- **Inspect Adapter:** Look for any visible damage to the adapter or its cable. If damaged, discontinue use.
- **Device Compatibility:** Confirm that your device (Tecsun AD1100/CR1100) is compatible with this adapter's specifications.

8. SPECIFICATIONS

Model Number	180130493
Input Voltage	AC 100-240V
Frequency	50/60Hz
Connector Type	Barrel Connector
Main Power Connector Type	2 Pin (US Standard)
Cable Length	76 inches (approx. 193 cm)
Dimensions (L x W x H)	2.6 x 1.6 x 1.2 inches (approx. 6.6 x 4.1 x 3.0 cm)
Special Feature	Travel-friendly design

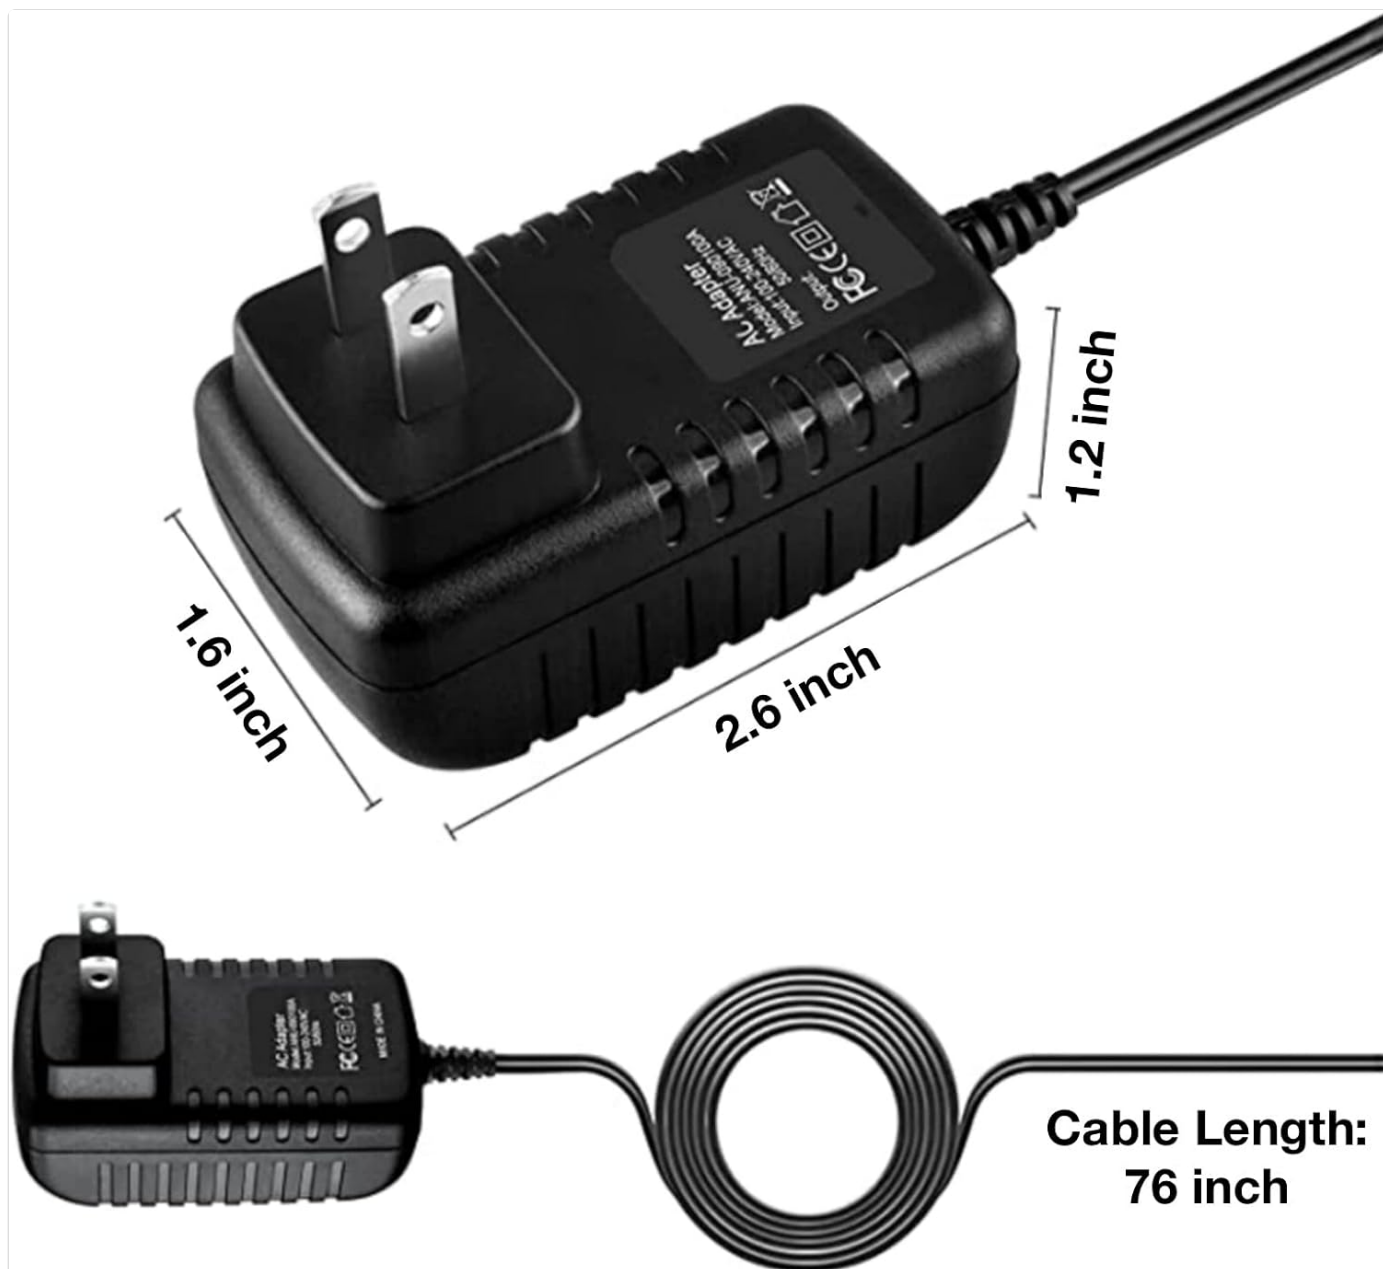


Figure 3: Physical dimensions and cable length of the LKPower AC Adapter.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer or manufacturer's official website where the product was purchased. Keep your purchase receipt as proof of purchase.

© 2026 LKPower. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B079G7KM8D>

More documents and user manuals: <https://manuals.plus/>