

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Fuers](#) /

› Fuers TL-2600 Fake Camera Instruction Manual

Fuers TL-2600

Fuers TL-2600 Fake Camera Instruction Manual

Waterproof Outdoor/Indoor Security Dummy Surveillance Camera with Flashing LED Light

1. PRODUCT OVERVIEW

The Fuers TL-2600 is a high-quality, durable dummy surveillance camera designed to deter potential intruders. It features a realistic appearance, a flashing LED light, and is suitable for both indoor and outdoor use. This device provides a cost-effective solution to enhance security visibility without the complexity of a real surveillance system.

Key Features:

- **Realistic Design:** High resemblance to actual security cameras.
- **Flashing LED Light:** Simulates active surveillance, powered by 2 AAA batteries (not included).
- **Durable Construction:** Made from high-quality ABS material, weather-resistant for outdoor use.
- **Adjustable Angle:** Features a mounting bracket allowing for 90° vertical and 360° horizontal rotation.
- **Easy Installation:** No wiring required, mounts quickly to walls or ceilings.



Image 1.1: The Fuers TL-2600 Fake Camera featuring a red flashing LED light, simulating active operation.

Can Rotate At A Large Angle



No Need Switch,Using After Installing Battery

Image 1.2: The camera's adjustable bracket allows for 90-degree vertical and 360-degree horizontal rotation for optimal positioning.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Fuers TL-2600 Dummy Camera Unit
- 1 x Mounting Bracket (pre-attached)
- 3 x Mounting Screws
- 3 x Wall Plugs
- 1 x CCTV Warning Sticker

Note: 2 x AAA batteries are **not included** and must be purchased separately.

Fake Bullet CCTV Surveillance System



With LED Flashing

Very real and not easy to know
that is a fake camera
Greatly enhance the authentic
real security

Image 2.1: Contents of the package including the dummy camera, mounting hardware, and a CCTV sticker. Dimensions are also shown.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the underside of the camera body.
2. Carefully open the compartment cover.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely. The LED light should begin flashing immediately.



Image 3.1: View of the battery compartment opened to insert two AAA batteries.

Battery Installation



Image 3.2: Step-by-step guide for installing batteries into the dummy camera.

3.2 Mounting the Camera

1. Choose a suitable location for installation, such as a wall or ceiling, ensuring good visibility and deterrence.
2. Position the mounting bracket at the desired location and mark the three screw holes.
3. Drill pilot holes at the marked spots. For masonry or drywall, insert the provided wall plugs.
4. Secure the mounting bracket to the surface using the provided screws.
5. Adjust the camera angle as needed (refer to Section 4.1).
6. Affix the included CCTV warning sticker in a prominent location nearby to further enhance deterrence.

4. OPERATING INSTRUCTIONS

4.1 Adjusting Camera Angle

The camera's mounting bracket allows for flexible positioning:

- **Vertical Adjustment:** Loosen the side screw on the bracket to tilt the camera up or down (up to 90°). Tighten the screw once the desired angle is achieved.

- **Horizontal Adjustment:** The base of the bracket allows for full 360° rotation. Simply rotate the camera body to face the desired direction.

4.2 LED Flashing

Once batteries are correctly installed, the red LED light will automatically begin to flash continuously. There is no separate on/off switch for the LED. The flashing LED simulates the operation of a real security camera, enhancing its deterrent effect.

5. MAINTENANCE

- **Battery Replacement:** Replace the two AAA batteries when the LED light stops flashing or becomes dim. Always use fresh batteries for optimal performance.
- **Cleaning:** Wipe the camera body and lens area with a soft, damp cloth to remove dust and dirt. Avoid using harsh chemicals or abrasive cleaners.
- **Weather Resistance:** While designed for outdoor use, extreme weather conditions (e.g., heavy storms, prolonged direct sunlight) may affect its lifespan. Periodically check the unit for any signs of wear or damage.

6. TROUBLESHOOTING

- **LED Not Flashing:**
 - Check if batteries are installed correctly with the right polarity.
 - Replace with new AAA batteries.
- **Camera Feels Loose After Mounting:**
 - Ensure all mounting screws are tightened securely.
 - If mounted on drywall, ensure wall plugs are properly seated.

7. SPECIFICATIONS

Brand	Fuers
Model Name	TL-2600
Power Source	2 x AAA Batteries (not included)
Material	High-quality ABS Plastic
Features	Flashing LED Light, Adjustable Mounting Angle, Weather-Resistant
Recommended Use	Indoor, Outdoor
Camera Body Length	Approximately 8.2 inches (20.8 cm)
Camera Body Height	Approximately 3.9 inches (9.9 cm)
Mounting Arm Length	Approximately 5.7 inches (14.5 cm)

