

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Energizer](#) /

› [Energizer MAX AA Alkaline Batteries User Manual](#)

## Energizer E91DP2-24

# Energizer MAX AA Alkaline Batteries User Manual

**Model:** E91DP2-24

**Brand:** Energizer

## PRODUCT OVERVIEW

---

The Energizer MAX AA Alkaline Batteries are designed to provide long-lasting power and reliable performance for a wide range of devices. This 48-count pack ensures you have power when you need it most, with batteries engineered to protect against damaging leaks.

### Key Features:

- 48-pack of Energizer MAX AA Alkaline Batteries.
- Energizer's longest-lasting MAX AA batteries, offering up to 50% longer life in demanding devices compared to EVEREADY GOLD.
- Ideal for various AA-powered devices such as toys, digital cameras, and remote controls.
- Designed to protect devices from leakage of fully used batteries for up to two years.
- Maintains power for up to 12 years in storage.



Image: A 48-count box of Energizer MAX AA Alkaline Batteries, featuring the Energizer Bunny logo and product details.

## USAGE INSTRUCTIONS

---

### Battery Installation:

1. Identify the battery compartment on your device.
2. Observe the polarity indicators (+ and -) inside the compartment.
3. Insert the Energizer MAX AA batteries, aligning the positive (+) and negative (-) terminals correctly with the device's indicators.
4. Close the battery compartment securely.

### Optimal Performance:

- For best results, replace all batteries in a device at the same time.
- Do not mix old and new batteries, or different types of batteries (e.g., alkaline with rechargeable).
- Ensure battery contacts in the device are clean and free of corrosion.

## STORAGE GUIDELINES

---

Energizer MAX AA batteries are designed to hold power for up to 12 years in storage, ensuring they are ready when you need them.

### Recommended Storage Conditions:

- Store batteries in a cool, dry place at normal room temperature (20-25°C or 68-77°F).
- Avoid extreme temperatures, direct sunlight, and high humidity.
- Keep batteries in their original packaging until ready for use to prevent short-circuiting and accidental discharge.
- Do not store batteries loosely in a drawer with metal objects like coins or paper clips.

## SAFETY INFORMATION AND WARNINGS

---

### General Safety Precautions:

- Keep batteries out of reach of small children and pets. Swallowing batteries can be harmful.
- Do not recharge, disassemble, crush, or expose batteries to fire or high temperatures.
- Do not short-circuit batteries.
- In case of battery leakage, avoid contact with skin and eyes. If contact occurs, rinse immediately with plenty of water and seek medical attention.
- Dispose of used batteries according to local regulations. Do not dispose of batteries in household waste.

### Leakage Protection:

Energizer MAX AA batteries are designed to protect devices from damaging leaks for up to two years after being fully used. This protection applies to devices damaged by leakage from Energizer MAX Alkaline batteries during the battery's life or within two years following full use. Energizer may repair or replace, at its option, any device damaged by such leakage. Proof of claim (leaking battery and damaged device) must be provided. Energizer reserves the right to deny claims of damage caused by misuse or modification of the batteries or device.

### Legal Disclaimer:

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

## PRODUCT SPECIFICATIONS

---

Feature	Detail
Brand	Energizer
Model Number	E91DP2-24
Battery Cell Composition	Alkaline
Battery Size	AA
Number of Batteries	48 (included)
Product Dimensions	8.19 x 4.72 x 1.5 inches
Item Weight	6.72 ounces
Manufacturer	Energizer Batteries
Date First Available	February 12, 2018

## WARRANTY AND SUPPORT

---

### Limited Warranty:

Energizer offers a limited warranty against leakage for Energizer MAX Alkaline batteries. Energizer will repair or replace, at its option, any device damaged by leakage from Energizer MAX Alkaline batteries

either during the life of the battery or within two years following the full use of the battery. If exact replacement is not available, devices may be replaced with a product of comparable market value at the time of claim. Leaking battery and damaged device must be provided to Energizer as proof of claim. Energizer reserves the right to deny claims of damage caused by misuse or modification of the batteries or device.

**Customer Support:**

For further assistance, questions, or to make a warranty claim, please contact Energizer customer support through their official website or designated contact channels. Refer to the product packaging for specific contact details.