

AEG L7WB65689

AEG L7WB65689 Washer Dryer Instruction Manual

1. INTRODUCTION

Thank you for choosing an AEG appliance. This instruction manual provides essential information for the safe and efficient operation, installation, and maintenance of your AEG L7WB65689 washer dryer. Please read this manual carefully before using the appliance and keep it for future reference.

2. SAFETY INFORMATION

For your safety and to ensure correct use, always observe the following warnings and precautions. Incorrect installation or use can cause injury or damage.

- **Electrical Safety:** Ensure the appliance is properly earthed. Do not use extension cords or multiple socket adapters. Disconnect from power before cleaning or maintenance.
- **Water Safety:** Ensure water inlet and drain hoses are correctly connected to prevent leaks. Do not operate if there is a visible leak.
- **Child Safety:** Keep children and pets away from the appliance during operation. Packaging materials should be kept out of reach of children.
- **Ventilation:** Ensure adequate ventilation around the appliance, especially during drying cycles, to prevent overheating.
- **Flammable Materials:** Do not wash or dry items that have been soiled with flammable substances (e.g., cooking oil, petrol).
- **Appliance Use:** This appliance is for domestic use only. Do not overload the drum.

3. INSTALLATION AND SETUP

Proper installation is crucial for the performance and longevity of your appliance.

3.1 Unpacking

- Remove all packaging materials, including polystyrene blocks and plastic film.
- Remove the transport bolts from the rear of the appliance. Keep them for future transport.

3.2 Location

- Place the appliance on a firm, level floor.
- Ensure there is sufficient space around the appliance for ventilation and maintenance.
- Avoid installing in areas where the temperature may drop below freezing.

3.3 Water Connection

- Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the connection is tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during operation.

3.4 Electrical Connection

- Plug the appliance into a properly earthed power socket.
- Ensure the voltage and frequency match the ratings on the appliance's rating plate.

3.5 Leveling the Appliance

- Adjust the feet at the bottom of the appliance to ensure it is perfectly level. Use a spirit level to check.
- A level appliance reduces vibration and noise during operation.

4. OPERATING INSTRUCTIONS

Follow these steps for effective washing and drying.

4.1 Control Panel Overview

The control panel features a rotary dial for program selection, buttons for additional options, and an LED display for status and settings.

4.2 Loading Laundry

- Open the appliance door.
- Load laundry items loosely into the drum. Do not overload.
- Close the door firmly.



The image displays the internal drum of the AEG L7WB65689 washer dryer, highlighting its design for efficient washing and drying. Ensure laundry is loaded evenly into this drum.

4.3 Adding Detergent and Fabric Softener

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment.
- Add fabric softener to its designated compartment (if desired).
- Push the drawer back in gently.

4.4 Selecting a Program

- Turn the rotary dial to select the desired washing or combined wash and dry program.
- Refer to the program chart (usually inside the detergent drawer or on the appliance) for detailed program descriptions.

4.5 Adjusting Settings

- Use the option buttons to adjust temperature, spin speed, or drying level as needed for the selected program.
- The LED display will show the current settings.

4.6 Starting and Ending a Program

- Press the Start/Pause button to begin the selected program.
- At the end of the program, an audible signal may sound, and the LED display will indicate completion.
- Open the door and remove the laundry.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your appliance.

5.1 Cleaning the Detergent Dispenser

- Pull out the dispenser drawer completely.
- Remove any removable parts and rinse them under running water.
- Clean the drawer housing with a brush.
- Reassemble and reinsert the drawer.

5.2 Cleaning the Drum

- Periodically run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) to clean the drum and remove residues.
- Leave the door ajar after use to allow the drum to air dry and prevent odors.

5.3 Cleaning the Filter

- Locate the drain pump filter, usually at the bottom front of the appliance.
- Place a shallow container underneath to catch any residual water.
- Unscrew the filter cover and carefully remove any lint, debris, or foreign objects.
- Clean the filter under running water and screw it back in securely.

5.4 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

If you encounter a problem with your appliance, consult this section before contacting service.

Problem	Possible Cause	Solution
Appliance does not start	No power supply; Door not closed; Program not selected.	Check power plug and fuse; Ensure door is firmly closed; Select a program and press Start.
Water leakage	Loose hose connections; Detergent drawer overflow.	Check and tighten water inlet/drain hoses; Do not overfill detergent drawer.
Unusual noise/vibration	Transport bolts not removed; Appliance not level; Foreign objects in drum.	Remove transport bolts; Adjust feet to level appliance; Check drum for foreign objects.
Poor washing results	Overloading; Incorrect detergent dosage; Wrong program.	Reduce load size; Use correct detergent amount; Select appropriate program.
Poor drying results	Overloading; Lint filter blocked; Incorrect drying level.	Reduce load size; Clean the lint filter; Select a higher drying level.

If the problem persists after attempting these solutions, please contact AEG customer service.

7. TECHNICAL SPECIFICATIONS

- **Model:** L7WB65689
- **Brand:** AEG
- **Reference/Model Number:** 914 603 822
- **Dimensions (L x W x H):** 59.7 x 57.6 x 84.8 cm
- **Capacity:** 4 Kilograms (drying capacity)
- **Loading Type:** Front-loading
- **Power Supply:** Refer to the rating plate on the appliance.

8. WARRANTY AND CUSTOMER SUPPORT

Your AEG L7WB65689 washer dryer comes with a manufacturer's warranty. Please refer to the warranty card provided with your appliance for specific terms and conditions.

For technical assistance, spare parts, or to schedule a service appointment, please contact AEG customer support. Have your appliance model number (L7WB65689) and serial number ready when you call.

Contact information for customer support can typically be found on the AEG official website or in the documentation supplied with your product.