

[Manuals.plus](#) /

› [Fastrack](#) /

› Fastrack Analog-Digital Men's Watch NM38035SP03/NN38035SP03 User Manual

Fastrack NR38035SP03

Fastrack Analog-Digital Men's Watch User Manual

Model: NR38035SP03

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Fastrack Analog-Digital Men's Watch, Model NR38035SP03. Please read this manual carefully to ensure proper use and longevity of your timepiece.



Front view of the Fastrack Analog-Digital Men's Watch, showcasing its black dial with orange accents and silicone strap.

PRODUCT OVERVIEW

The Fastrack Analog-Digital Men's Watch seamlessly blends traditional analog timekeeping with a digital display, offering both classic elegance and modern functionality. It features a durable stainless steel case, a comfortable black silicone strap, and is designed for versatile daily wear.

- **Analog-Digital Display:** Combines classic hands with a digital screen for comprehensive time display, including seconds, date, and day of the week.
- **Durable Construction:** Features a robust stainless steel case and a protective mineral glass for enhanced resilience against daily wear and tear.
- **Comfortable Strap:** The black silicone strap is designed for extended wear, providing both comfort and a secure fit.
- **Water Resistance:** Rated for 30 meters (3 ATM), making it suitable for splashes or brief immersion in water.



Side view of the Fastrack Analog-Digital Men's Watch, highlighting the crown and pushers used for adjustments and mode selection.

SETUP

Initial Battery Activation

Your watch comes with a pre-installed Lithium Metal battery. If the watch is not running upon arrival, gently pull out the crown (the small knob on the right side of the watch case) to activate the battery and start the analog movement. Push it back in to begin accurate timekeeping.

Setting Analog Time

1. Pull the crown out to the first click position.
2. Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the desired time.
3. Once the analog time is set, push the crown back into its normal, closed position to start the watch.

Setting Digital Time and Date

The digital display typically features multiple modes, including Time, Date, Alarm, and Stopwatch. Use the pushers

located on the sides of the watch case to navigate and set these functions. While specific button functions may vary slightly by model, the general operation involves:

- **Mode Button:** Press to cycle through the various digital display modes (e.g., Time, Date, Alarm).
- **Adjust Button:** Used to select the specific digit or setting you wish to change within a chosen mode.
- **Set/Light Button:** Used to increment values (e.g., hours, minutes) or to activate the backlight for the digital display.

For precise instructions on setting all digital functions, including alarms and stopwatch, please refer to the detailed instruction booklet that accompanies your Fastrack watch.

OPERATING THE WATCH

Time Reading


The analog hands provide a quick reference for the current hour and minute. The digital display offers precise time, including seconds, and often includes the day of the week and the full date, depending on the selected mode.

Using Digital Functions

Your Fastrack Analog-Digital watch may include several useful digital functions:

- **Alarm:** Set one or more daily alarms to alert you at specific times.
- **Stopwatch:** Accurately measure elapsed time for various activities.
- **Backlight:** Activate the backlight to illuminate the digital display, ensuring readability in low-light conditions.
- **Date Display:** Easily view the current date and day of the week.

To access and utilize these functions, refer to the specific button labels on your watch (e.g., "MODE", "RESET", "LIGHT") and follow the navigation sequence outlined in the full product manual.

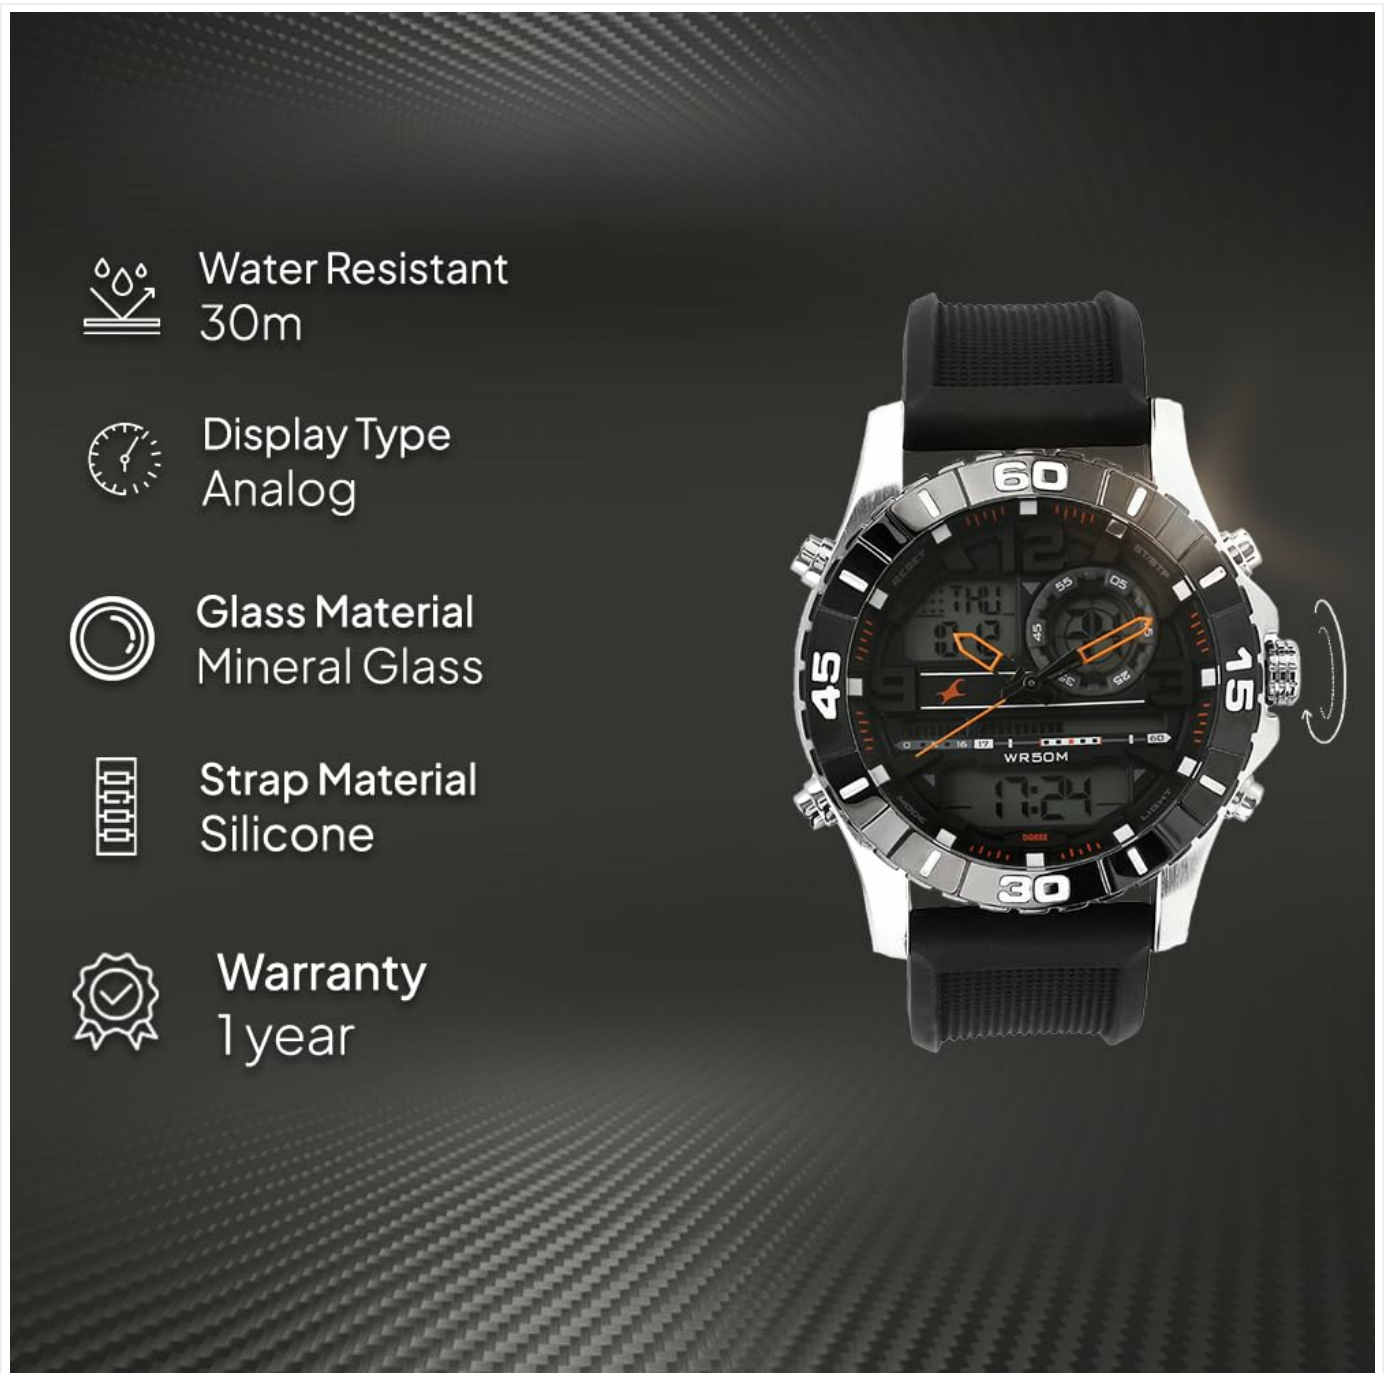

An illustration highlighting key features of the Fastrack Analog-Digital Men's Watch, including its 30m water resistance, analog display type, mineral glass material, silicone strap, and 1-year warranty.

MAINTENANCE

Cleaning

- Regularly wipe the watch case and crystal with a soft, dry, lint-free cloth to remove dust, fingerprints, and light smudges.
- For the silicone strap, a damp cloth with a small amount of mild soap can be used. Ensure to rinse off any soap residue thoroughly and dry the strap completely before wearing.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the watch's finish, seals, or strap material.

Water Resistance

This watch is designed with a water resistance rating of 30 meters (3 ATM). This rating indicates that the watch is suitable for everyday use and can withstand accidental splashes, rain, or brief immersion in water. It is *not* designed for swimming,

diving, snorkeling, or showering, as prolonged exposure to water pressure or steam can compromise the watch's seals and lead to water ingress.

Always ensure the crown is fully pushed in and any pushers are not operated while the watch is wet or submerged.

Battery Replacement

When the analog hands cease movement or the digital display becomes dim or unresponsive, it typically signifies a depleted battery. For optimal performance and to maintain the watch's water resistance, battery replacement should be performed by a qualified watch technician or an authorized Fastrack service center. This ensures the correct battery type is used and the watch is properly resealed.

Storage

When not in use, store your Fastrack watch in a cool, dry place, away from direct sunlight, extreme temperatures (both hot and cold), and strong magnetic fields. Prolonged exposure to these conditions can affect the watch's accuracy and longevity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Analog hands not moving.	Battery depleted or crown is pulled out.	Ensure the crown is fully pushed in. If the issue persists, the battery may need replacement by a professional.
Digital display is blank or dim.	Battery depleted.	The digital display battery may be low. Seek professional battery replacement.
Incorrect time/date displayed on digital screen.	Time/date not set correctly or reset due to battery change.	Refer to the "Setting Digital Time and Date" section and the full product manual for detailed setting instructions.
Condensation or moisture inside the watch crystal.	Exposure to extreme temperature changes or water ingress due to compromised seals.	Seek professional service immediately to prevent internal damage. Avoid further water exposure.
Watch strap feels uncomfortable or causes irritation.	Improper fit, sweat/dirt buildup, or allergic reaction.	Adjust strap for comfortable fit. Clean strap regularly. If irritation persists, consult a doctor and consider alternative strap materials.

If the problem persists after attempting these solutions, please contact Fastrack customer support or an authorized service center for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	NR38035SP03
Display Type	Analog-Digital
Movement Type	Quartz
Case Material	Stainless Steel

Feature	Detail
Band Material	Silicone
Band Color	Black
Dial Color	Grey with Orange Accents
Glass Material	Mineral Glass
Water Resistance	30 Meters (3 ATM)
Item Weight	180 Grams
Product Dimensions (LxWxH)	14 x 7 x 10 Centimeters
Case Diameter	47.3 Millimetres (as per image)
Battery Type	1 Lithium Metal battery (included)
Country of Origin	India
Date First Available	31 January 2018



Visual representation of the watch's case diameter (47.3mm) compared to common objects like a 10 Rupee coin and a credit card, illustrating its size.

WARRANTY INFORMATION

Your Fastrack Analog-Digital Men's Watch is covered by a manufacturer's warranty. This warranty typically covers manufacturing defects for a period of **1 year** from the original date of purchase. Please refer to the warranty card or documentation included with your watch for the precise terms, conditions, and duration applicable to your specific product.

It is essential to retain your original purchase receipt or proof of purchase, as this will be required for any warranty claims or service requests.

CUSTOMER SUPPORT

For further assistance, technical support, service, or any inquiries regarding your Fastrack Analog-Digital Men's Watch, please contact Fastrack customer support or visit an authorized service center.

- **Manufacturer:** Fastrack, Titan Company Ltd

- **Manufacturer Address:** 3 Sipcot Industrial Complex, Hosur - 635126, India
- **Customer Service Telephone:** +91-(0)4344-664199
- **Online Support:** For frequently asked questions, product registration, and additional contact options, please visit the official Fastrack website.



The Fastrack Analog-Digital Men's Watch worn on a wrist, demonstrating its comfortable fit and stylish appearance during daily use.

© 2025 Fastrack. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question