

[Manuals.plus](#) /

› [Fastrack](#) /

› Fastrack Analog-Digital Watch NR38034NP01 User Manual

Fastrack NR38034NP01

Fastrack Analog-Digital Watch NR38034NP01 User Manual

INTRODUCTION

This user manual provides comprehensive instructions for the Fastrack Analog-Digital Watch, Model NR38034NP01. Please read this manual thoroughly before using your watch to ensure proper operation and to maximize its lifespan. Keep this manual for future reference.

PRODUCT OVERVIEW

The Fastrack Analog-Digital Watch NR38034NP01 features a durable black dial, a combination of analog hands and a digital display, and a comfortable silicone strap. It is designed for everyday wear with a water resistance of 50 meters.



Front view of the Fastrack Analog-Digital Watch, highlighting the black dial, analog hands, and digital display.



The Fastrack Analog-Digital Watch displayed on a wrist, showing its size and fit.

SETUP

1. Unboxing

Carefully remove the watch from its packaging. Inspect the watch for any visible damage. The package typically includes the watch and this instruction manual.





The Fastrack watch packaging, typically a black can, protecting the watch during transit.

2. Initial Time Setting (Analog)

1. Pull the crown (the knob on the side of the watch case) out to the first or second click position (refer to watch specific design).
2. Rotate the crown to move the analog hands to the correct time.
3. Push the crown back into its normal position to start the analog movement.

3. Initial Time Setting (Digital)

The digital display typically has multiple modes and buttons for adjustment. Common buttons are 'Mode', 'Reset', and 'Start/Light'.

1. Press the **Mode** button repeatedly until the time setting mode is displayed (often indicated by flashing digits).
2. Use the **Reset** or **Adjust** button to select the digit you wish to change (hours, minutes, seconds).
3. Use the **Start/Light** button to increase the value of the flashing digit.
4. Once the time is set, press the **Mode** button again to exit the setting mode.

OPERATING INSTRUCTIONS

1. Switching Digital Display Modes

Press the **Mode** button to cycle through different digital display functions such as:

- Time (Hour, Minute, Second)
- Date (Month, Day, Day of Week)
- Alarm
- Stopwatch

2. Using the Stopwatch

1. Navigate to the Stopwatch mode using the **Mode** button.
2. Press the **Start/Light** button to start the stopwatch.
3. Press the **Start/Light** button again to pause/resume.
4. Press the **Reset** button to reset the stopwatch to zero.

3. Water Resistance

This watch is water resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating buttons while the watch is wet or submerged to prevent water ingress.

MAINTENANCE

1. Cleaning

Wipe the watch case and strap regularly with a soft, dry cloth. For silicone straps, a mild soap solution and water can be used, followed by thorough rinsing and drying. Avoid harsh chemicals or abrasive materials.

2. Battery Replacement

The watch is powered by a Lithium Metal battery. When the display dims or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by an authorized service center to ensure proper sealing and water resistance.

3. Strap Care

Avoid prolonged exposure of the silicone strap to direct sunlight or extreme temperatures, which can cause material degradation. Clean the strap regularly to prevent accumulation of dirt and oils.

TROUBLESHOOTING

- **Watch Not Functioning:** Check if the battery needs replacement. If recently replaced, ensure it was installed correctly.
- **Incorrect Time Display:** Re-adjust both the analog and digital time settings as described in the Setup section.
- **Digital Display Dims or Flickers:** This often indicates a low battery. Seek professional battery replacement.
- **Water Inside Watch:** If moisture or condensation appears inside the watch, take it to an authorized service center immediately to prevent further damage.

SPECIFICATIONS



Diagram illustrating the dimensions of the Fastrack Analog-Digital Watch, including a comparison with a 10 Rupee coin and a credit card.

Feature	Detail
Model Number	NR38034NP01
Display Type	Analog-Digital
Movement Type	Quartz
Power Source	Battery Powered (1 Lithium Metal battery included)
Case Diameter	46.2 Millimetres
Case Thickness	11.9 Millimetres
Band Material	Silicone
Band Width	20 Millimetres
Band Colour	Black
Dial Colour	Black
Crystal Material	Mineral
Water Resistance Depth	50 Metres (5 ATM)
Item Weight	180 Grams
Product Dimensions	14 x 7 x 10 cm
Country of Origin	India

WARRANTY INFORMATION

This Fastrack watch comes with a 24-month manufacturer warranty covering manufacturing defects.

How to Avail Warranty:

To avail warranty service, present your original purchase invoice at any authorized Titan Service Center. No separate warranty card is required.

CUSTOMER SUPPORT

For further assistance, service-related queries, or warranty claims, please contact Fastrack customer support:

- **Toll-Free Number:** 1800-266-0123 (Available 10 AM to 7 PM, all days of the week)
- **Email:** customercare@titan.co.in

Manufacturer Contact Information: Titan Company Ltd, 3 Sipcot Industrial Complex, Hosur - 635126.

© 2023 Fastrack. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B079H9VFRT>

More documents and user manuals: <https://manuals.plus/>