

[Manuals.plus](#) /

> [Moultrie](#) /

> Moultrie Quick-Lock Directional Kit User Manual

Moultrie MFG-13264

Moultrie Quick-Lock Directional Kit

INSTRUCTION MANUAL

Product Overview

The Moultrie Quick-Lock Directional Kit (Model MFG-13264) is designed to enhance your feeding system with precise, directional feed distribution. Featuring durable ABS plastic housing and a wind-resistant metal spin plate, this kit ensures efficient and targeted feeding. Its Quick-Lock modular technology allows for tool-free connection to compatible hoppers, simplifying setup and maintenance.





Figure 1: Moultrie Quick-Lock Directional Kit.

The kit includes an Easy Set programmable digital timer, offering advanced control over feeding schedules. This timer allows for up to 10 feed times per day, with durations from 1 to 60 seconds, and adjustable spin cast settings (Hi/Med/Low). The directional shroud casts feed in a focused 30-degree range, making it ideal for specific areas like roads, pond edges, or trails where a 360-degree spread is not desired. An agitating spinner plate is integrated to improve feed flow and prevent clumping.

Setup Instructions

1. **Unpack Components:** Carefully remove all components from the packaging. Ensure you have the directional kit and any necessary mounting hardware.
2. **Battery Installation:** The kit requires one 6V battery (not included). Locate the battery compartment, typically on the underside of the unit. Connect the battery terminals securely.
3. **Attach to Feeder:** Utilize the Quick-Lock modular technology to attach the directional kit to your compatible Moultrie hopper or feeder. Align the kit with the feeder's base and twist until it locks securely into place. No tools are required for this step.



Figure 2: Attaching the directional kit to a feeder using Quick-Lock technology.

4. **Orient Directional Shroud:** Once attached, rotate the entire directional kit to ensure the 30-degree shroud is pointing in the desired direction for feed distribution. This is crucial for targeted feeding.

Operating Instructions

The Easy Set programmable digital timer provides comprehensive control over your feeding schedule.

1. **Accessing the Timer:** The digital timer is integrated into the unit. Refer to the display and control buttons for programming.
2. **Setting Current Time:** Use the navigation buttons (UP/DOWN/SET) to set the current time and day of the week.
3. **Programming Feed Times:** The timer allows for up to 10 daily feed times. For each feed time, you can set:
 - **Start Time:** The specific hour and minute for feeding.
 - **Duration:** How long the feeder will run (1-60 seconds).
 - **Days of the Week:** Select specific days for each feed time to occur.
 - **Spin Cast Settings:** Choose between Hi, Med, or Low spin cast settings to adjust the feed spread distance.



Figure 3: Programming the Easy Set digital timer.

4. **Monitoring:** The timer display includes a battery level indicator and a feed level estimator, providing real-time information on your feeder's status.

Maintenance

- **Cleaning:** Periodically clean the ABS plastic housing and the metal spin plate to prevent buildup of feed residue, which can affect performance. Ensure the agitating spinner plate is free of debris to maintain proper feed flow.
- **Battery Check:** Regularly check the battery level indicator on the digital timer. Replace the 6V battery as needed to ensure continuous operation.
- **Storage:** When not in use for extended periods, remove the battery and store the unit in a dry, cool place.

Troubleshooting

Problem	Possible Cause	Solution
Feeder not dispensing feed.	Low battery; clogged spinner plate; incorrect programming.	Check battery level and replace if low. Clear any obstructions from the spinner plate. Verify feed times and duration in timer settings.
Feed not spreading directionally.	Incorrect unit orientation; low spin cast setting.	Adjust the unit's position to point the shroud in the desired direction. Increase the spin cast setting (Hi/Med) in the timer.
Timer display is blank or erratic.	Dead or low battery; loose battery connection.	Replace the 6V battery. Ensure battery terminals are clean and securely connected.

Specifications

- **Model Name:** MFG-13264
- **Color:** Multicolor
- **Material:** Other (Durable ABS Plastic Housing)
- **Item Weight:** 0.01 Ounces
- **Item Dimensions (LxWxH):** 11.6 x 6.8 x 6.8 inches
- **Included Components:** Moultrie Quick-Lock Directional Kit
- **Power Source:** 6V Battery (not included)
- **Feed Distribution:** 30-degree directional cast
- **Timer:** Easy Set programmable digital timer (up to 10 daily feed times, 1-60 seconds duration, Hi/Med/Low spin cast settings)
- **Special Features:** Quick-Lock modular technology, Agitating spinner plate
- **Target Species:** Deer (suitable for various game and fish feeding)



Figure 4: Approximate dimensions of the directional kit.

Warranty and Support

This product is covered by a manufacturer's warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the documentation included with your purchase or visit the official Moultrie website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Moultrie customer service. You may also find additional resources and a downloadable user manual (PDF) on the Moultrie support page.

WARNING: This product can expose you to chemicals including Lead which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B079J7QZCF>

More documents and user manuals: **<https://manuals.plus/>**