

- Manuals.plus /
- > USARMT /
- > USARMT Remote Control Instruction Manual for Vizio Smart TVs (Model 8541714850)

USARMT 8541714850

USARMT Remote Control Instruction Manual for Vizio Smart TVs

Model: 8541714850

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your USARMT universal remote control for Vizio Smart TVs. This remote is designed to offer seamless control over a wide range of Vizio television models without the need for complex programming.

2. PRODUCT OVERVIEW

The USARMT remote control is a direct replacement or supplementary remote for various Vizio Smart TV models. It features a standard layout with dedicated buttons for common functions and popular streaming services.





Image 2.1: Front view of the USARMT remote control, showing all buttons including power, input, navigation, volume, channel, and dedicated app buttons for Vudu, Netflix, Hulu, Xumo, Crackle, and iHeartRadio.





Image 2.2: Side view of the USARMT remote control, illustrating its ergonomic design and slim profile.

3. SETUP: BATTERY INSTALLATION

This remote control requires two (2) AAA batteries (not included) for operation. No programming or pairing is required; simply insert the batteries, and the remote will be ready for use.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image 3.1: Rear view of the USARMT remote control with the battery cover removed, showing the two AAA battery slots.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the remote is ready to control your Vizio Smart TV. Point the remote directly at your TV's infrared sensor for optimal performance.

Basic Functions:

- **Power ():** Turns the TV on or off.
- **Input:** Cycles through available input sources (HDMI 1, HDMI 2, AV, etc.).
- **VOL (+/-):** Adjusts the volume level.
- **CH (+/-):** Changes the channel.
- **Mute ():** Mutes or unmutes the TV audio.

- **CC:** Activates or deactivates Closed Captions.
- **PIC:** Accesses picture settings.

Navigation and Menu:

- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms selections.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or application.
- **Menu:** Opens the TV's main menu.
- **Info:** Displays information about the current program or input.

Dedicated App Buttons:

Press these buttons to directly launch the corresponding streaming applications:

- **VUDU**
- **NETFLIX**
- **HULU**
- **XUMO**
- **CRACKLE**
- **iHeartRadio**

5. COMPATIBILITY

This USARMT remote control is compatible with a wide range of Vizio Smart TVs and replaces many original Vizio remote models. It supports VIZIO TV V/M/D/P/PX/E/OLED Series and Vizio LED/LCD/HD/4K/HDR/UHD Smart TVs.

Compatible Vizio TV Series and Remote Models include:

- D24F-F1, D32FF1, D43F-F1, D50F-F1
- E32D1, E32H-D1, E40D0, E43D2, E43E2, E43U-D2, E48D0, E48U-D0, E49U-D1, E50D1, E50E1, E50E3, E50U-D2, E50X-E, E55D0, E55E1, E55E2, E55U-D0, E55U-D2, E60E3, E60U-D3, E65D0, E65D1, E65E0, E65E1, E65E3, E65U-D1, E65U-D3, E70D3, E70E3, E70U-D3, E75E16, E75E3, E80E3, E80U-D3
- M50D1, M50E1, M55D0, M55E0, M60D1, M65D0, M65E0, M70D3, M70E3, M75E1, M80D3
- P50C1, P55C1, P55E1, P65C1, P65E1, P75C1, P75E1
- XRT112, XRT122, XRT302, XRT135, XRT510, XRT500, XRT100, XRT140, XRT136, VR1, VR2, VR10, VR15



Universal Remote for VIZIO Smart TV

Compatible with all VIZIO Smartcast TV Series M D P PX E Smart TVs.

Compatible with VIZIO XRT140 / XRT260 / XRT136 / XRT270 / XRT112 / XRT122 / XRT302 / XRT135 / XRT510 / XRT500 / XRT100 / VR1 / VR2 / VR10 / VR15 and More Remote Control models

Image 5.1: USARMT remote control alongside text highlighting its universal compatibility with Vizio Smartcast TV Series (M, D, P, PX, E) and various Vizio remote models.

6. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the remote. Avoid using liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

7. TROUBLESHOOTING

If you encounter issues with your USARMT remote control, refer to the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV.

- **Specific Buttons Not Working:**

- Clean the remote's surface, especially around the unresponsive buttons, to remove any dirt or debris.
- If only certain buttons are affected, it might indicate internal damage. Consider replacing the remote.

- **TV Not Responding to Remote:**

- Verify that your TV model is listed in the compatibility section (Section 5).
- Ensure the TV's own remote control (if available) is working, to rule out a TV issue.
- Power cycle your TV by unplugging it from the wall for 30 seconds, then plugging it back in.

8. SPECIFICATIONS

Feature	Detail
Model Number	8541714850
Product Dimensions	7 x 1.8 x 0.5 inches
Item Weight	2.08 ounces
Batteries Required	2 x AAA (not included)
Color	Black
Special Feature	Universal
Compatible Devices	Television (Vizio Smart TVs)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the USARMT customer service directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B079J9NQMN>

More documents and user manuals: <https://manuals.plus/>