

USARMT XRT136

Universal Remote Control XRT136

USER MANUAL

Model: XRT136 | Brand: USARMT

1. Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your USARMT Universal Remote Control, model XRT136. This remote is designed as a direct replacement for various VIZIO Smart TVs, offering seamless control without the need for complex programming.

2. Product Overview

The XRT136 remote control is compatible with a wide range of VIZIO LED, LCD, HD, 4K UHD, and HDR Smart TVs, including V/M/D/P/PX/E/OLED Series. It also replaces several VIZIO remote models such as XRT112, XRT122, XRT302, XRT135, XRT510, XRT500, XRT100, XRT140, VR1, VR2, and VR10/VR15.



Figure 2.1: Front, side, and back views of the XRT136 Universal Remote Control, highlighting its sleek design and button layout.

Key features include dedicated app keys for popular streaming services like Hulu, Netflix, Vudu, iHeart Radio, Crackle, and XUMO, providing quick access to your favorite entertainment.

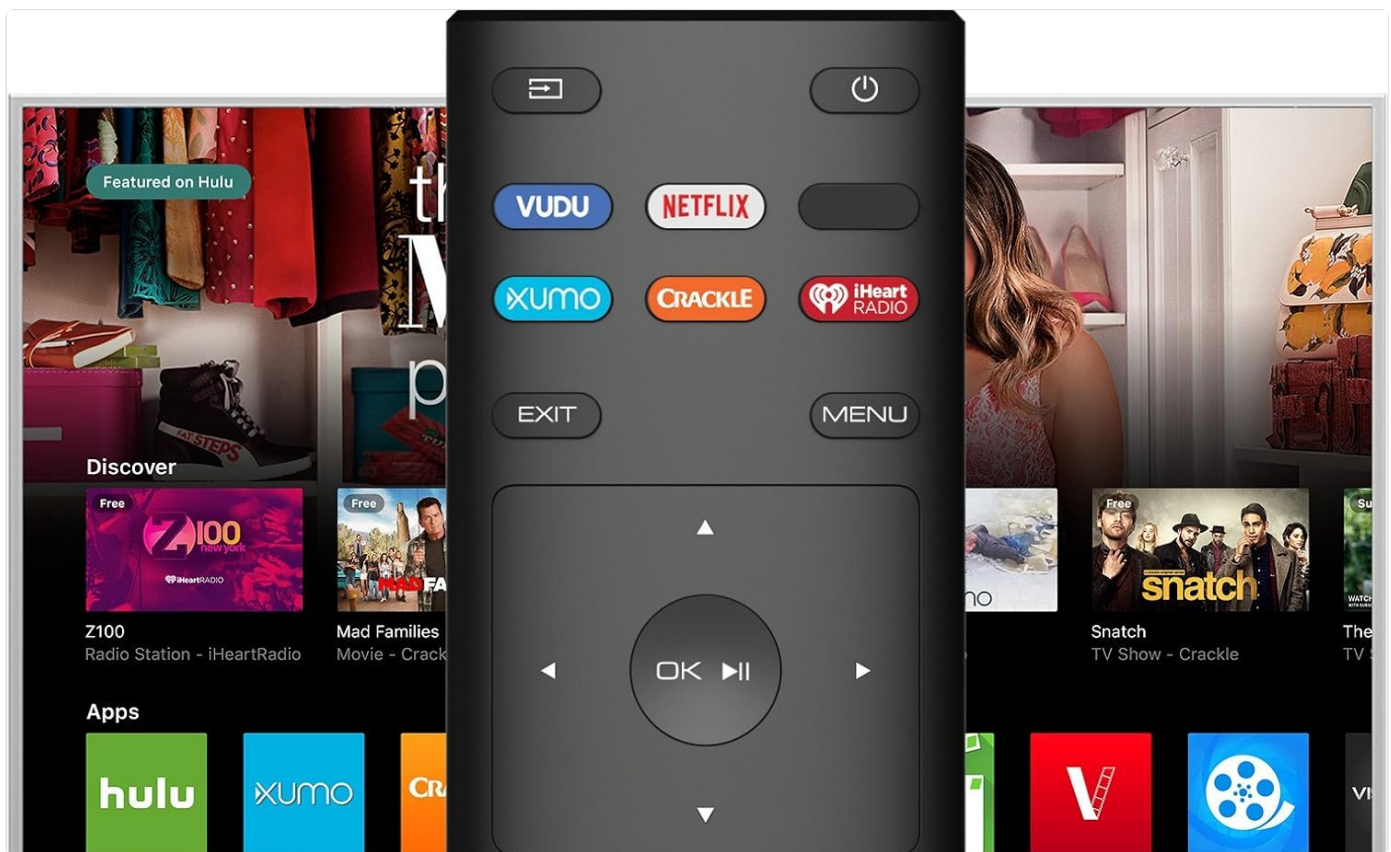


Figure 2.2: The XRT136 remote control shown in context with a VIZIO Smart TV interface, illustrating the direct access buttons for streaming applications.

3. Setup

The XRT136 remote control is designed for immediate use with compatible VIZIO TVs. No programming or pairing is required.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AAA 1.5V batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 3.1: View of the battery compartment on the back of the XRT136 remote, indicating the correct orientation for AAA battery insertion.

Note: Batteries are not included with the remote control.

4. Operating Instructions

Once batteries are installed, the remote is ready to control your VIZIO Smart TV.

- **Power Button ():** Press to turn the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **App Keys (VUDU, NETFLIX, HULU, XUMO, CRACKLE, iHeart Radio):** Press these dedicated buttons for direct access to the respective streaming applications.
- **Navigation Pad (Up, Down, Left, Right, OK):** Use the directional arrows to navigate menus and select options. Press **OK** to confirm a selection.

- **Back Button:** Returns to the previous screen or menu.
- **Menu Button:** Opens the TV's main menu.
- **Volume Up/Down (VOL +/-):** Adjusts the TV's volume level.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute Button (M):** Mutes or unmutes the TV's audio.
- **Number Pad (0-9):** Used for direct channel entry or inputting numbers in certain applications.

5. Maintenance

5.1 Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries simultaneously with new AAA 1.5V batteries.

5.2 Cleaning

To clean the remote, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote's finish or internal components.

5.3 Storage

Store the remote in a dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

6. Troubleshooting

- **Remote not responding:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Ensure you are within the effective range of the TV's IR receiver.
- **Specific buttons not working:**
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any debris.
 - If only app buttons are not working, ensure your TV is connected to the internet and the apps are properly installed and updated on your VIZIO Smart TV.

7. Specifications

Feature	Detail
Model Number	XRT136 (Item Model Number: 43223-1045)
Brand	USARMT
Compatible Devices	VIZIO LED LCD HD 4K UHD HDR Smart TVs (V/M/D/P/PX/E/OLED Series)
Connectivity Technology	Infrared (IR)

Controller Type	Button Control
Power Supply	2 x AAA 1.5V Batteries (not included)
Item Weight	2.4 ounces (approx. 68 grams)
Package Dimensions	5.3 x 1.9 x 0.6 inches (approx. 13.5 x 4.8 x 1.5 cm)
Date First Available	February 2, 2018

8. Warranty and Support

For information regarding warranty coverage or technical support for your USARMT Universal Remote Control, please refer to the manufacturer's official website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

For general inquiries or troubleshooting tips, you may also visit the product page on the retailer's website where you purchased the item.

© 2024 USARMT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B079JCK1MY>

More documents and user manuals: <https://manuals.plus/>