

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ORORO](#) /
- › [ORORO Men's Heated Jacket with Detachable Hood Instruction Manual](#)

ORORO Heated Jacket with Detachable Hood

ORORO Men's Heated Jacket Instruction Manual

Model: Heated Jacket with Detachable Hood

1. INTRODUCTION

Thank you for choosing the ORORO Men's Heated Jacket. This manual provides essential information for the safe and effective use of your new heated apparel. Please read all instructions carefully before use and retain this manual for future reference.

2. PRODUCT OVERVIEW AND FEATURES

The ORORO Men's Heated Jacket is designed to provide warmth and comfort in cold conditions. Key features include:

- **Durable Fabric:** Softshell exterior with breathable lining for heat retention and comfort.
- **Detachable Hood:** Provides additional protection against wind and cold.
- **Water and Wind Resistance:** Suitable for various outdoor activities.
- **Three Heating Zones:** Carbon fiber heating elements located across the left chest, right chest, and mid-back.
- **Adjustable Heat Settings:** Three levels (High, Medium, Low) controlled by a single button.
- **Long-Lasting Battery:** Powered by a 7.4V UL/CE-certified battery, offering up to 10 hours of warmth.
- **USB Charging Port:** Integrated USB port for charging mobile devices.
- **Easy Care:** Machine washable design.

PREMIUM DESIGN DETAILS



Durable YKK Zipper



Secure Zipper Pocket



Detachable Hood



Adjustable Hem

Image: Premium design details of the ORORO heated jacket, highlighting the YKK zipper, secure pockets, detachable hood, and adjustable hem.

HIGH PERFORMANCE FABRIC



**WATER
RESISTANT**



WINDPROOF



DURABLE

Image: High-performance fabric features of the jacket, demonstrating its water-resistant, windproof, and durable qualities.

3. SETUP

1. **Charge the Battery:** Fully charge the 7.4V battery using a compatible USB-A port charger (charger not included). The battery indicator lights will show charging progress.
2. **Connect the Battery:** Locate the power cable inside the jacket pocket. Connect the fully charged battery to this

cable.

3. **Insert Battery:** Place the connected battery securely into the designated battery pocket.

TRUSTED POWER, LONG-LASTING WARMTH



UL Listed Safety
Certificate No: E502395



15+
Security Testing



Compact Design



Powered by leading
brand battery cells

Charger is not included. Please use your own compliant USB-A port chargers.

Image: The ORORO battery pack, emphasizing its UL Listed safety certification and compact design, powered by leading brand battery cells.

4. OPERATING INSTRUCTIONS

1. **Power On:** Press and hold the power button on the jacket's chest for 3 seconds. The LED indicator will light up, typically starting on High (Red).
2. **Adjust Heat Settings:** Press the power button briefly to cycle through the heat settings:
 - **High (Red LED):** Approximately 130°F (54°C) - up to 3 hours of warmth.
 - **Medium (White LED):** Approximately 105°F (40°C) - up to 6 hours of warmth.
 - **Low (Blue LED):** Approximately 95°F (35°C) - up to 10 hours of warmth.
3. **Power Off:** Press and hold the power button for 3 seconds until the LED indicator turns off.
4. **Charging Mobile Devices:** Connect your mobile device to the USB port on the battery pack. Ensure the jacket's battery is sufficiently charged.

HEAT ON DEMAND



HIGH

Red LED 130 °F



MEDIUM

White LED 105 °F



LOW

Blue LED 95 °F



Image: Heat on demand settings, displaying battery duration and temperature for High, Medium, and Low settings, along with the location of the three heating elements.

5. MAINTENANCE

Washing Instructions:

1. Disconnect and remove the battery from the jacket pocket before washing.
2. Zip up all zippers and secure any drawstrings.
3. Machine wash cold on a gentle cycle with mild detergent.
4. Do not bleach, iron, or dry clean.
5. Tumble dry low or hang dry. Ensure the jacket is completely dry before reconnecting the battery.

Battery Care and Storage:

- Charge the battery fully every 3-6 months to maintain its lifespan, even if not in use.
- Store the battery in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not puncture, drop, or disassemble the battery.

6. TROUBLESHOOTING

- **Jacket not heating:**
 - Ensure the battery is fully charged and securely connected to the jacket's power cable.
 - Press and hold the power button for 3 seconds to turn on the jacket.
 - Check if the LED indicator on the jacket is lit. If not, try recharging the battery.
- **Battery not charging:**
 - Verify that the charger and charging cable are functioning correctly.
 - Ensure the battery is connected properly to the charger.
 - If the issue persists, contact customer support.
- **Heat feels inconsistent:**
 - The jacket uses NTC precision control for consistent heating. If you experience significant inconsistencies, ensure the jacket is worn snugly to allow heating elements to contact the body effectively.
 - If the problem continues, contact customer support.

7. SPECIFICATIONS

- **Fabric Composition:** 90% Polyester, 10% Spandex
- **Power Source:** 7.4V UL/CE-certified rechargeable battery
- **Heating Elements:** Carbon fiber (3 zones: left chest, right chest, mid-back)
- **Heat Settings:** High (Red), Medium (White), Low (Blue)
- **Care Instructions:** Machine Wash (remove battery first)

Size Information:

US Body Size (inches)

Brand Size	Chest (in)	Waist (in)	Hip (in)
Small	35 - 37	28 - 31	36 - 38
Medium	38 - 40	32 - 35	39 - 41
Large	41 - 44	36 - 39	42 - 45
X-Large	45 - 48	40 - 43	46 - 49
XX-Large	49 - 51	44 - 47	50 - 52
3X-Large	52 - 54	48 - 51	53 - 55

MEN'S JACKET SIZE INFO

BODY SIZE (inch)	CHEST	WAIST	HIP	
S	35-37	28-31	36-38	
M	38-40	32-35	39-41	
L	41-44	36-39	42-45	
XL	45-48	40-43	46-49	
2XL	49-51	44-47	50-52	
3XL	52-54	48-51	53-55	

CLOTHING SIZE (inch)	CHEST	WAIST	HIP	LENGTH
S	43.3	41.3	40.9	26.4
M	46.5	44.5	44.1	27.2
L	49.6	47.6	47.2	28.0
XL	52.8	50.8	50.4	28.7
2XL	55.9	53.9	53.5	29.5
3XL	59.1	57.1	56.7	30.3

Please allow 0.5-1 inch deviations due to manual measurement.

Image: Men's jacket size information, providing both body and clothing measurements to assist in selecting the correct size.

8. SAFETY INFORMATION

- Do not use this product if you have a pacemaker, are pregnant, have circulatory problems, or are sensitive to heat. Consult a physician before use if you have any medical conditions.
- Do not use on infants, children, incapacitated individuals, or anyone insensitive to heat.

- Avoid using the jacket in extremely wet conditions or submerging the battery in water.
- If the jacket becomes excessively hot or uncomfortable, turn it off immediately.
- Do not modify the heating elements or wiring.
- Always remove the battery before washing or storing the jacket for extended periods.
- Use only the specified ORORO battery pack. Using unauthorized batteries may cause damage or injury.



Image: Durability and reliability features, showing premium carbon fiber designed to withstand over 10,000 bends and NTC precision control for safe, consistent heating.

9. WARRANTY AND SUPPORT

ORORO products are designed for quality and durability. For warranty information, product support, or any questions not covered in this manual, please visit the official ORORO website or contact their customer service directly. Please have your product model and purchase date available when contacting support.

ORORO Customer Service: [Visit the ORORO Store on Amazon](#)