

Indesit 91200489

Indesit Dishwasher Anti-Interference Filter (Part No. 91200489) User Manual

1. INTRODUCTION

This manual provides essential information for the installation, maintenance, and troubleshooting of the Indesit Dishwasher Anti-Interference Filter, part number 91200489. This component is designed to reduce electrical noise and interference that can affect the proper operation of your dishwasher and other household appliances. Please read this manual carefully before attempting any installation or repair.

2. SAFETY INFORMATION

WARNING: Risk of Electric Shock!

- Always disconnect the dishwasher from the main power supply before attempting any installation, repair, or maintenance.
- Installation should only be performed by a qualified technician or a person with adequate electrical knowledge.
- Ensure all connections are secure and properly insulated to prevent electrical hazards.
- Do not operate the dishwasher if the filter or any electrical component is damaged.
- Keep children and pets away from the appliance during installation and repair.

3. PRODUCT DESCRIPTION

The Indesit Anti-Interference Filter (Part No. 91200489) is an original replacement part compatible with various dishwashers, including models from Candy and Gias. Its primary function is to suppress electromagnetic interference (EMI) and radio-frequency interference (RFI) generated by the dishwasher's electrical components, ensuring stable operation and preventing disruption to other electronic devices in your home.



Figure 1: Indesit Dishwasher Anti-Interference Filter (Part No. 91200489). This image displays the light grey rectangular component with multiple metal spade terminals on its top surface and a metal mounting bracket extending from one side. The side of the component shows printed specifications and compliance marks.

4. INSTALLATION GUIDE

This section provides general guidance for replacing the anti-interference filter. Always refer to your specific dishwasher's service manual for detailed, model-specific instructions.

4.1 Tools Required

- Screwdriver set (Phillips and flathead)
- Pliers (for disconnecting terminals, if necessary)
- Multimeter (optional, for testing continuity)
- Work gloves (recommended)

4.2 Installation Steps

1. **Disconnect Power:** Unplug the dishwasher from the electrical outlet or turn off the circuit breaker supplying power to the appliance. Verify power is off using a voltage tester.
2. **Access the Component:** Depending on your dishwasher model, you may need to remove the front access panel, side panels, or the control panel to locate the existing anti-interference filter. This component is typically found near the power cord's entry point into the appliance.
3. **Identify Connections:** Carefully note or photograph the wiring connections to the existing filter. There will typically be input wires from the power supply and output wires leading to the dishwasher's internal components.
4. **Remove Old Filter:** Disconnect the wires from the old filter. Then, unmount the filter from its housing or bracket.
5. **Install New Filter:** Mount the new Indesit Anti-Interference Filter (Part No. 91200489) in the same location and orientation as the old one.
6. **Connect Wiring:** Reconnect the wires to the new filter, ensuring they match the original configuration. Double-check all connections for tightness and proper insulation.

7. **Reassemble Dishwasher:** Replace any panels or covers that were removed.
8. **Restore Power:** Plug the dishwasher back into the electrical outlet or turn on the circuit breaker.
9. **Test Operation:** Run a short cycle to ensure the dishwasher operates correctly and there are no immediate issues.

5. MAINTENANCE

The anti-interference filter is a sealed electronic component and is not designed for user maintenance or repair. If the filter is suspected to be faulty, it should be replaced with a new, genuine part.

6. TROUBLESHOOTING

A faulty anti-interference filter can manifest in several ways. If you experience any of the following symptoms, consider inspecting or replacing the filter:

- **Dishwasher Not Starting:** In some cases, a completely failed filter can prevent the dishwasher from receiving power.
- **Electrical Interference:** Other electronic devices (e.g., radios, televisions) in your home experience static or disruption when the dishwasher is running.
- **Intermittent Operation:** The dishwasher starts and stops unexpectedly.
- **Burning Smell or Visible Damage:** Immediately disconnect power if you notice a burning smell or visible damage to the filter.

If troubleshooting indicates a faulty filter, replace it following the installation steps outlined in Section 4.

7. SPECIFICATIONS



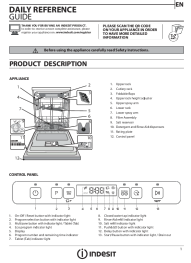
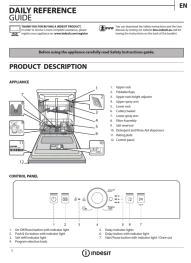
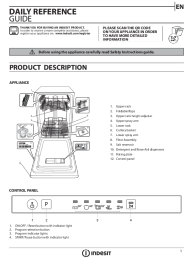
Attribute	Value
Brand	Indesit
Model / Part Number	91200489
Dimensions (L x W x H)	17.8 x 11.5 x 3.3 cm (approximate package dimensions)
Item Weight	20 g
ASIN	B079JVFNP4
First Available Date	18 May 2017

8. WARRANTY AND SUPPORT

This anti-interference filter is an original replacement part. Warranty coverage for replacement parts typically varies by seller and manufacturer. Please retain your proof of purchase. For specific warranty details or technical support, contact the retailer from whom you purchased the part or refer to the official Indesit support channels.

For further assistance, you may visit the [Indesit Store on Amazon](#).

Related Documents - 91200489

	<p>Indesit DIF 16T1: Istruzioni per l'uso e Guida alla Lavastoviglie</p> <p>Manuale completo di istruzioni per l'uso della lavastoviglie Indesit modello DIF 16T1. Include informazioni su installazione, funzionamento, manutenzione, programmi e risoluzione problemi.</p>
	<p>Indesit DSIO 3M24 C S Dishwasher Technical Specifications and Energy Label</p> <p>Comprehensive technical specifications, main features, technical features, and energy label details for the Indesit DSIO 3M24 C S built-in dishwasher.</p>
	<p>Indesit Dishwasher Daily Reference Guide: Features, Programs, Operation, and Troubleshooting</p> <p>A comprehensive guide for Indesit dishwashers, covering first-time setup, salt and rinse aid filling, detergent usage, program selection, options, loading instructions, daily operation, care and maintenance, and troubleshooting common issues.</p>
	<p>Indesit Dishwasher Daily Reference Guide</p> <p>User guide for Indesit dishwashers, providing essential information on product description, first-time use, salt, rinse aid, and detergent, program selection, options, rack loading, daily operation, advice, care, maintenance, and troubleshooting.</p>
	<p>Indesit Dishwasher Daily Reference Guide</p> <p>This guide provides essential information for Indesit dishwasher users, covering setup, operation, maintenance, and troubleshooting. Learn about programs, loading racks, energy saving tips, and how to care for your appliance.</p>



DFG 15B1

- Contents
- Product Fit, 2
- Precautions and advice, 3
 - General advice
 - Using energy and sequencing exercises
- Introduction and Assistance, 4-6
 - Posturing and sitting
 - How to sit (with or without cushions)
 - Notes regarding the 10-inch cushion
 - Conclusion
- Description of the appliance, 6
 - Control panel
- Loading the coils, 7-8
 - Coils loaded
 - Coils not loaded
 - Notes for the operator
- Startup and use, 9
 - Operating instructions
 - Warning: working safely
- Technical cycles, 10
 - Notes on cycles
- Remove and collect coils, 11
 - Notes on cycles
 - Warning: working safely
- Care and maintenance, 12
 - General care and recommended supplies
 - Cleaning the disinfectant
 - Disinfectant solution
 - Cleaning the top cover
 - Cleaning the coils
 - Warning: the coils
 - Warning: the heat
- Touchscreen, 13



Indesit DFG 15B1 Dishwasher Operating Instructions

User manual for the Indesit DFG 15B1 dishwasher, covering installation, operation, maintenance, safety precautions, and troubleshooting.