

[Manuals.plus](#) /

› [Wildgame Innovations](#) /

› Wildgame Innovations Vision 16 Lightsout Game Trail Camera Instruction Manual

Wildgame Innovations SG_B079K55DB8_US

Vision 16 Lightsout Game Trail Camera

INSTRUCTION MANUAL

Introduction

Welcome to the instruction manual for your Wildgame Innovations Vision 16 Lightsout Game Trail Camera. This camera is designed to capture high-quality images and videos of wildlife with its 16MP resolution and 720p video capabilities. Featuring a 70-foot flash range and a rapid 1/2 second trigger speed, it ensures you don't miss any action. The Silent Shield Technology minimizes operational noise, making it ideal for discreet observation. This package includes an 8GB SD card and 8 AA batteries to get you started.

Package Contents

Please verify that all items listed below are present in your package:

- Wildgame Innovations Vision 16 Lightsout Game Trail Camera
- 8GB SD Card
- 8 AA Batteries



This image displays the Wildgame Innovations Vision 16 Lightsout Game Trail Camera. The camera is black with a textured front panel and a small screen visible at the bottom. To the right of the camera are eight Duracell AA batteries and a SanDisk 8GB SD card, indicating the included accessories.

Setup

Battery Installation

Locate the battery compartment on the camera. Insert 8 AA alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment. Close the compartment securely to prevent moisture ingress.

SD Card Installation

Open the SD card slot cover. Insert the provided 8GB SD card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation. Close the cover firmly.

Mounting the Camera

Select a suitable location for your camera, such as a tree or post. Use the included mounting strap or a compatible mounting accessory to secure the camera firmly. Position the camera to capture the desired area, ensuring it is stable and not prone to movement from wind or animals.

Operating Instructions

Powering On/Off

To power on the camera, locate the power switch and slide it to the 'ON' position. The camera's display screen will illuminate. To power off, slide the switch to the 'OFF' position.

Basic Settings

Navigate through the camera's menu using the control buttons. Key settings include:

- **Mode:** Select between Photo, Video, or Photo+Video mode.
- **Resolution:** Set photo resolution (up to 16MP) and video resolution (720p).
- **Trigger Delay:** Adjust the time interval between detections.
- **Flash Range:** The camera features a 70-foot flash range for night captures.

- **Silent Shield Technology:** This feature operates automatically to minimize operational sounds during capture.

Capturing Images/Videos

Once settings are configured and the camera is in 'ON' mode, it will automatically detect motion and capture images or videos based on your selected mode. The 1/2 second trigger speed ensures quick capture of moving subjects.

Retrieving Data

To retrieve captured data, power off the camera and remove the SD card. Insert the SD card into a compatible card reader connected to a computer or other device to view and transfer files.

Maintenance

- **Cleaning:** Gently wipe the camera lens and housing with a soft, dry cloth to remove dirt and debris. Avoid using abrasive cleaners.
- **Battery Replacement:** Replace all 8 AA batteries when the low battery indicator appears on the display or when performance degrades. Always use fresh, high-quality alkaline batteries.
- **SD Card Management:** Periodically format the SD card within the camera's settings to maintain optimal performance and prevent data corruption. Back up important files before formatting.
- **Storage:** When not in use, store the camera in a cool, dry place, away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.

Troubleshooting

- **Camera not powering on:** Ensure batteries are correctly inserted and fully charged. Check that the power switch is in the 'ON' position.
- **Night videos are blacked out:** Verify that the camera's infrared (IR) LEDs are not obstructed. Ensure the camera is positioned within the effective flash range (70 feet) for night captures. Check battery levels, as low power can affect IR performance.
- **Slow trigger speed / Missed captures:** Confirm that the camera's firmware is up to date (if applicable, check manufacturer's website). Ensure the SD card is not full or corrupted; try formatting the card. Adjust camera sensitivity settings if available.
- **Poor image/video quality:** Clean the camera lens. Ensure the camera is stable and not subject to vibrations. Check resolution settings and adjust as needed.
- **SD card error:** Reinsert the SD card. Try formatting the card (after backing up data). If the issue persists, try a different compatible SD card.

Specifications

Feature	Detail
Manufacturer	Wildgame Innovations
Model Number	SG_B079K55DB8_US

Item Weight	667 g
Material	Metal
Power Source	Battery Powered
Batteries Required	8 AA batteries
Battery Cell Type	Alkaline
Type of Bulb	Infrared
First Available Date	Feb. 7 2018

Warranty and Support

For information regarding product warranty, technical support, or service inquiries, please refer to the official Wildgame Innovations website or contact their customer service department directly. Keep your purchase receipt as proof of purchase for any warranty claims.