

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Victrola](#) /

› [Victrola Outdoor Rock Speaker \(Pair\) ITSBO-513P5 Instruction Manual](#)

Victrola ITSBO-513P5

Victrola Outdoor Rock Speaker (Pair) ITSBO-513P5 Instruction Manual

Model: ITSBO-513P5

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Victrola Outdoor Rock Speakers. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the speakers to extreme temperatures, direct sunlight for prolonged periods, or excessive humidity.
- The speakers are IPX4 splash-resistant, meaning they can withstand splashes of water from any direction. However, they are not waterproof and should not be submerged in water. Avoid direct exposure to heavy rain or prolonged wet conditions.
- Keep the speakers away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Clean only with a dry cloth.
- Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 2 x Victrola Outdoor Bluetooth Rock Speakers
- 2 x Micro USB to USB Charging Cables
- 2 x USB Wall Adapters
- 1 x User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Victrola Outdoor Rock Speakers.

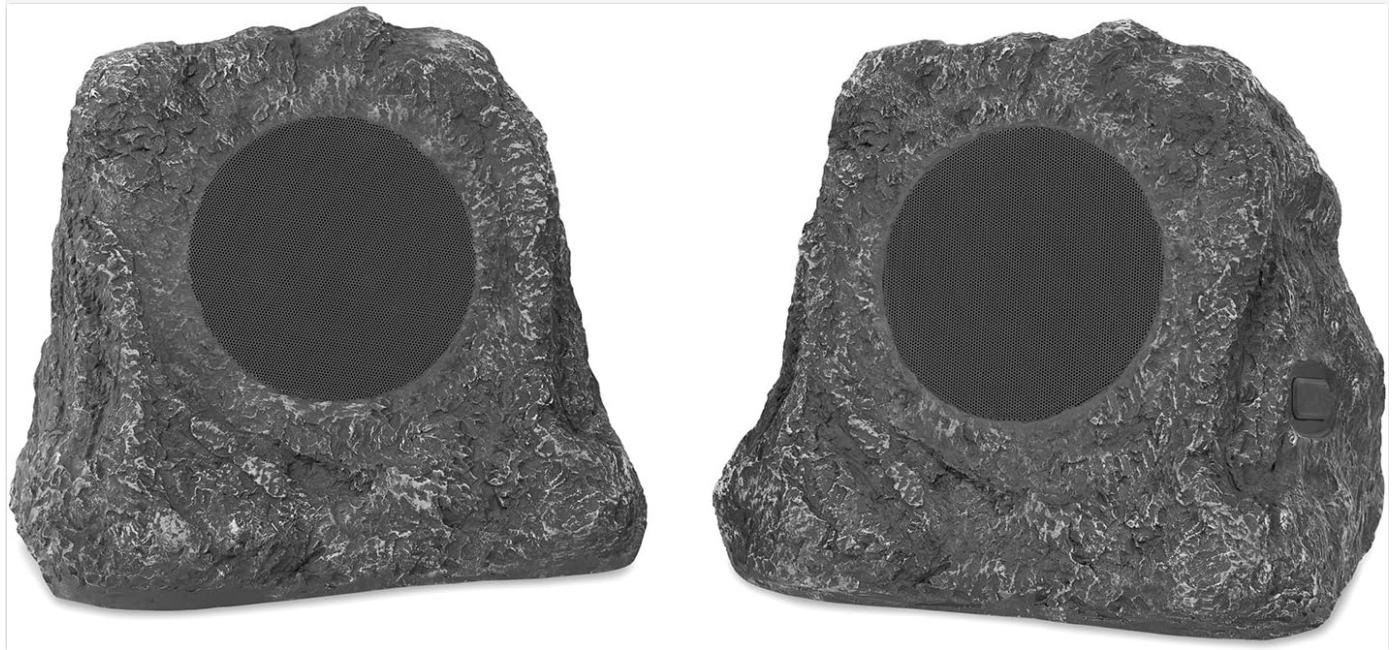


Image: Front view of two Victrola Outdoor Rock Speakers, showcasing their rock-like design and speaker grilles.



Bluetooth Connection

Up to 33 feet



Image: Close-up of the speaker's control panel, showing the power button, charging port, and indicator light, protected by a rubber flap.

Controls and Ports:

- **Power Button:** Press and hold to turn the speaker on or off.
- **Micro USB Charging Port:** Used for charging the speaker's internal battery.
- **LED Indicator Light:** Displays charging status and Bluetooth pairing status.

5. SETUP

5.1 Charging the Speakers

Before initial use, fully charge both speakers. A full charge takes approximately 6 hours and provides up to 30 hours of playback.

1. Locate the rubber flap on the side of each speaker and open it to reveal the Micro USB charging port.
2. Connect one end of the Micro USB charging cable to the speaker's charging port and the other end to the USB wall

adapter.

3. Plug the USB wall adapter into a power outlet.
4. The LED indicator light will illuminate during charging and turn off once fully charged.

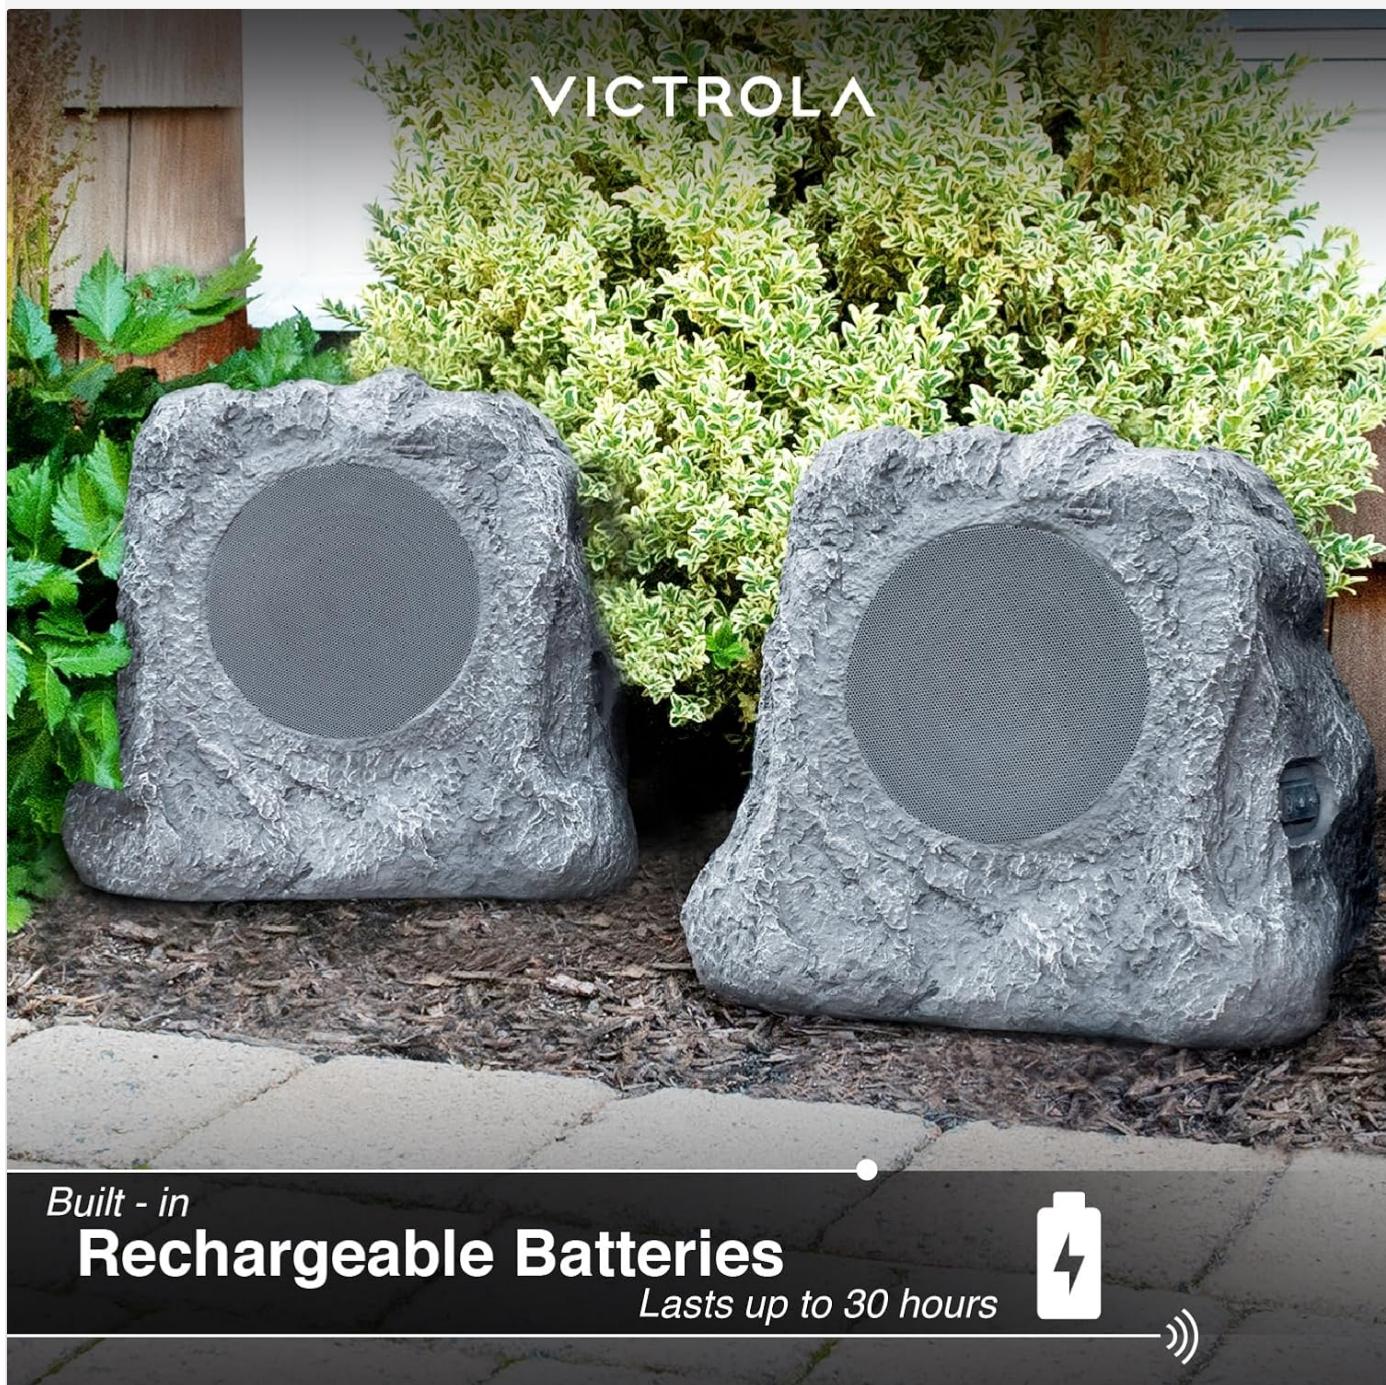


Image: Two Victrola Rock Speakers placed in a garden, illustrating their wireless nature and rechargeable battery feature.

5.2 Powering On/Off

- To power on: Press and hold the Power Button on each speaker until the LED indicator light flashes.
- To power off: Press and hold the Power Button on either speaker. Both speakers will power off if they are paired in True Wireless Stereo (TWS) mode.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Pairing (Single Speaker)

To connect a single speaker to your Bluetooth-enabled device:

1. Ensure the speaker is charged and powered on. The LED indicator will flash, indicating it's in pairing mode.
2. On your smart device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Victrola Rock Speaker" from the list of devices.
4. Once connected, the LED indicator light will stop flashing and remain solid.

6.2 True Wireless Stereo (TWS) Pairing (Two Speakers)

For a stereo sound experience, you can pair both Victrola Rock Speakers together.

1. Place both speakers within close proximity to each other (e.g., 3-5 feet).
2. Power on both speakers. They will automatically attempt to pair with each other.
3. Once successfully paired in TWS mode, one speaker will act as the master (left channel) and the other as the slave (right channel). The LED indicator on the master speaker will flash, while the slave speaker's LED will be solid.
4. Now, connect your Bluetooth-enabled device to the master speaker (the one with the flashing LED) as described in Section 6.1.
5. Both speakers will now play audio in stereo.

Note: If the speakers do not pair automatically, power them off and on again, ensuring they are close to each other.

6.3 Playing Audio

After successful Bluetooth pairing, simply start playing audio from your connected device. The sound will be transmitted wirelessly to your Victrola Rock Speakers.


7. MAINTENANCE

7.1 Cleaning

- Wipe the exterior of the speakers with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

7.2 Storage

- When not in use for extended periods, store the speakers in a cool, dry place.
- Ensure the speakers are fully charged before storing to maintain battery health.

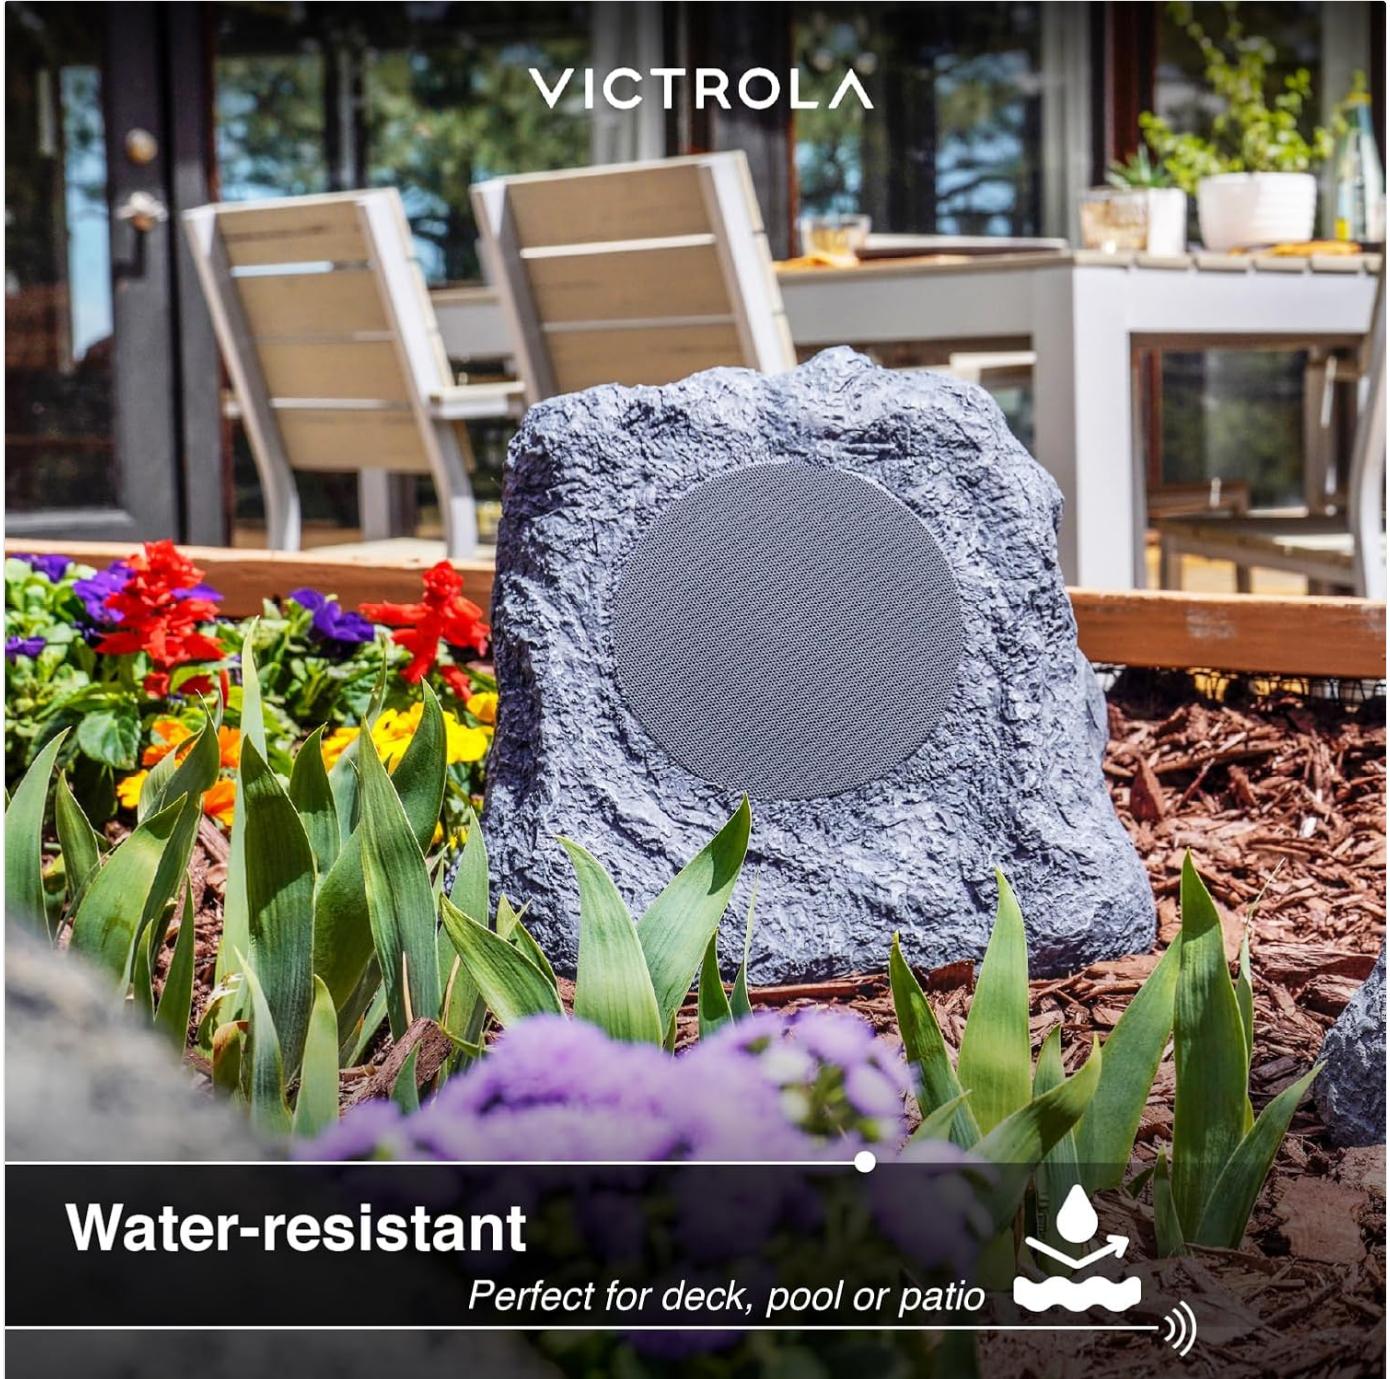A photograph of a Victrola Rock Speaker integrated into a garden landscape. The speaker is shaped like a large, dark blue-grey rock with a textured surface. It is positioned in a flower bed with various colorful flowers (red, yellow, purple) and green foliage in the foreground. In the background, there is a wooden deck with two wooden chairs and a small table with a drink and a book. The brand name 'VICTROLA' is displayed in white capital letters at the top of the image.

VICTROLA

Water-resistant

Perfect for deck, pool or patio



Image: A single Victrola Rock Speaker integrated into a garden landscape, emphasizing its splash-resistant design suitable for outdoor environments.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the provided USB cable and adapter.
Cannot pair via Bluetooth.	Speaker is not in pairing mode; device Bluetooth is off; speaker is already connected to another device; too far from device.	Ensure speaker is powered on and LED is flashing. Turn Bluetooth on your device. Disconnect from other devices. Move device closer to speaker (within 33 feet/10 meters).


Problem	Possible Cause	Solution
Speakers do not pair in TWS mode.	Speakers are too far apart; one speaker is already paired to a device.	Ensure speakers are close to each other. Power both speakers off and on again. Ensure no device is connected to either speaker before TWS pairing.
No sound or distorted sound.	Volume too low; device not connected; interference.	Increase volume on both speaker and connected device. Re-pair Bluetooth. Move speakers away from other electronic devices.

9. SPECIFICATIONS

Feature	Detail
Model Name	ITSBO-513P5
Brand	Victrola
Speaker Type	Outdoor
Connectivity Technology	Bluetooth
Wireless Range	Up to 33 feet (10 meters)
Power Source	Battery Powered (2 Lithium Ion batteries included)
Battery Capacity	5200 mAh (per speaker, estimated from product data)
Charging Time	Approximately 6 hours
Playback Time	Up to 30 hours (on a full charge)
Speaker Maximum Output Power	5 Watts (per speaker)
Water Resistance	IPX4 Splash Resistant (not waterproof)
Product Dimensions (each)	10.5" Tall x 10.25" Wide x 8" Deep
Item Weight (each)	Approximately 6.6 lbs (13.2 lbs for the pair)

WEATHERPROOF

Works in Rain, Snow or Harsh Sun

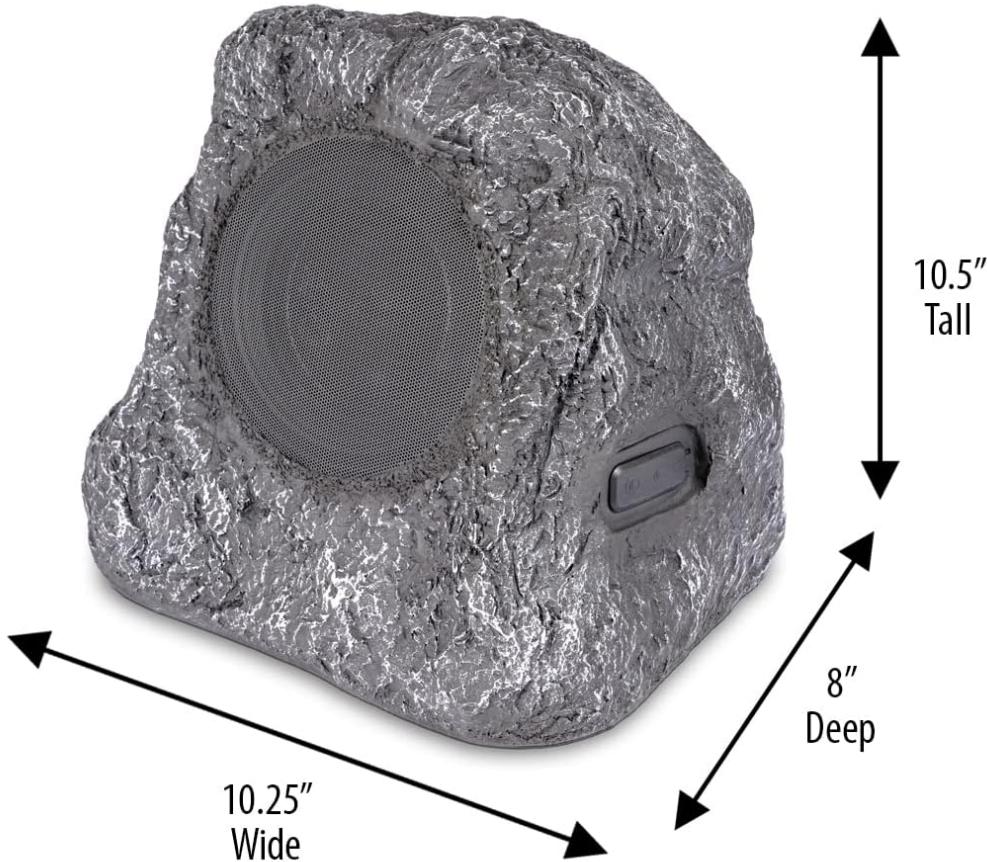

33' BLUETOOTH® RANGE



WIRELESS



14 HOURS PER CHARGE

Image: A single Victrola Rock Speaker with its height (10.5"), width (10.25"), and depth (8") clearly indicated.

10. WARRANTY AND SUPPORT

Victrola products come with a limited warranty. For specific warranty details, please refer to the warranty card included in your product packaging or visit the official Victrola website.

For technical support, troubleshooting assistance, or replacement parts, please contact Victrola customer service. Contact information can typically be found on the Victrola website or in your product packaging.

Note on Videos: No official seller videos were provided in the product data for embedding in this manual.