

Remington HC5100

Remington My Groom HC5100 Hair Clipper User Manual

Model: HC5100

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use, maintenance, and care of your Remington My Groom HC5100 Hair Clipper. Please read all instructions carefully before using the appliance and retain for future reference.



Figure 1: Remington My Groom HC5100 Hair Clipper and packaging.

2. SAFETY INFORMATION

To reduce the risk of electric shock, burns, fire, or injury, always follow these basic safety precautions:

- Do not immerse the appliance in water or other liquids.
- Keep the appliance dry. Do not use it in a bathroom or near water.

- Always unplug the appliance immediately after use and before cleaning.
- Do not use the appliance with a damaged cord or plug.
- Keep the cord away from heated surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual.

3. PRODUCT OVERVIEW

The Remington My Groom HC5100 Hair Clipper features self-sharpening stainless steel blades and a powerful motor for efficient hair cutting. It includes an adjustable comb for various length settings.

REMINGTON®

MYGROOM

HAIR CLIPPER



2X
CUTTING
PERFORMANCE*

**Pro Power
Motor**
for 2x cutting
performance*

*Vs. standard Remington
Hair clipper

**Self-Sharpening
Stainless Steel
Blades**



Selbstschärfende Edelstahlklingen
Lames auto-affutées en acier inoxydable



Figure 2: Key features of the Remington My Groom HC5100 Hair Clipper, including stainless steel blades, self-sharpening function, comb guide, and Pro Power Motor.

Components:

- Hair Clipper Unit
- Adjustable Comb Guide
- Cleaning Brush

- Lubricating Oil
- Power Cord (detachable)



Figure 3: Detailed view of the self-sharpening stainless steel blades.

4. SETUP

Before first use, ensure the clipper is clean and properly assembled.

4.1 Unpacking and Inspection

1. Carefully remove all components from the packaging.
2. Inspect the clipper and accessories for any signs of damage. Do not use if damaged.
3. Ensure all listed components are present.

4.2 Power Connection

The Remington My Groom HC5100 is a corded device. Connect the detachable power cord to the clipper and then plug it into a suitable electrical outlet.

4.3 Attaching and Adjusting the Comb Guide

The clipper comes with one adjustable comb guide that offers 12 length settings from 1mm to 23mm, in 2mm increments.

1. Ensure the clipper is turned off and unplugged.
2. Align the comb guide with the clipper head and slide it on until it clicks into place.
3. To adjust the cutting length, use the adjustment wheel or slider on the comb guide. Refer to the markings on the comb for desired length.



Figure 4: Adjusting the comb guide for desired hair length.



Figure 5: Detailed view of the comb guide adjustment mechanism.

5. OPERATING INSTRUCTIONS

Follow these steps for effective hair clipping.

5.1 Preparing for Clipping

1. Ensure hair is clean, dry, and tangle-free.
2. Select the desired cutting length by adjusting the comb guide. Start with a longer setting if you are unsure.

5.2 Clipping Hair

1. Plug the clipper into an electrical outlet.
2. Turn the clipper ON using the power switch.
3. Hold the clipper with the blades pointing upwards and the comb guide flat against the head.
4. Move the clipper slowly through the hair, working from the back of the neck towards the crown.
5. For the sides, start from the bottom and move upwards towards the top of the head.

6. For the top, clip from the front to the back, or vice versa, depending on the desired style.
7. Regularly clear hair from the comb guide during use to ensure consistent cutting.
8. When finished, turn the clipper OFF and unplug it from the power outlet.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your clipper.

6.1 Cleaning

1. Ensure the clipper is turned OFF and unplugged before cleaning.
2. Remove the comb guide.
3. Use the provided cleaning brush to brush away any accumulated hair from the blades and the clipper head.
4. The blades can be rinsed under running water, but ensure the main clipper body remains dry. Allow blades to dry completely before reattaching or storing.

6.2 Oiling the Blades

To maintain cutting performance, it is recommended to oil the blades regularly, especially after cleaning or if the clipper feels sluggish.

1. Apply 1-2 drops of the provided lubricating oil onto the blades.
2. Turn the clipper ON for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

6.3 Storage

Store the clipper in a dry place, away from moisture and out of reach of children. Ensure the power cord is not wrapped tightly around the appliance.

7. TROUBLESHOOTING

If you encounter issues with your Remington My Groom HC5100, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clipper does not turn on.	Not plugged in correctly; Power outlet issue.	Ensure power cord is securely plugged into both the clipper and a working electrical outlet.
Poor cutting performance or pulling hair.	Blades are dirty or not oiled; Comb guide clogged with hair.	Clean and oil the blades as per maintenance instructions. Remove hair from the comb guide.
Excessive noise or vibration.	Blades not properly aligned or oiled.	Ensure blades are clean and well-oiled. If issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	HC5100
Power Source	Corded Electric
Blade Material	Stainless Steel
Cutting Lengths	1-23 mm (12 settings, 2mm increments)
Dimensions (LxWxH)	18 x 8 x 6 cm
Item Weight	293 g
Country of Origin	China
Special Feature	Self-sharpening blades, Pro Power Motor

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Remington website. If you require technical assistance or have questions not covered in this manual, please contact Remington customer support.

You can find more information and support on the [Remington Store on Amazon](#).

