



[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny 10'x10' Garden Gazebo with Mosquito Netting, Coffee (Model 01-0153) Instruction Manual

Outsunny 01-0153

Outsunny 10'x10' Garden Gazebo with Mosquito Netting, Coffee (Model 01-0153) Instruction Manual

Model: 01-0153

INTRODUCTION

Thank you for choosing the Outsunny 10'x10' Garden Gazebo. This manual provides essential information for the safe assembly, operation, and maintenance of your new gazebo. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image: The Outsunny 10'x10' Garden Gazebo in Coffee color, featuring a double-tiered roof and mosquito netting, set up in a lush green backyard.

IMPORTANT SAFETY INFORMATION

To ensure safe use and prevent damage, observe the following safety guidelines:

- **Weather Conditions:** Store the gazebo away during bad weather conditions, such as strong winds, heavy rain, or snow, to prevent collapse and structural damage.
- **Anchoring:** Always ensure proper anchoring of the gazebo with ground stakes to prevent tipping over. Failure to do so may result in injury or damage.
- **Assembly:** Follow all assembly instructions carefully. Incorrect assembly can compromise the stability and safety of the structure.
- **Clearance:** Ensure adequate clearance around the gazebo from heat sources, open flames, and sharp objects.
- **Supervision:** Do not leave children unattended near or inside the gazebo.

COMPONENTS LIST

Before assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, contact customer support.

- Powder-coated steel frame components
- Double-tiered canopy fabric (Anti-UV and water-resistant)
- 4 Detachable mesh sidewalls with zippers
- Securing straps for sidewalls
- Ground nails (stakes)
- Hook & Loop Fasteners for connections
- Assembly hardware (bolts, nuts, washers, etc.)

MORE DETAILS



 
Securing Straps
tie to the curtains easily



Double-Sided Zipper
easy to access



Ground Nails
for extra stability

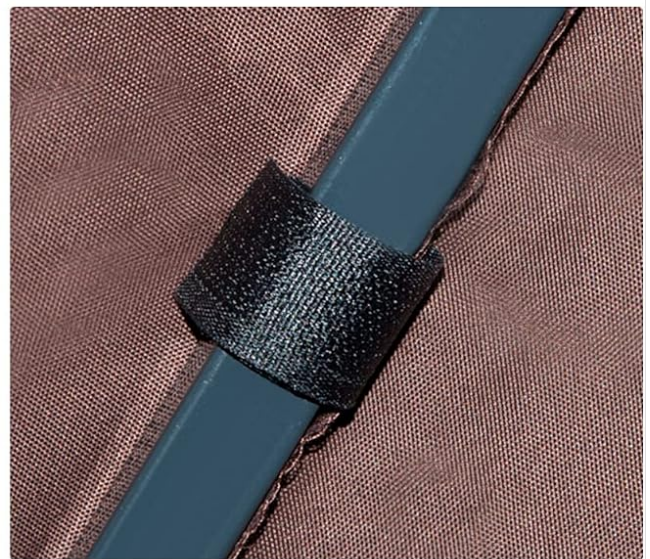

Hook & Loop Fastener
easy for connection

Image: Detailed views of key components including securing straps for curtains, a double-sided zipper for mesh sidewalls, ground nails for stability, and hook & loop fasteners for easy connections.

ASSEMBLY INSTRUCTIONS

Assembly typically requires two or more people. Follow these steps for proper setup:

1. **Frame Assembly:** Begin by assembling the main steel frame structure. Connect the vertical posts and horizontal beams according to the diagrams provided in the full manual (PDF link available in product documents). Ensure all connections are secure.
2. **Roof Frame Assembly:** Assemble the roof frame components. This includes the central hub and the radiating support bars.
3. **Canopy Installation:** Carefully spread the main canopy fabric over the assembled roof frame. Ensure the double-tiered canopy is correctly aligned. **Tip:** It is often easier to install the canopy fabric onto the roof frame before lifting the roof frame onto the main base frame.
4. **Attach Roof to Base:** With assistance, lift the assembled roof frame with the canopy onto the main base frame. Secure the roof frame to the main posts using the provided hardware.
5. **Sidewall Attachment:** Attach the four detachable mesh sidewalls to the gazebo frame. The sidewalls feature double-sided zippers for easy access. **Tip:** Install the mesh sidewalls on the outside of the base frame to prevent them from blowing inward during windy conditions. Use the securing straps to tie back the sidewalls when not in use.
6. **Anchoring:** Once the gazebo is fully assembled, use the provided ground nails to anchor each leg securely to the ground. This is crucial for stability and safety.

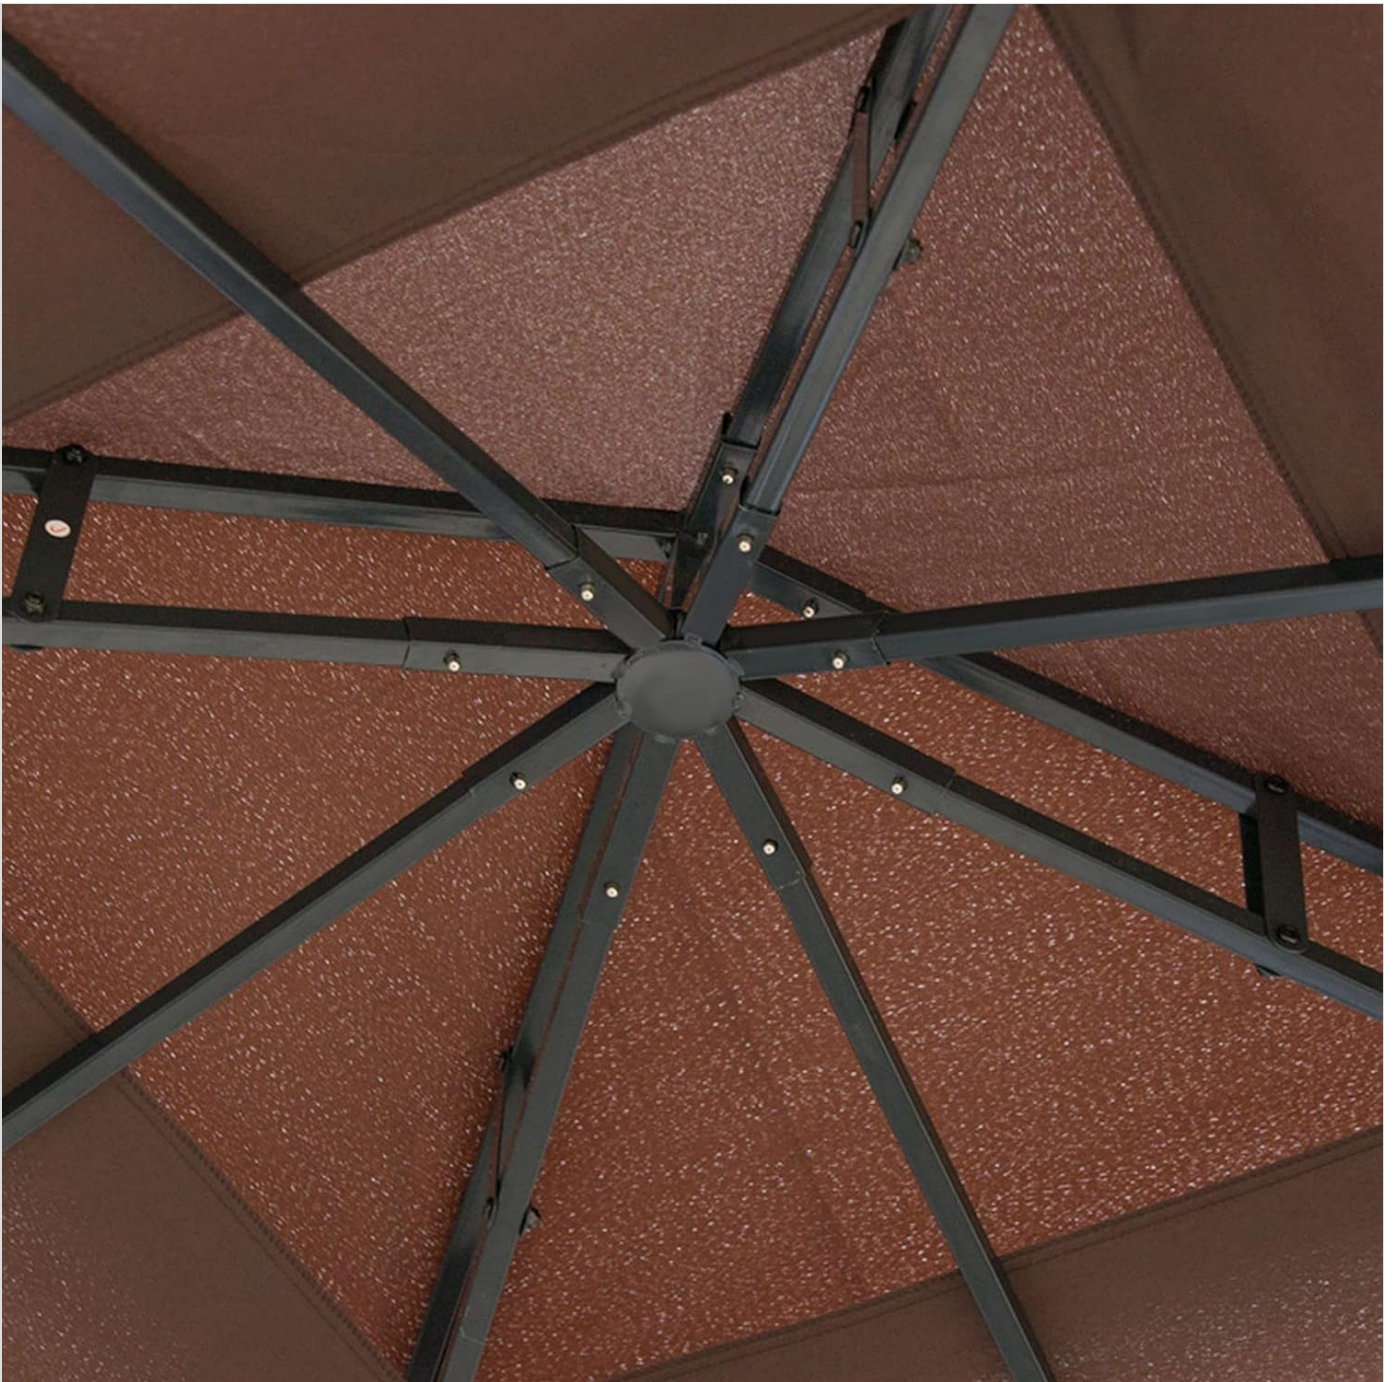 


Image: An interior view of the gazebo's roof structure, highlighting the steel frame and the attachment of the canopy fabric.

VENTED SOFT TOP



3

1. Double canopy increases breathability
2. 8 drainage holes prevent water accumulation
3. PA coating provides effective sun protection

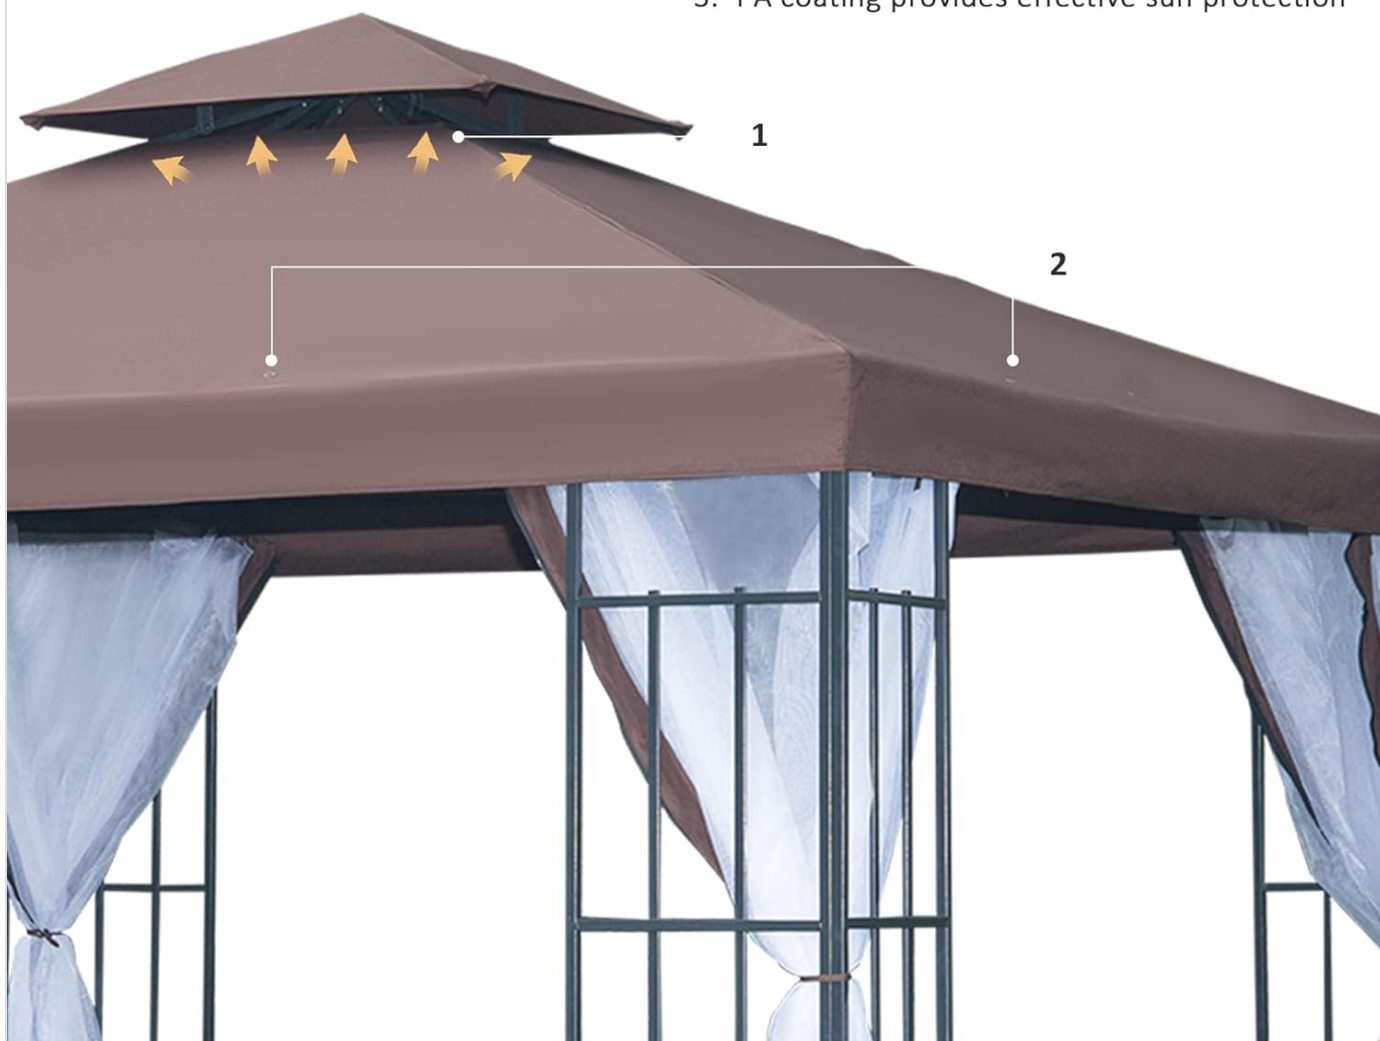 


Image: A detailed view of the gazebo's vented soft top, illustrating the double canopy structure for breathability and drainage holes to prevent water accumulation.

OPERATING INSTRUCTIONS

Your Outsunny gazebo is designed for versatile outdoor use. Here's how to operate its key features:

- **Mosquito Netting:** The four detachable mesh sidewalls provide protection from mosquitoes and other insects. Use the double-sided zippers to open or close the netting as needed.
- **Opening Sidewalls:** When an open-air feel is desired, the mesh sidewalls can be tied back to the gazebo posts using the integrated securing straps.
- **Canopy Ventilation:** The double-tiered canopy roof is designed for excellent ventilation, allowing air to circulate and reducing heat buildup underneath.



NETTING SIDEWALLS

protect from mosquitoes

OPEN THE SIDEWALLS

for an open-air feel



Image: The gazebo shown with its netting sidewalls closed to protect from insects, and then with the sidewalls opened and tied back to provide an open-air environment.

CARE AND MAINTENANCE

Proper care will extend the life of your gazebo:

- **Cleaning:** Clean the canopy fabric and mesh sidewalls with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** The powder-coated steel frame resists chipping, peeling, rust, and corrosion. Wipe down the frame with a damp cloth as needed. Inspect for any signs of rust or damage periodically.
- **Seasonal Storage:** For prolonged lifespan, especially during winter or periods of non-use, disassemble the canopy and sidewalls and store them in a dry, protected area. The frame can remain outdoors if properly anchored, but storing it indoors will further protect it.
- **Weather Precautions:** As mentioned in safety information, always take down the canopy and sidewalls during strong winds, heavy rain, or snow to prevent damage to the gazebo and potential hazards.

TROUBLESHOOTING

- **Gazebo Instability:** Ensure all frame connections are tightened. Verify that ground stakes are fully inserted and secure. Re-check anchoring points.
- **Canopy Tearing/Damage:** This can occur due to strong winds or improper installation. Always remove the canopy during severe weather. Ensure the canopy is taut but not overstretched during installation. Check tie-down points for proper alignment.
- **Water Accumulation on Canopy:** The double-tiered roof is designed with drainage. Ensure the canopy is installed correctly and taut to allow water runoff. Clear any debris from the canopy surface.
- **Missing Parts:** If you discover missing components during assembly, refer to the 'Components List' and contact Outsunny customer support immediately for assistance.
- **Difficulty Aligning Holes During Assembly:** While rare, manufacturing tolerances can sometimes cause slight misalignment. Gently adjust components or apply slight pressure to align holes. Do not force parts, as this can cause damage.

SPECIFICATIONS

Feature	Detail
Model Number	01-0153
Overall Dimensions (L x W x H)	2.97L x 2.97W x 2.7H Meters (9.7' x 9.7' x 8.9')
Eave Height	1.95 m (6.4')
Frame Material	Powder-coated Alloy Steel
Canopy Material	Anti-UV and Water-resistant Fabric (PA coating)
Color	Coffee
Item Weight	27.94 kg
Assembly Required	Yes
Included Components	Ground nails
Ultraviolet Light Protection	Yes
Occupancy	3 Person

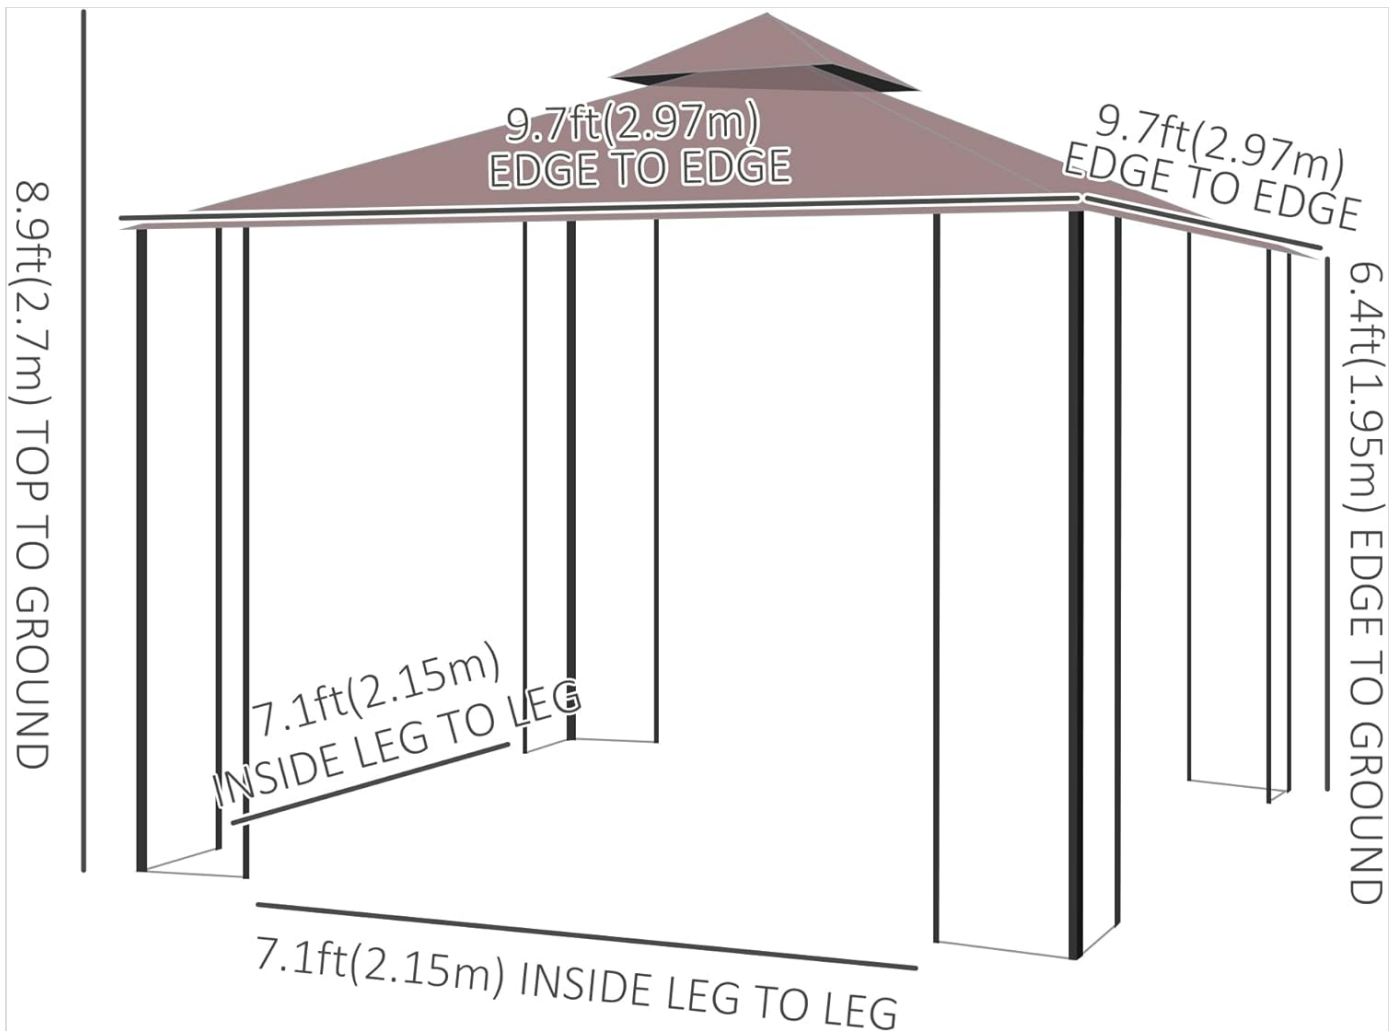 


Image: A detailed diagram illustrating the key dimensions of the gazebo, including its overall height, eave height, and footprint.

WARRANTY INFORMATION

This Outsunny gazebo comes with a **90-Day Warranty Against Manufacturer Defects**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper assembly, misuse, neglect, accidents, or extreme weather conditions. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For any questions, missing parts, or warranty claims, please contact Aosom Canada customer service:

- **Manufacturer:** Aosom Canada
- **Place of Business:** Markham, Ontario, CA
- **Telephone:** 1-416-792-6088

Please have your model number (01-0153) and proof of purchase ready when contacting support.