

Amazon Basics 1010888-040-A60

Amazon Basics Rectangular Photo Picture Frame User Manual

Model: 1010888-040-A60

Introduction	Safety Information	Package Contents	Setup	Operation	Maintenance
Troubleshooting	Specifications	Warranty & Support			

1. INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Amazon Basics Rectangular Photo Picture Frame. These frames are designed to display your cherished photos and art prints, offering versatile display options for both tabletop and wall mounting. Please read this manual thoroughly before use to ensure optimal performance and longevity of your product.



Figure 1.1: Overview of the Amazon Basics Rectangular Photo Picture Frame (Pack of 5).

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent damage to the product or injury to yourself and others:

- Handle the frames with care, especially the glass front, to avoid breakage and potential cuts.
- Keep out of reach of children and pets. Small parts or broken glass can pose a choking or cutting hazard.
- Do not expose frames to extreme temperatures or direct sunlight for prolonged periods, as this may cause warping or fading of the frame material and photos.
- Ensure frames are securely mounted when hanging on a wall to prevent falling. Use appropriate wall anchors for your wall type.
- Avoid using abrasive cleaners or harsh chemicals on the frame or glass, as this can damage the finish.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon opening the package. The standard package includes:

- 5 x Amazon Basics Rectangular Photo Picture Frames (Black, 4" x 6")

Note: Photos or mounting hardware (nails, screws, wall anchors) are not included.

4. SETUP

Follow these steps to insert your photos into the frame:

1. Carefully turn the frame face down on a clean, soft surface to prevent scratching the glass.
2. Locate the metal tabs or swivel clips on the back of the frame. Gently rotate or bend these tabs to release the backing board.



Figure 4.1: Back of the frame with easel and retaining clips.

3. Remove the backing board and any protective paper or film from the glass.
4. Place your 4" x 6" photo or art print face down onto the glass. Ensure it is centered and aligned as desired.

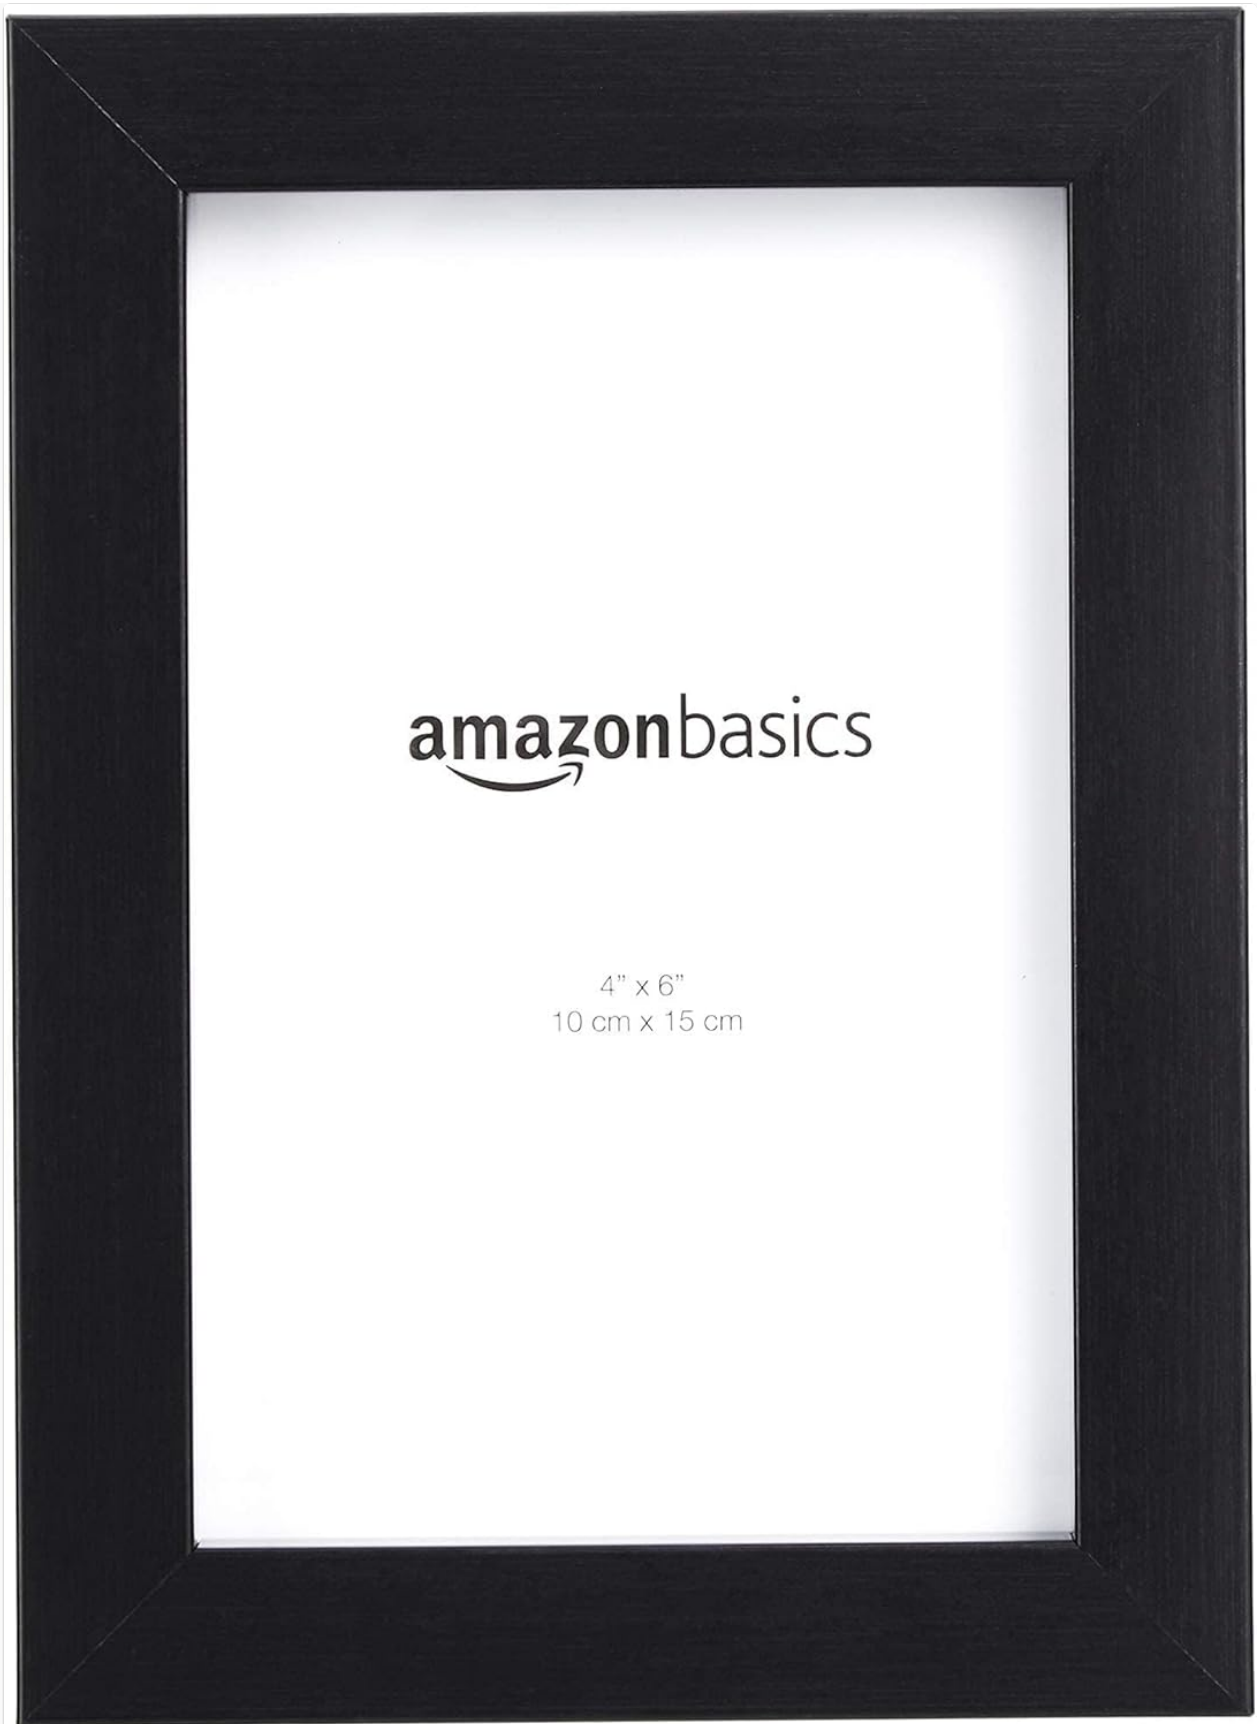


Figure 4.2: Single frame ready for photo insertion.

5. Carefully place the backing board back into the frame, ensuring it sits flush.
6. Secure the backing board by rotating or bending the metal tabs back into their original position.
7. Turn the frame over and inspect your photo for proper placement and cleanliness.

5. OPERATION (DISPLAY OPTIONS)

Your Amazon Basics photo frames offer two primary display methods:

5.1 Tabletop or Shelf Display

Each frame is equipped with an easel-back stand for convenient tabletop or shelf display. To use:

1. Locate the foldable easel stand on the back of the frame.
2. Gently extend the easel stand until it locks into place, forming a stable triangular support.
3. Place the frame on a flat, stable surface such as a desk, shelf, or mantelpiece.
4. The easel allows for both horizontal and vertical orientation of the frame.



Figure 5.1: Frame with easel stand for tabletop display.



Figure 5.2: Frame displayed on a tabletop.

5.2 Wall Hanging

For wall display, each frame is equipped with hanging hooks. To hang your frame:

1. Determine the desired orientation (horizontal or vertical) and location on your wall.
2. Measure the distance between the hanging hooks on the back of the frame.
3. Mark the corresponding points on your wall where you will place nails or screws. Ensure the marks are level.
4. Install appropriate wall anchors and screws/nails suitable for your wall material (e.g., drywall, plaster, wood studs).
5. Carefully hang the frame onto the installed hardware, ensuring it is secure and level.
6. The easel stand can be folded flat against the back of the frame when wall-mounted.

6. MAINTENANCE

Proper care will help maintain the appearance and integrity of your photo frames:

- **Cleaning the Frame:** Wipe the frame's surface with a soft, dry, lint-free cloth. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Cleaning the Glass:** Use a standard glass cleaner sprayed onto a soft cloth (not directly onto the glass) and wipe gently. Ensure no liquid seeps into the frame edges.
- **Dusting:** Regularly dust the frames with a soft cloth or a feather duster to prevent dust buildup.
- **Storage:** If storing frames, keep them in a dry, cool place away from direct sunlight and extreme temperature fluctuations. It is recommended to store them in their original packaging or wrapped in protective material to prevent scratches.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Photo appears crooked or misaligned.	Photo not properly seated or backing board not secured.	Remove the backing board, re-align the photo, and ensure the backing board is securely fastened.
Frame wobbles on tabletop.	Easel stand not fully extended or placed on an uneven surface.	Ensure the easel stand is fully locked into position. Move the frame to a flat, stable surface.
Frame falls from wall.	Improper mounting hardware or insecure installation.	Use appropriate wall anchors for your wall type. Ensure nails/screws are securely installed and the frame hooks are fully engaged.
Glass appears dirty or smudged.	Dust, fingerprints, or residue.	Clean the glass as described in the Maintenance section (Section 6).

8. SPECIFICATIONS

Detailed specifications for the Amazon Basics Rectangular Photo Picture Frame (4" x 6"):

- **Brand:** Amazon Basics
- **Model Number:** 1010888-040-A60
- **Color:** Black
- **Product Dimensions:** 6"L x 4"W (for photo size)
- **Overall Frame Dimensions:** Approximately 7.5 inches (height) x 5.5 inches (width) for the 4x6 inch frame.



Figure 8.1: Frame dimensions illustration.

- **Shape:** Rectangular
- **Mounting Type:** Tabletop, Wall Mount
- **Frame Type:** Gallery Wall Frame
- **Frame Material:** Wood, Glass (front cover)
- **Finish Type:** Black
- **Style:** 5-Pack
- **Number of Items:** 5
- **Orientation:** Horizontal, Vertical
- **Cover Material:** Glass
- **Item Weight:** Approximately 0.49 Pounds (per frame) / 7.8 ounces (per frame)
- **Back Material Type:** Wood
- **UPC:** 028295568470

9. WARRANTY & SUPPORT

9.1 Warranty Information

 
This product is covered by the Amazon Basics warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the official warranty document provided with your purchase or visit the Amazon Basics support page. A general warranty document is available [here](#).

9.2 Customer Support

For further assistance, technical support, or to report any issues with your Amazon Basics Rectangular Photo Picture Frame, please contact Amazon Customer Service through your Amazon account or visit the Amazon Basics official website for support options.

You can also visit the [Amazon Basics Store](#) for more product information and resources.

Related Documents - 1010888-040-A60



Car Sound Deadener	Insensibilizator de Voltare	Kfz-Schallschmper	Fonoassorbente per Auto	Amortiguador de Sonido para Coche	Gedultschwemmer f. Autos	Samochodowy Tłumił Dźwięków	Biläisoleringsmatta	自動車音響遮断シート
B07X0M7TR2, B07X6F3KXS, B07XJ5M4VQ6, B07X0M7ZV77								
EN Page 3	NE Pagina					
DE Page 6	PL Strona					
FR Seite 9	SV Sidor					
IT Pagina 12	日本語 ページ					
RU Página 15							

Amazon Basics Car Sound Deadener Installation and Use Guide

Comprehensive guide for installing and using Amazon Basics Car Sound Deadener, 14.5 x 10 inches (10-piece pack) and 9.8 x 15.7 inches (34-piece pack). Learn about its features, benefits, and application for automotive soundproofing.



5/6" Curtain Rod with Finials, 48" to 88"
 Tringle à Rideaux 1/8 cm avec Embouts, de 122 cm à 224 cm
 1,6 cm Gardinerstange mit Endstücken, 122 cm bis 224 cm
 Aida de 1,6 cm por Tardes com Pontais de 122 cm a 224 cm
 Dams de Cortina con Terminales de 1,6 cm, de 122 cm a 224 cm
 1,6 cm Gardinstang mit Endstücke, 122 cm bis 224 cm
 1,6 cm Gardinstang mit Endstücken, 122 cm bis 224 cm
 Karmax 1/6 cm a Kefcöwäri, 122 cm do 224 cm
 1,6 cm Gardinstang mit Krona, 122 bis 224 cm
 807Q10L12H, 807Q29F4GGQ, 807P5481K, 807P2889C2,
 807M24GPR2, 807Q10Q556F, 807Q10C2G2, 807P545T2,

Amazon Basics 5/8" Curtain Rod with Finials - 48" to 88" Installation and Safety Guide

This guide provides essential safety information, specifications, and installation instructions for the Amazon Basics 5/8" Curtain Rod with Finials, adjustable from 48" to 88" (122-224 cm). Learn how to safely install and maintain your curtain rod.



Plastic Pet Pen
 Parc pour Animaux en Plastique
 Haustierräugele aus Kunststoff
 Bax in Plastica per Animali da Compagnia
 Parque de Plástico para Mascotas
 Kunststoffsäule voor Huisdieren
 Kéjcz a Törvény Szatucanaga
 Huisdierhuisje | Plast
 プラスチックペットハウス

مستشفى الحيوانات
 807FD92CJ2, 807FD4K831, 807FD62M54, 807FD70B1,
 807FDGK53C, 807FD40002, 807FD6489E, 807FD4K83Q

05a	Page 4	97	Strome
05b	Page 4	97	Silken
05c	Seite 6	97	ペーパー
05d	Page 10	97	97
05e	Page 12	97	97

[Amazon Basics 8-Panel Pet Pen User Manual and Setup Guide](#)

User manual for the Amazon Basics 8-Panel Plastic Pet Pen, providing assembly instructions, usage guidelines, and maintenance tips for creating a safe pet enclosure.



[Amazon Basics Chair Mat User Guide: Polycarbonate, PVC, and Vinyl Floor Protection](#)

Comprehensive user guide for Amazon Basics Polycarbonate, PVC, and Vinyl chair mats. Includes detailed instructions for unpacking, selection based on floor type, proper use, care, and safety guidelines for optimal floor protection and mat longevity.



Amazon Basics 5-Tier Ladder Bookshelf Organizer - User Manual and Safety Guide

Comprehensive user manual and safety guide for the Amazon Basics 5-Tier Ladder Bookshelf Organizer. Includes important safety warnings, assembly tips, cleaning instructions, maintenance advice, disposal guidelines, and product specifications.



Amazon Basics Top Platform Cat Tree User Manual

User manual for the Amazon Basics Top Platform Cat Tree, an 18 x 14 x 22 inch beige cat tree designed for pet supplies.

