

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BELLA](#) /

› **BELLA Pro Series 90062 2-Slice Toaster Instruction Manual**

BELLA 90062

BELLA Pro Series 90062 2-Slice Toaster Instruction Manual

Model: 90062

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your BELLA Pro Series 2-Slice Toaster. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the toaster in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when the toaster is plugged in.
- Do not operate unattended.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

PRODUCT OVERVIEW

The BELLA Pro Series 90062 2-Slice Toaster is designed for efficient and consistent toasting of various bread types. It features wide slots, multiple browning settings, and specialized functions for different needs.



Image 1: Front view of the BELLA Pro Series 90062 2-Slice Toaster, showing the toast slots, carriage lever, control buttons (Cancel, Gluten Free, Bagel), and browning control dial.



Image 2: Angled view of the BELLA Pro Series 90062 2-Slice Toaster, highlighting its stainless steel finish and overall design.

Components:

- **Toast Slots:** Two wide slots for various bread types.
- **Carriage Lever:** Lowers and raises bread into the toaster.
- **Browning Control Dial:** Adjusts toast shade from 1 (lightest) to 6 (darkest).
- **Cancel Button:** Stops the toasting cycle immediately.
- **Gluten Free Button:** Optimizes toasting for gluten-free bread.
- **Bagel Button:** Toasts the cut side of bagels while warming the outer side.
- **Reheat Button:** Warms previously toasted items without further browning.
- **Removable Crumb Tray:** Collects crumbs for easy cleaning.

SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials. Ensure all components are present and undamaged.

2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the toaster.
3. **First Use:** Before toasting food, operate the toaster empty for one cycle at the highest browning setting (6) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate. Ensure the area is well-ventilated.
4. **Power Connection:** Plug the power cord into a standard 240V AC electrical outlet.

OPERATING INSTRUCTIONS

Basic Toasting:

1. Insert one or two slices of bread into the toast slots.
2. Adjust the browning control dial to your desired setting (1 for light, 6 for dark).
3. Press the carriage lever down until it locks into place. The toasting cycle will begin.
4. When the cycle is complete, the toast will automatically pop up.

Special Functions:



Image 3: Close-up view of the control buttons on the BELLA Pro Series 90062 Toaster, showing the 'CANCEL', 'GLUTEN FREE', and 'BAGEL' buttons.

- **Cancel:** To stop the toasting cycle at any time, press the **CANCEL** button. The toast will immediately pop up.
- **Gluten Free:** For optimal toasting of gluten-free bread, insert the bread, select your desired browning level, press the carriage lever down, and then press the **GLUTEN FREE** button. This setting adjusts the toasting time and temperature for gluten-free products.
- **Bagel:** To toast bagels, insert the bagel halves with the cut sides facing inwards. Select your desired browning level, press the carriage lever down, and then press the **BAGEL** button. This function toasts the cut side and warms the outer side.
- **Reheat:** To warm previously toasted items without further browning, insert the item, press the carriage lever down, and then press the **REHEAT** button. This function uses a lower heat setting for a short duration.



Image 4: Close-up view of the browning control dial (settings 1-6 and Reheat) and the removable crumb tray on the BELLA Pro Series 90062 Toaster.

MAINTENANCE

Cleaning the Crumb Tray:

1. Always unplug the toaster and allow it to cool completely before cleaning.
2. Pull out the removable crumb tray located at the bottom of the toaster.
3. Discard accumulated crumbs.
4. Wipe the crumb tray with a damp cloth and dry thoroughly.

5. Slide the crumb tray back into place until it locks securely.

Cleaning the Exterior:

- Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as they may scratch the surface.
- Ensure the toaster is completely dry before plugging it back in or storing.

Storage:

Store the toaster in a clean, dry place when not in use. Ensure the power cord is neatly wrapped and not kinked.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the toaster is securely plugged into a working outlet. Check your circuit breaker.
Bread does not toast evenly.	Uneven bread thickness; crumb accumulation; internal element issue.	Ensure bread slices are of similar thickness. Clean the crumb tray regularly. If problem persists, contact customer support.
Carriage lever does not stay down.	Toaster not plugged in; internal mechanism issue.	The lever will only lock when the toaster is plugged into a live electrical outlet. If plugged in and still not working, contact customer support.
Smoke coming from toaster.	Food stuck inside; excessive crumbs; first use residue.	Immediately unplug the toaster. Allow to cool, then carefully remove any stuck food or clean the crumb tray. First use smoke is normal.

SPECIFICATIONS

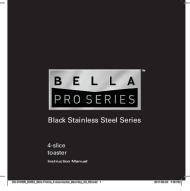
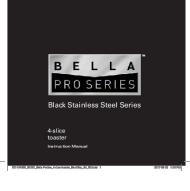
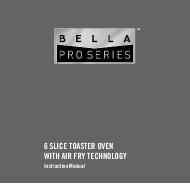
- **Model:** BELLA Pro Series 90062
- **Type:** 2-Slice Toaster
- **Material:** Stainless Steel
- **Color:** Stainless Steel
- **Wattage:** 900 watts
- **Voltage:** 240 Volts
- **Number of Browning Settings:** 6
- **Special Features:** Cancel Function, Gluten Free, Bagel, Reheat
- **Dimensions:** Approximately 11.5 x 9 x 7.4 inches (Package Dimensions)
- **Item Weight:** Approximately 4.39 pounds
- **UPC:** 829486900624

WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support inquiries regarding your BELLA Pro Series 90062 2-Slice Toaster, please refer to the warranty card included with your purchase or visit the official BELLA website. You may also contact BELLA customer service directly for assistance.

For further assistance, please visit: [BELLA Official Store on Amazon](#)

Related Documents - 90062

	<p><u>BELLA Pro Series 2-Slice Toaster Instruction Manual Black Stainless Steel</u></p> <p>Comprehensive instruction manual for the BELLA Pro Series 2-Slice Toaster in Black Stainless Steel. Learn about safety, operation, features like bagel, gluten-free, and reheat cycles, cleaning, and warranty.</p>
	<p><u>BELLA PRO SERIES 4-Slice Toaster Instruction Manual - Black Stainless Steel</u></p> <p>Instruction manual for the BELLA PRO SERIES 4-slice toaster in Black Stainless Steel. Covers important safeguards, operation, special functions like Bagel and Gluten-Free toasting, cleaning, and warranty information.</p>
	<p><u>BELLA Pro Series 6-Slice Digital Toaster Oven Instruction Manual</u></p> <p>Comprehensive instruction manual for the BELLA Pro Series 6-Slice Digital Toaster Oven in Black Stainless Steel. Covers important safeguards, operating instructions, pre-programmed functions, and cleaning guidelines.</p>
	<p><u>BELLA PRO SERIES 4-Slice Toaster Instruction Manual - Black Stainless Steel</u></p> <p>Official instruction manual for the BELLA PRO SERIES 4-Slice Black Stainless Steel Toaster. Learn about important safety precautions, how to use the bagel and gluten-free settings, cleaning, maintenance, and warranty information.</p>
	<p><u>Bella 2-Slice Toaster: Instruction Manual and Safety Guide</u></p> <p>Comprehensive instruction manual for the Bella 2-Slice Toaster, covering safety precautions, operating instructions, cleaning, maintenance, and warranty information.</p>
	<p><u>BELLA PRO SERIES 6 Slice Toaster Oven with Air Fry Technology - Instruction Manual</u></p> <p>Comprehensive instruction manual for the BELLA PRO SERIES 6 Slice Toaster Oven with Air Fry Technology. Covers safety, operation, functions, cooking charts, maintenance, and warranty.</p>