Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > OVENTE /
- OVENTE Immersion Hand Blender HS560R Instruction Manual

OVENTE HS560R

OVENTE Immersion Hand Blender HS560R Instruction Manual

Model: HS560R

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- · Read all instructions carefully before operating the appliance.
- Do not immerse the motor body in water or other liquids. Only the blending shaft is designed for immersion.
- Keep hands, hair, clothing, and utensils away from moving blades during operation to prevent injury and/or damage to the appliance.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- · Close supervision is necessary when any appliance is used by or near children.
- · Avoid contact with moving parts.
- To prevent overheating, operate the hand blender in one-minute intervals or less.

2. Parts and Features

The OVENTE Immersion Hand Blender consists of a motor body and a detachable blending shaft with stainless steel blades.





Figure 1: OVENTE Immersion Hand Blender HS560R, showcasing its sleek red design.

Key Features:

- 300-Watt Motor: Provides efficient blending power.
- 2 Blending Speeds: Low and High settings for versatile control.
- Stainless Steel Blades: Durable and effective for various ingredients.
- Detachable Shaft: Allows for easy cleaning and compact storage.
- Ergonomic, Non-Slip Handle: Designed for comfortable and secure grip during use.



Figure 2: Close-up of the blender highlighting the adjustable speed settings and food-grade stainless steel shaft.



Figure 3: The ergonomic, non-slip handle provides a comfortable and secure grip.

3. ASSEMBLY

Assembling your OVENTE Immersion Hand Blender is quick and straightforward:

- 1. Align the blending shaft with the motor body.
- 2. Twist the blending shaft clockwise until it locks securely into place. You should hear a click or feel it firmly attach.
- 3. Ensure the shaft is securely attached before plugging in the appliance.



DETACHABLE SHAFT

Dishwasher-safe shaft easily attaches to the body; simply twist to detach for easy cleaning

Figure 4: The detachable shaft easily twists on and off the motor body for assembly and disassembly.

4. OPERATING INSTRUCTIONS

Follow these steps for safe and effective blending:

- 1. Ensure the blending shaft is securely attached to the motor body.
- 2. Plug the hand blender into a standard electrical outlet (120V).
- 3. Immerse the blending shaft into the ingredients you wish to blend. Ensure the blade guard is fully submerged to prevent splashing.
- 4. Press the desired speed button (Low or High) on the motor body to begin blending.
- 5. Move the blender gently up and down and in circular motions to ensure even blending.
- 6. Release the button to stop operation.
- 7. Unplug the appliance from the outlet immediately after use.

Note: To prevent overheating, do not operate the hand blender continuously for more than one minute. Allow it to cool down before resuming use.



Figure 5: The slim-stick design allows for blending directly in various containers, including glasses, pots, and bowls.



Figure 6: This versatile tool is suitable for preparing smoothies, soups, marinades, sauces, and more.

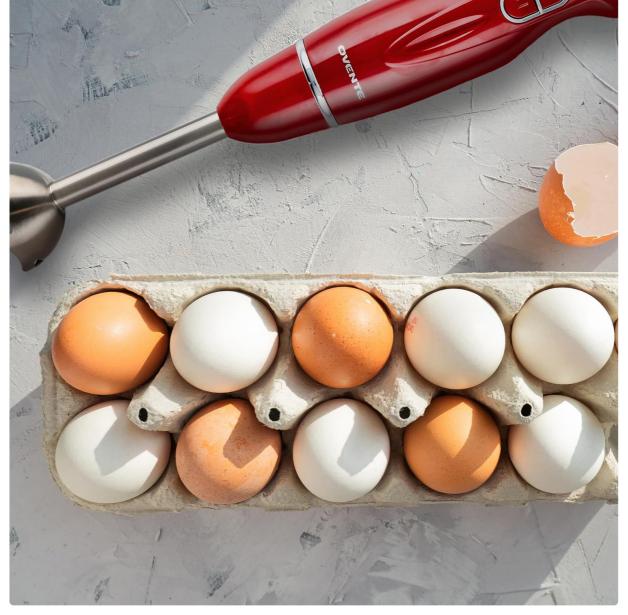


Figure 7: The blender can be used for tasks such as whisking eggs or mixing batters.

Video 1: Official OVENTE demonstration of the Multi-Purpose Immersion Hand Blender (HS560 Series), showcasing its features like detachable shaft, two blending speeds, ergonomic handle, stainless steel blade, and various blending applications such as soups and chocolate mixtures.

5. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity of your hand blender:

- 1. Always unplug the appliance before cleaning.
- 2. Twist and detach the blending shaft from the motor body.
- 3. The detachable blending shaft is dishwasher-safe. Alternatively, it can be hand washed with warm, soapy water. Rinse thoroughly and dry.
- 4. Wipe the motor body with a soft, damp cloth. Do not immerse the motor body in water or any other liquid.
- 5. Ensure all parts are completely dry before reassembling or storing.



Figure 8: The blending shaft is dishwasher-safe for convenient cleaning.

6. TROUBLESHOOTING

If you encounter any issues with your OVENTE Immersion Hand Blender, refer to the following common problems and solutions:

• Blender does not turn on:

- Ensure the appliance is properly plugged into a working electrical outlet.
- Check if the blending shaft is securely attached to the motor body.

• Blender stops during operation:

- The appliance may have overheated. Unplug it and allow it to cool down for at least 10-15 minutes before resuming use.
- Ensure you are not operating the blender for more than one minute continuously.

· Ingredients are not blending smoothly:

- Ensure there is sufficient liquid in your mixture.
- Move the blender up and down and around the container to ensure all ingredients come into

contact with the blades.

• For tougher ingredients, use the High speed setting.

7. Specifications

Feature	Detail
Brand	OVENTE
Model Number	HS560R
Power Source	Electric
Motor Wattage	300W
Number of Speeds	2 (Low, High)
Voltage	120.0V
Controls Type	Push Button
Blade Material	Stainless Steel
Material Type Free	BPA Free
Product Dimensions	2.5"D x 2.5"W x 14.8"H



Figure 9: The compact dimensions of the OVENTE Immersion Hand Blender.

8. WARRANTY AND CUSTOMER SUPPORT

OVENTE provides a **1 Year Limited Warranty** for this product, covering defects in material and workmanship under normal use and conditions from the original purchase date.

For customer service, support, or warranty claims, please contact OVENTE directly. Refer to the contact information provided in your product packaging or visit the official OVENTE website.

Related Documents - HS560R



Ovente HS560 Series Multi-Purpose Immersion Hand Blender - User Manual, Features, and Warranty

Comprehensive guide for the Ovente HS560 Series Multi-Purpose Immersion Hand Blender. Details features, usage instructions, safety precautions, care, maintenance, and warranty information for this powerful 300-watt kitchen appliance.



Ovente Electric 2-Tray Buffet Server FW152 Series User Manual

Comprehensive user manual for the Ovente Electric 2-Tray Buffet Server with Warming Tray (Model FW152 Series). Includes detailed safety instructions, parts and features, operating guide, care and maintenance tips, electrical specifications, and warranty information.



Ovente BGC102 Series Stainless Steel Coil Electric Cooktop User Manual

Comprehensive user manual for the Ovente BGC102 Series Stainless Steel Coil Electric Cooktop, covering important safeguards, parts and features, operating instructions, recipes, care, maintenance, and warranty information.



Ovente 3-in-1 Grill GP1302 Series User Manual and Warranty Information

Comprehensive user manual for the Ovente 3-in-1 Grill, model GP1302 Series. Contains essential safety guidelines, detailed parts and features, operating instructions for sandwiches, waffles, and grilling, care and maintenance advice, electrical specifications, and warranty details.



Ovente 3-in-1 Grill GPI302 Series User Manual and Instructions

Comprehensive user manual for the Ovente 3-in-1 Grill, GPI302 Series. Includes important safety precautions, parts and features, detailed usage instructions for sandwiches, waffles, and grilling, care and maintenance guidelines, electrical specifications, environmental disposal information, and a one-year limited warranty.



Ovente Electric Panini Grill GP0540/GP0620 Series User Manual

User manual for the Ovente Electric Panini Grill, models GP0540 and GP0620. Provides essential safety guidelines, product features, operating instructions, maintenance advice, and warranty details.