

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Wacom](#) /

› Wacom Intuos S Graphic Tablet User Manual

Wacom CTL-4100K-S

Wacom Intuos S Graphic Tablet User Manual

Model: CTL-4100K-S

1. INTRODUCTION

The Wacom Intuos S Graphic Tablet is a compact and intuitive pen tablet designed for digital drawing, painting, and photo editing. It offers a natural pen experience with precise control, making it suitable for both beginners and experienced digital artists. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Wacom Intuos S tablet.



Image: The Wacom Intuos S Graphic Tablet in black, accompanied by its Wacom Pen 4K. This image provides a general overview of the product.

2. WHAT'S IN THE BOX

Verify that all components are present in your package:

- Wacom Intuos S Graphic Tablet (Model CTL-4100K-S)
- Wacom Pen 4K (battery-free)
- USB Cable
- Quick Start Guide
- 3 Replacement Pen Nibs
- Software Download Instructions (for Corel Painter Essentials 7 or Corel Aftershot Pro 3 - 90-day license)

3. SETUP GUIDE

3.1 System Requirements

- Windows 7 or later (excluding Windows 10 S mode)
- macOS 10.11 or later
- Chrome OS
- Android (select devices)
- Standard USB Type-A port
- Internet access for driver download and software registration



Image: This graphic illustrates the Wacom Intuos S tablet's broad compatibility with various operating systems, including Windows, macOS, Android, and Chrome OS.

3.2 Connecting the Tablet

1. Connect the USB cable to the Wacom Intuos S tablet.
2. Plug the other end of the USB cable into an available USB Type-A port on your computer.

3.3 Driver Installation

1. Open your web browser and navigate to the official Wacom driver download page (refer to the Quick Start Guide for the specific URL).
2. Download and install the latest drivers for your operating system.
3. Follow the on-screen instructions to complete the installation. A system restart may be required.

3.4 Software Registration

To access the bundled creative software, create a Wacom ID and register your tablet on the Wacom website. You will then receive instructions to download and activate your chosen software.

4. OPERATING THE WACOM INTUOS S

4.1 Wacom Pen 4K

The Wacom Pen 4K is a battery-free pen that provides a natural drawing experience. It features 4096 levels of pressure sensitivity, allowing for precise control over line thickness and opacity in compatible software.

- **Pressure Sensitivity:** The pen detects 4096 levels of pressure, enabling varied strokes.
- **Battery-Free:** The pen operates without batteries, eliminating the need for charging.
- **Precision:** Offers a digital precision tolerance of +/- 0.25 mm.
- **Reading Height:** The pen has a reading height of 7 mm above the tablet surface.

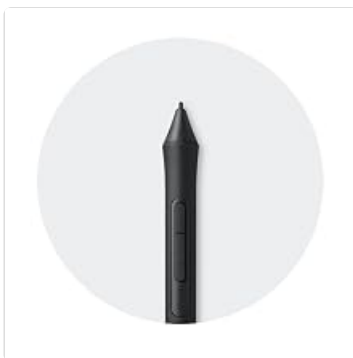


Image: A close-up view of the Wacom Pen 4K, highlighting its ergonomic design and side buttons.

4.2 Active Area and ExpressKeys

The Intuos S tablet features an active drawing area of 152 x 95 mm. Four customizable ExpressKeys are located at the top of the tablet, allowing you to assign shortcuts for frequently used functions in your creative applications.

Qualité que vous pouvez ressentir



La technologie de stylet éprouvée de Wacom vous offre des traits fluides et précis que les alternatives bon marché ne peuvent égaler

Image: The Wacom Intuos S tablet and pen, showcasing the active area and the four ExpressKeys at the top.

4.3 Usage Scenarios

The Wacom Intuos S is versatile for various creative tasks:

- **Digital Art:** Create natural brush strokes and precise lines for illustrations and paintings.
- **Photo Retouching:** Achieve absolute precision for adding effects or retouching images.
- **Graphic Design:** Ideal for page layouts, vector work, and graphic design projects.
- **Online Learning/Teaching:** Use for writing, annotating, and collaborating in educational settings.



Logiciels pour tablettes
graphiques, formations... **tout ce
dont vous avez besoin pour vous
lancer dans l'art numérique**

Image: A user actively drawing on a Wacom Intuos S tablet connected to a laptop, demonstrating its use in digital creation.

5. MAINTENANCE

5.1 Cleaning the Tablet and Pen

- Use a soft, lint-free cloth slightly dampened with water to clean the tablet surface and pen.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the device.
- Ensure the tablet is disconnected from your computer before cleaning.

5.2 Replacing Pen Nibs

Over time, the pen nib may wear down. Replace it with a new nib for optimal performance.

1. Gently pull the old nib straight out of the pen using the nib removal tool (if included) or your fingers.
2. Insert a new nib firmly into the pen until it clicks into place.

6. TROUBLESHOOTING

6.1 Tablet Not Responding

- Ensure the USB cable is securely connected to both the tablet and your computer.
- Try connecting the tablet to a different USB port.
- Restart your computer.
- Verify that the Wacom drivers are correctly installed and up to date. Reinstall if necessary.

6.2 Pen Not Working

- Check if the pen nib is worn out and replace it if needed.
- Ensure the Wacom drivers are installed and running.
- Test the pen on another compatible device if possible.

6.3 Pressure Sensitivity Issues

- Open the Wacom Tablet Properties (usually found in your system settings or applications folder) and adjust the pen pressure settings.
- Ensure your creative software supports pen pressure and that the feature is enabled within the application.

7. SPECIFICATIONS

Brand	Wacom
Model Name	Intuos S
Model Number	CTL-4100K-S
Connectivity Technology	USB
Pressure Sensitivity	4096 Levels
Operating System Compatibility	Windows, Mac OS, Chrome, Android
Special Feature	Lightweight
Active Area	152 x 95 mm (approx. 7 inches diagonal)
Resolution	2540 lpi
Dimensions (L x W)	20L x 16W cm

8. WARRANTY INFORMATION

The Wacom Intuos S Graphic Tablet comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. For specific terms and conditions, please refer to the warranty documentation included with your product or visit the official Wacom website.

Additionally, a **14-day refund/replacement policy** may apply, subject to the retailer's terms of sale.

9. SUPPORT

For further assistance, technical support, or to access additional resources, please visit the official Wacom support channels:

- **Official Wacom Support Website:** www.wacom.com/support
- **User Manual (PDF):** [Download PDF Manual](#)

You can also find FAQs and community forums on the Wacom support website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B079MQZM4X>

More documents and user manuals: **<https://manuals.plus/>**