

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Kynast](#) /

› Kynast 613-400554 Transport Dolly User Manual

Kynast 613-400554

Kynast 613-400554 Transport Dolly User Manual

Model: 613-400554

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Kynast 613-400554 Transport Dolly. Please read these instructions carefully before using the product and retain them for future reference. This transport dolly is designed to facilitate the movement of heavy or bulky items up to 150 kg.

2. SAFETY INSTRUCTIONS

- **Maximum Load Capacity:** Do not exceed the maximum load capacity of 150 kg (330 lbs). Overloading can cause damage to the dolly and lead to injury.
- **Load Distribution:** Always distribute the load evenly across the dolly's surface to maintain stability. Avoid placing all weight on one side or corner.
- **Secure Load:** Ensure the item being transported is stable and securely placed on the dolly. Use straps or ropes if necessary to prevent shifting during movement.
- **Surface Conditions:** Use the dolly on flat, stable, and clear surfaces. Avoid uneven terrain, stairs, or inclines, which can cause the load to tip or the dolly to become unstable.
- **Personal Safety:** Wear appropriate safety footwear when moving heavy objects. Keep hands and feet clear of the wheels and the underside of the load.
- **Children and Pets:** Keep children and pets away from the dolly during operation.
- **Inspection:** Before each use, inspect the dolly for any signs of damage, especially to the board and casters. Do not use if damaged.

3. PRODUCT OVERVIEW

The Kynast 613-400554 Transport Dolly features a robust MDF board equipped with four stable plastic casters and anti-slip points to secure items during transport. A convenient handle cutout is provided for easy carrying when not in use.



Figure 1: Top view of the Kynast 613-400554 Transport Dolly, showing the MDF board, four circular anti-slip pads, and a rectangular handle cutout at one end.



Figure 2: Side view of the transport dolly, illustrating the thickness of the MDF board and the four plastic casters attached underneath.

4. SETUP AND PRE-USE INSPECTION

The Kynast 613-400554 Transport Dolly comes pre-assembled and ready for use. Before each use, perform the following checks:

1. **Visual Inspection:** Examine the MDF board for any cracks, splinters, or significant damage.
2. **Caster Check:** Ensure all four casters are securely attached and rotate freely without obstruction. Check for any loose screws or damaged wheels.
3. **Anti-slip Pads:** Verify that the anti-slip pads are firmly in place on the top surface of the dolly.

If any damage is found, do not use the dolly. Contact customer support for assistance.

5. OPERATING INSTRUCTIONS

Follow these steps for safe and effective use of your transport dolly:

1. **Prepare the Area:** Clear the path of any obstacles, debris, or uneven surfaces where the dolly will be used.
2. **Position the Dolly:** Place the dolly on a flat, stable surface where you intend to load the item.
3. **Load the Item:** Carefully lift and place the item onto the center of the dolly. Ensure the weight is evenly

distributed and the item is stable on the anti-slip pads. For very heavy items, use proper lifting techniques or seek assistance.

- 4. Secure the Load (Optional but Recommended):** If the item is tall, unstable, or prone to shifting, use appropriate straps or ropes to secure it to the dolly.
- 5. Move the Dolly:** Gently push or pull the dolly to move the item. Maintain a slow and controlled pace. Avoid sudden movements or sharp turns, especially with heavy loads.
- 6. Unload the Item:** Once at the destination, carefully remove the item from the dolly using proper lifting techniques.

6. CARE AND MAINTENANCE

- Cleaning:** Wipe the MDF board with a damp cloth to remove dust and dirt. Avoid using harsh chemicals or abrasive cleaners that could damage the surface or anti-slip pads.
- Caster Maintenance:** Periodically check the casters for accumulated dirt, hair, or debris that might hinder their movement. Clean as necessary.
- Storage:** Store the dolly in a dry place, away from extreme temperatures and direct sunlight, to prolong its lifespan. The handle cutout allows for easy hanging storage.
- Regular Inspection:** Conduct routine inspections of the board, casters, and anti-slip pads to ensure they are in good working condition.

7. TROUBLESHOOTING

- Dolly not rolling smoothly:** Check casters for debris (e.g., hair, string) wrapped around the axles. Clean as needed. Ensure the surface is flat and clear.
- Load shifting on the dolly:** Ensure the load is centered and stable. Verify anti-slip pads are clean and intact. Use straps to secure the load if necessary.
- Dolly feels unstable:** Check that the load does not exceed the maximum capacity. Redistribute the load evenly. Ensure the dolly is on a flat, level surface.

8. SPECIFICATIONS

Feature	Specification
Model	613-400554
Brand	Kynast (Expo-Börse GmbH)
Material	MDF board, Plastic casters
Color	Brown
Product Dimensions (L x W x H)	58 x 29 x 9.5 cm (22.8 x 11.4 x 3.7 inches)
Board Thickness	1.8 cm (0.7 inches)
Item Weight	2.74 kg (6.04 lbs)
Maximum Load Capacity	150 kg (330 lbs)

Feature	Specification
Wheel Type	Plastic casters
Wheel Diameter	6.4 cm (2.5 inches)
Number of Wheels	4
Special Features	4 anti-slip points, convenient carrying handle cutout

9. WARRANTY AND SUPPORT

For warranty information or customer support regarding your Kynast 613-400554 Transport Dolly, please refer to the retailer's return policy or contact the seller directly. Specific warranty details are not provided in this manual.

