

Bosch BGC05AAA2

Bosch Serie 2 Bagless Vacuum Cleaner BGC05AAA2 User Manual

Model: BGC05AAA2

1. INTRODUCTION

Thank you for choosing the Bosch Serie 2 Bagless Vacuum Cleaner BGC05AAA2. This appliance is designed for efficient and hygienic cleaning of your home. Its ultra-compact and lightweight design ensures effortless cleaning and easy maneuverability.

Key features include:

- Compact and powerful ergonomic design.
- Effortless cleaning experience.
- Lightweight construction for easy handling.
- Versatile cleaning on all floor types with universal brush and telescopic tube.



Figure 1.1: The Bosch Serie 2 Bagless Vacuum Cleaner BGC05AAA2. This image displays the complete vacuum cleaner unit, including the main body, dust container, flexible hose, telescopic tube, and floor nozzle, highlighting its compact design.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance. Keep this manual for future reference.

- This appliance is intended for domestic use only.
- Do not use the vacuum cleaner to pick up water or other liquids, flammable substances, or hot ashes.
- Always unplug the appliance from the power outlet before cleaning or maintenance.
- Do not operate the vacuum cleaner with a damaged cord or plug.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not allow children to play with the appliance. Close supervision is necessary when used near children.
- Ensure the dust container and filters are correctly installed before use.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all components are present:

- 1 x Bosch Serie 2 Corded Bagless Vacuum Cleaner Unit
- 1 x Flexible Hose
- 1 x Telescopic Tube
- 1 x Universal Dual-Position Floor Brush
- 1 x Hard Floor Brush
- 2 x Crevice and Upholstery Accessories
- 1 x User Manual

4. SETUP

Follow these steps to assemble your vacuum cleaner:

1. **Unpack the Appliance:** Carefully remove all components from the packaging.
2. **Attach the Flexible Hose:** Insert the end of the flexible hose into the suction inlet on the main unit until it clicks securely into place.
3. **Assemble the Telescopic Tube:** Connect the handle end of the flexible hose to the telescopic tube. Adjust the length of the telescopic tube by pressing the release button and extending or retracting it to a comfortable height.
4. **Attach the Floor Nozzle:** Connect your desired floor nozzle (universal or hard floor brush) to the end of the telescopic tube. Ensure it is firmly attached.
5. **Hose Storage (Optional):** For convenient storage, the hose can be wrapped around the main unit. Refer to Figure 4.1 for guidance.



4.4 kg
Ultra-lightweight

Figure 4.1: Simple hose storage solution. This image illustrates how the flexible hose can be neatly stored by wrapping it around the vacuum cleaner's main body, securing it with a clip.

5. OPERATING INSTRUCTIONS

Operating your Bosch Serie 2 vacuum cleaner is straightforward:

1. **Connect to Power:** Extend the power cord and plug it into a suitable electrical outlet. The appliance has a 9-meter operating radius.
2. **Power On/Off:** Press the ON/OFF foot pedal located on the main unit to start or stop the vacuum cleaner.
3. **Adjust Suction Power:** Use the suction power regulator (if present, typically a slider or rotary knob on the main unit or hose handle) to adjust the suction strength according to the surface being cleaned.
4. **Using Floor Nozzles:**
 - **Universal Dual-Position Brush:** Switch between carpet and hard floor settings using the foot switch on the nozzle.
 - **Hard Floor Brush:** Ideal for delicate hard floors like parquet or laminate.

5. **Using Accessories:** Attach the crevice tool for narrow gaps and corners, and the upholstery tool for furniture and curtains.
6. **Automatic Cord Winder:** After use, unplug the vacuum cleaner and press the cord rewind button (usually a foot pedal) to automatically retract the power cord into the unit. Guide the cord to prevent whipping.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

1. Emptying the Dust Container:

- Switch off and unplug the vacuum cleaner.
- Press the release button to detach the dust container from the main unit.
- Hold the container over a waste bin and press the bottom release button to open the flap and empty the contents.
- Close the flap securely and reattach the dust container to the vacuum cleaner.



Figure 6.1: Emptying the dust container. This image demonstrates the process of detaching the dust container and emptying its contents into a waste bin, highlighting the ease of removal and disposal.

2. Cleaning the Hygienic Filter:

- The hygienic filter is washable. Refer to the appliance's specific instructions for filter access and removal.
- Rinse the filter under cold running water until the water runs clear.
- Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum cleaner. Do not use a hairdryer or other heating devices.

3. **Cleaning Other Parts:** Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners. Check nozzles and tubes for blockages regularly.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not switch on.	No power supply.	Check if the plug is correctly inserted into the outlet. Check the fuse/circuit breaker.
Loss of suction power.	Dust container full. Blockage in hose/tube/nozzle. Filter dirty.	Empty the dust container. Check and clear any blockages. Clean or replace the filter.
Unusual noise during operation.	Blockage in the air path. Motor issue.	Check for and remove any blockages. If the noise persists, contact customer support.
Vacuum cleaner overheats and switches off.	Dust container full. Filter blocked. Air vents obstructed.	Empty the dust container. Clean the filter. Ensure air vents are clear. Allow the appliance to cool down before restarting.

If the problem persists after attempting these solutions, please contact Bosch customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Bosch
Model Number	BGC05AAA2
Color	Red
Product Dimensions (L x W x H)	31.4 x 26.8 x 38.1 cm
Weight	4.4 Kilograms
Dust Container Capacity	1.5 Litres
Power	700 Watts
Voltage	220 Volts
Material	Plastic/Metal/Stainless Steel
Energy Class	A
Annual Energy Consumption	28 kWh per year
Noise Level	78 dB
Special Feature	Bagless
Filter Type	HEPA Filter
Power Source	Corded Electric
Operating Radius	9 meters

9. WARRANTY AND SUPPORT

This Bosch appliance comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details. For technical support, spare parts, or service inquiries, please visit the official Bosch website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

© 2023 Bosch. All rights reserved.