

## UBay GA840WJSA

# UBay GA840WJSA TV Remote Control User Manual

For Sharp Aquos TV Models

## INTRODUCTION

This manual provides instructions for the UBay GA840WJSA replacement remote control, designed for use with various Sharp Aquos TV models. Please read this manual thoroughly before using the remote control to ensure proper operation and to maximize its lifespan.

## SETUP

### 1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

**Note:** Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.





Image: The UBay GA840WJSA remote control, showing the rear where the battery compartment is typically located. The compartment cover is designed for easy removal and installation of AAA batteries.

## 2. Initial Use

The UBay GA840WJSA remote control is pre-programmed and does not require any additional setup or pairing. Once batteries are installed, it is ready for immediate use with compatible Sharp Aquos TV models.

## OPERATING INSTRUCTIONS

---

Point the remote control directly at the TV's infrared receiver. Ensure there are no obstructions between the remote and the TV.

### Key Functions

- **POWER:** Turns the TV on or off.
- **INPUT:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **CH +/-:** Changes the TV channel up or down.
- **VOL +/-:** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV audio.
- **NUMBER BUTTONS (0-9):** Directly selects TV channels.
- **MENU:** Accesses the TV's main menu.
- **ARROW BUTTONS (Up, Down, Left, Right):** Navigates through menus and options.
- **ENTER:** Confirms selections in menus.
- **EXIT:** Exits the current menu or on-screen display.
- **GUIDE:** Displays the electronic program guide (if supported by TV and broadcast).
- **INFO:** Displays information about the current program or input.

### Compatible TV Models

This remote control is compatible with the following Sharp Aquos TV models:

- LC-40LE810
- LC-40LE820
- LC-46LE810
- LC-46LE820
- LC-52LE810
- LC-52LE820
- LC-60LE810
- LC-60LE820

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote control's response becomes inconsistent or stops working. Follow the battery installation steps outlined in the Setup section.

### Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

## Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

## TROUBLESHOOTING

---

- **Remote control is not working:**
  - Ensure batteries are installed correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Check for any obstructions between the remote control and the TV's infrared sensor.
  - Ensure you are within the effective range of the TV's sensor.
- **Some buttons are not responding:**
  - This remote is designed to be a direct replacement. Verify your TV model is listed under compatible models.
  - Clean the remote control, especially around the unresponsive buttons, to remove any debris.

## SPECIFICATIONS

---

<b>Model Number</b>	GA840WJSA
<b>Brand</b>	UBay
<b>Compatible Devices</b>	Sharp Aquos Televisions
<b>Power Source</b>	2 x AAA Batteries (not included)
<b>Dimensions</b>	7 x 2 x 0.5 inches (approximate)
<b>Weight</b>	2.89 ounces (without batteries)

## WARRANTY AND SUPPORT

---

Specific warranty information for this product is not provided in this manual. For details regarding warranty coverage or technical support, please refer to the product packaging or contact the seller directly. Keep your purchase receipt as proof of purchase.