

[Manuals.plus](#) /

› [WINIA](#) /

› WINIA DWF-DG1B386CW 19kg Automatic Washing Machine User Manual

WINIA DWF-DG1B386CW

WINIA DWF-DG1B386CW 19kg Automatic Washing Machine User Manual

Model: DWF-DG1B386CW

1. INTRODUCTION

Thank you for choosing the WINIA DWF-DG1B386CW 19kg Automatic Washing Machine. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read this manual thoroughly before using the washing machine and retain it for future reference.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before attempting any service or cleaning.

3. PRODUCT OVERVIEW

3.1 Features

- **Capacity:** 19 kg (Top Load)
- **Spin Speed:** Up to 800 RPM

- **Wash Cycles:** 10 standard cycles
- **Control Interface:** Intuitive button controls
- **Material:** Durable plastic construction
- **Efficiency:** Designed for efficient water and energy use

3.2 Components

The WINIA DWF-DG1B386CW washing machine includes the main unit and a user guide. Key components include the top-load lid, control panel, washing tub, and pulsator.



Figure 1: Front view of the WINIA DWF-DG1B386CW washing machine.



Figure 2: Angled view of the WINIA DWF-DG1B386CW washing machine, showing the top-load lid.



Figure 3: Interior view of the washing machine tub, showing the pulsator and water inlets.

3.3 Control Panel

The control panel allows you to select wash programs, adjust settings, and start/pause cycles. Familiarize yourself with the buttons and display before operation.



Figure 4: Close-up of the control panel of the WINIA DWF-DG1B386CW washing machine, displaying program selection and settings.

Key controls typically include:

- **Power Button:** To turn the machine on or off.

- **Program Selector:** A dial or buttons to choose wash cycles (e.g., Normal, Delicates, Jeans, Color, Rinse+Spin).
- **Start/Pause Button:** To begin or temporarily stop a wash cycle.
- **Water Temperature:** Options for Hot, Warm, Cold.
- **Water Level:** Adjusts the amount of water (e.g., High, Medium, Low).
- **Wash Intensity:** Options like Strong, Normal, Soft.
- **Extra Rinse:** Adds an additional rinse cycle.

4. SETUP AND INSTALLATION

4.1 Unpacking

Carefully remove all packaging materials. Inspect the washing machine for any damage incurred during transit. Report any damage to your retailer immediately.

4.2 Location

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and access. Avoid direct sunlight or areas with extreme temperatures.

4.3 Water Connection

1. Connect the hot and cold water inlet hoses to the corresponding hot and cold water faucets.
2. Attach the other ends of the hoses to the water inlet valves on the back of the washing machine.
3. Ensure all connections are tight to prevent leaks.

4.4 Drainage

Position the drain hose into a standpipe or laundry tub. Ensure the drain hose is securely fastened to prevent it from dislodging during the drain cycle, which could cause flooding.

4.5 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications listed on the appliance's rating label.

5. OPERATING INSTRUCTIONS

5.1 Preparing Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Check garment care labels for specific washing instructions.
- Empty pockets and close zippers and hooks to prevent damage.

5.2 Loading Laundry

Open the top lid and load items loosely into the washing tub. Do not overload the machine, as this can affect washing performance and cause damage. For optimal results, distribute items evenly around the pulsator.

5.3 Adding Detergent and Additives

Add the appropriate amount of detergent to the dispenser according to the detergent manufacturer's instructions and the load size. If using fabric softener or bleach, add them to their designated compartments in the dispenser.

5.4 Selecting a Wash Program

1. Press the **Power** button to turn on the washing machine.
2. Use the **Program Selector** to choose the desired wash cycle (e.g., Normal, Delicates, Jeans).
3. Adjust additional settings such as **Water Temperature**, **Water Level**, and **Wash Intensity** as needed for your load.
4. If desired, select the **Extra Rinse** option.

5.5 Starting the Wash Cycle

Close the top lid securely. Press the **Start/Pause** button to begin the wash cycle. The machine will automatically fill with water, wash, rinse, and spin.

5.6 After the Wash Cycle

Once the cycle is complete, the machine will signal. Open the lid and remove your laundry promptly to prevent wrinkles and odors. Turn off the machine by pressing the **Power** button.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

6.1 Cleaning the Tub

Perform a tub clean cycle periodically (e.g., once a month) to remove detergent residue and prevent odors. Refer to your control panel for a dedicated 'Tub Clean' program or run a hot wash cycle with no laundry and a cup of white vinegar or a washing machine cleaner.

6.2 Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under warm water to clear any buildup. Clean the dispenser housing with a damp cloth.

6.3 Cleaning the Exterior

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish.

6.4 Water Inlet Filters

Periodically check and clean the water inlet filters to prevent blockages. Turn off the water supply, disconnect the hoses, and use pliers to pull out the filters. Rinse them under running water and reinsert.

7. TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Washing machine does not start	Power cord unplugged; Lid not closed properly; Power outage.	Ensure power cord is securely plugged in; Close the lid completely; Check household circuit breaker.

Problem	Possible Cause	Solution
Water does not fill	Water supply turned off; Water inlet hoses kinked; Water inlet filters clogged.	Turn on water supply; Straighten hoses; Clean inlet filters.
Water does not drain	Drain hose kinked or clogged; Drain pump filter clogged.	Straighten or clear drain hose; Refer to the full user guide for drain pump filter cleaning instructions.
Excessive vibration or noise	Machine not level; Load unbalanced; Shipping bolts not removed.	Adjust leveling feet; Redistribute laundry evenly; Ensure all shipping bolts are removed during installation.

8. SPECIFICATIONS

Brand	WINIA
Model Number	DWF-DG1B386CW
Capacity	19 kg
Type	Automatic Top Load
Color	White
Material	Plastic
Max Spin Speed	800 RPM
Standard Cycles	10
Dimensions (W x D x H)	67 cm x 63 cm x 109 cm
Weight	48 kg
Components Included	Washing machine, User guide



Figure 5: Diagram illustrating the dimensions (height, width, depth) of the WINIA DWF-DG1B386CW washing machine.

9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official WINIA website. For technical support, service, or to order replacement parts, please contact WINIA customer service through the contact information provided in your original product documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B079NRZR76>

More documents and user manuals: <https://manuals.plus/>