

Bosch MMB65G5M

Bosch SilentMixx MMB65G5M Stand Mixer User Manual

Model: MMB65G5M

INTRODUCTION

Thank you for choosing the Bosch SilentMixx MMB65G5M Stand Mixer. This appliance is designed for efficient blending, mixing, and crushing, featuring an 800W motor and a durable ThermoSafe glass jug. Please read this manual carefully before first use to ensure safe operation and optimal performance. Keep these instructions for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Blades are extremely sharp. Handle the Easy Klickknife blade unit with extreme care during assembly, disassembly, and cleaning.
- Never touch moving parts during operation. Keep hands and utensils out of the jug while blending.
- Ensure the lid is securely closed before operating the blender.
- Do not process hot liquids that exceed the maximum fill line indicated on the jug. Allow very hot liquids to cool slightly before blending to prevent pressure buildup.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any way. Contact customer service for repair.
- Use only original Bosch accessories and parts.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Bosch SilentMixx MMB65G5M blender:

- **Motor Unit:** The base containing the 800W motor and control dial.
- **ThermoSafe Glass Jug:** A durable, heat-resistant glass jug with a capacity of 2.3 liters (1.5 liters for food). Features measurement markings.
- **Lid:** Secures to the top of the jug to prevent spills during operation.
- **Measuring Cup:** Integrated into the lid, allows adding ingredients during blending.
- **Easy Klickknife Blade Unit:** Removable blade assembly for efficient blending and easy cleaning.
- **Pusher:** Used to push ingredients towards the blades, especially for thick mixtures or frozen items.



Image: Bosch SilentMixx MMB65G5M blender with its main components, including the motor unit, ThermoSafe glass jug, and the pusher accessory.

SETUP

Follow these steps to prepare your blender for use:

1. **Place the Motor Unit:** Position the motor unit on a clean, dry, and stable surface.
 2. **Assemble the Blade Unit:** Ensure the Easy Klickknife blade unit is securely attached to the bottom of the ThermoSafe glass jug. Turn clockwise until it clicks into place.
 3. **Place the Jug:** Carefully place the assembled glass jug onto the motor unit. Ensure it is seated correctly and stable.
 4. **Add Ingredients:** Place your desired ingredients into the jug. Do not exceed the maximum fill line.
 5. **Secure the Lid:** Place the lid onto the jug and turn it clockwise until it is firmly locked. Insert the measuring cup into the lid opening.
 6. **Connect to Power:** Plug the power cord into a suitable electrical outlet.
-

OPERATING INSTRUCTIONS

General Operation

The control dial on the motor unit allows you to select different speeds and functions:

- **0/Off:** Turns the appliance off.
- **On:** Activates the blender at a low speed.
- **Min - Max:** Rotate the dial to gradually increase the blending speed from minimum to maximum.
- **Pulse:** For short bursts of maximum power. Turn the dial to 'Pulse' and hold; release to stop. Useful for chopping or breaking down larger pieces.

Automatic Programs

The SilentMixx MMB65G5M features two automatic programs for convenience:

- **Smoothie Program:** Designed for creating smooth, consistent smoothies. Select the smoothie icon on the dial. The blender will run through a pre-programmed cycle.
- **Ice Crush Program:** Optimized for crushing ice cubes. Select the ice crush icon on the dial. The blender will execute a specific sequence to effectively crush ice.

Using the Pusher: For thick mixtures or when ingredients get stuck, remove the measuring cup from the lid and use the pusher to guide ingredients towards the blades. Do not use other utensils.





CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your blender.

1. **Unplug:** Always unplug the appliance before cleaning.
2. **Disassemble:** Remove the jug from the motor unit. Carefully detach the Easy Klickknife blade unit from the bottom of the jug by turning it counter-clockwise. Remove the lid and measuring cup.
3. **Clean Jug, Lid, and Blade Unit:** The ThermoSafe glass jug, lid, and Easy Klickknife blade unit are dishwasher-safe. Alternatively, wash them by hand using warm soapy water and a brush for the blades. Rinse thoroughly and dry. Handle blades with extreme caution.
4. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or rinse it under running water.
5. **Reassemble:** Once all parts are dry, reassemble the blade unit to the jug and store the blender.





Image: The Easy Klickknife blade unit, designed for easy detachment and cleaning.

TROUBLESHOOTING

If you encounter issues with your Bosch SilentMixx MMB65G5M, refer to the table below:

Problem	Possible Cause	Solution
Blender does not start.	Appliance not plugged in. Jug not correctly assembled.	Check power connection. Ensure jug and blade unit are securely locked onto the motor unit.
Ingredients are not blending smoothly.	Too little liquid. Ingredients are too large or too hard. Overfilling the jug.	Add more liquid. Cut ingredients into smaller pieces. Do not exceed the maximum fill line. Use the pusher.
Loud noise or vibration during operation.	Jug or blade unit not properly seated. Foreign object in the jug.	Check that the jug and blade unit are securely assembled. Unplug and inspect for any foreign objects.
Leakage from the bottom of the jug.	Blade unit not securely attached. Seal ring damaged or missing.	Ensure the Easy Klickknife blade unit is tightened correctly. Check the seal ring for damage and proper placement.

TECHNICAL SPECIFICATIONS

- **Brand:** Bosch
- **Model Number:** SilentMixx (MMB65G5M)

- **Power:** 800 Watts
 - **Voltage:** 220 V
 - **Capacity:** 2.3 Liters (1.5 Liters for food)
 - **Material:** Stainless steel (base), ThermoSafe Glass (jug)
 - **Number of Speeds:** Variable (Min-Max) + Pulse + 2 Automatic Programs
 - **Noise Level:** 73 Decibels
 - **Product Dimensions:** 19.6 x 23.7 x 43.7 cm
 - **Weight:** 5 kg
-

WARRANTY AND SUPPORT

Your Bosch SilentMixx MMB65G5M Stand Mixer comes with a manufacturer's warranty. For detailed warranty information, please refer to the warranty card included with your product or visit the official Bosch website. For technical support, spare parts, or service inquiries, please contact Bosch customer service in your region. Keep your proof of purchase for warranty claims.

For further assistance, please visit: www.bosch-home.com