

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lenco](#) /

› [Lenco SCD-37 Kids CD Player - CD Radio - Stereo System - Boombox - FM Radio Tuner - USB Port - MP3 - 2 x 1.5W RMS Power - Mains and Battery Operated - Blue](#)

Lenco SCD-37 USB Blue

Lenco SCD-37 Portable CD/Radio Boombox User Manual

Model: SCD-37 USB Blue

INTRODUCTION

Thank you for purchasing the Lenco SCD-37 Portable CD/Radio Boombox. This device is designed for ease of use and provides versatile audio playback options, including CD, FM radio, and USB. This manual provides important information on how to set up, operate, and maintain your device to ensure long-lasting enjoyment.

IMPORTANT SAFETY INFORMATION

Please read these safety instructions carefully before using the device and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or other hazards.

- **Power Source:** Ensure the power supply voltage matches the rating label on the device. Use only the provided power cable.
- **Batteries:** If using batteries, ensure they are inserted with correct polarity. Do not mix old and new batteries, or different types of batteries. Remove batteries if the device will not be used for a long period.
- **Water and Moisture:** Do not expose the device to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids on the device.
- **Ventilation:** Do not block any ventilation openings. Ensure adequate space around the device for proper airflow.
- **Heat:** Keep the device away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the device from the power outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Volume Level:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

PACKAGE CONTENTS

Please check the box for the following items:

- Lenco SCD-37 Portable CD/Radio Boombox

- AC Power Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Lenco SCD-37.



Figure 1: Front view of the Lenco SCD-37 Portable CD/Radio Boombox, showcasing its blue and black design with visible controls and speakers.

Controls and Features:

- **POWER Button:** Turns the unit on or off.
- **FOLDER Button:** (For USB mode) Navigates through folders on the USB device.
- **PREV/NEXT Buttons:** Skips to the previous/next track (CD/USB) or tunes to the previous/next radio station (FM).
- **PLAY/PAUSE Button (▶/||):** Starts or pauses CD/USB playback.
- **STOP Button (■):** Stops CD/USB playback.
- **REPEAT Button:** Repeats the current track or all tracks (CD/USB).

- **PROG Button:** Programs CD/USB tracks for custom playback order.
- **FM ST. Indicator:** Lights up when an FM stereo signal is received.
- **Display:** Shows track number, radio frequency, or mode.
- **FUNCTION Switch (CD/USB/FM):** Selects the operating mode.
- **VOLUME Control:** Adjusts the audio output level.
- **TUNING Control:** Tunes to FM radio frequencies.
- **USB Port:** For connecting USB flash drives for MP3/WMA playback.
- **AUX-IN Jack:** For connecting external audio devices (e.g., smartphone, tablet).
- **Headphone Jack (3.5mm):** For private listening.
- **FM Antenna:** Extendable antenna for FM radio reception.



Figure 2: Detailed view of the USB port on the Lenco SCD-37, demonstrating how a USB flash drive can be connected for media playback.

SETUP

Powering the Device:

The Lenco SCD-37 can be powered by either AC mains or batteries.

1. AC Power:

- Ensure the unit is switched off.
- Connect the supplied AC power cable to the AC IN jack on the back of the unit.
- Plug the other end of the cable into a standard wall outlet (230V AC, 50Hz).

2. Battery Power:

- Ensure the unit is switched off and disconnected from AC power.
- Open the battery compartment cover on the bottom of the unit.
- Insert 6 x 'C' size (UM-2) batteries (not included), ensuring correct polarity (+/-).
- Close the battery compartment cover securely.
- *Note:* Battery operation is ideal for portability. Remove batteries if the unit will not be used for extended periods to prevent leakage.

OPERATING INSTRUCTIONS

CD Playback:

1. Slide the FUNCTION switch to the "CD" position.
2. Press the "OPEN/CLOSE" area on the CD compartment lid to open it.
3. Place a CD (label side up) onto the spindle, gently pressing it down until it clicks into place.
4. Close the CD compartment lid firmly.
5. The CD will start playing automatically. If not, press the PLAY/PAUSE button.
6. Use the PREV/NEXT buttons to skip tracks.
7. Press the REPEAT button to repeat the current track (one press) or all tracks (two presses).
8. Press the STOP button to stop playback.
9. Adjust the VOLUME control to your desired listening level.

FM Radio Operation:

1. Slide the FUNCTION switch to the "FM" position.
2. Extend the FM telescopic antenna fully for optimal reception.
3. Rotate the TUNING control to search for your desired FM radio station.
4. The FM ST. indicator will light up when a strong stereo signal is received.
5. Adjust the VOLUME control to your desired listening level.

USB Playback:

1. Slide the FUNCTION switch to the "USB" position.
2. Insert a USB flash drive (with MP3/WMA files) into the USB port.
3. The unit will automatically detect and begin playing the first compatible audio file.
4. Use the PREV/NEXT buttons to skip tracks.
5. Use the FOLDER button to navigate through folders on the USB device.
6. Press the REPEAT button to repeat the current track or all tracks.

7. Press the STOP button to stop playback.
8. Adjust the VOLUME control to your desired listening level.

Using the AUX-IN Jack:

1. Connect one end of a 3.5mm audio cable (not included) to the AUX-IN jack on the unit.
2. Connect the other end of the cable to the headphone jack or audio output of your external device (e.g., smartphone, tablet).
3. Slide the FUNCTION switch to the "AUX" position (if available, otherwise ensure no CD/USB is playing and external device is primary source).
4. Start playback on your external device.
5. Adjust the volume on both the Lenco SCD-37 and your external device for optimal sound.

Using Headphones:

For private listening, plug a 3.5mm stereo headphone (not included) into the HEADPHONE jack. The built-in speakers will automatically be muted.

MAINTENANCE

Cleaning the Unit:

- Always unplug the unit from the power source before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- For stubborn stains, dampen the cloth slightly with water or a mild detergent, then wipe dry immediately.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- To clean the CD lens, use a commercially available CD lens cleaner.

Storage:

If you plan to store the unit for an extended period, remove the batteries to prevent leakage. Store the unit in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you experience problems with your Lenco SCD-37, please check the following points before contacting service personnel.

Problem	Possible Cause	Solution
No power	Power cable not connected securely / Batteries are dead or inserted incorrectly.	Check AC power cable connection. / Replace batteries or check polarity.
CD does not play	CD inserted incorrectly / CD is dirty or scratched / CD compartment lid not closed.	Insert CD with label side up. / Clean or replace CD. / Close lid firmly.
Poor FM reception	Antenna not extended / Weak signal.	Extend and adjust the FM telescopic antenna. / Try moving the unit to a different location.
USB playback issues	USB drive not formatted correctly / Incompatible file format / USB drive not inserted properly.	Ensure USB drive is FAT32 formatted. / Only MP3/WMA files are supported. / Re-insert USB drive.

Problem	Possible Cause	Solution
No sound from speakers	Volume too low / Headphones connected.	Increase volume. / Disconnect headphones.

SPECIFICATIONS

Brand	Lenco
Model Number	SCD-37 USB Blue
Color	Blue
Power Output	2 x 1.5 W RMS
Connectivity	USB, Auxiliary (3.5mm)
Compatible Media	CD, CD-R/RW, MP3/WMA (via USB)
Radio Tuner	FM
Power Source	AC Power (230V) or 6 x 'C' Batteries
Dimensions (L x W x H)	26.2 x 22.2 x 12.5 cm (10.3 x 8.7 x 4.9 inches)
Weight	1.43 kg (3.15 lbs)


WARRANTY AND SUPPORT





Lenco products are designed and manufactured to the highest quality standards. This product is covered by a warranty period as per local regulations, typically 2 years for spare parts availability.

For technical support, warranty claims, or service inquiries, please refer to the contact information provided on the official Lenco website or your local retailer's support channels. Please have your model number (SCD-37 USB Blue) and purchase details ready when contacting support.

For more information, visit the official Lenco website:www.lenco.com

Related Documents - SCD-37 USB Blue

	<p>Lenco SCD-24/SCD-27 Stereo FM Radio with CD Player Instruction Manual</p> <p>This instruction manual provides detailed information on the Lenco SCD-24 and SCD-27 Stereo FM Radio with CD Player, covering safety precautions, operation, maintenance, specifications, and warranty information.</p>
---	---

 <p>Lenco MODEL: SCD-6900 PORTABLE DAB+ AND FM RADIO WITH CD, CASSETTE AND BLUETOOTH</p>	<p>Lenco SCD-6900 Portable DAB+ and FM Radio with CD, Cassette, and Bluetooth User Manual</p> <p>Comprehensive user manual for the Lenco SCD-6900, a portable radio featuring DAB+ and FM reception, CD player, cassette deck, and Bluetooth connectivity. Learn about setup, operation, features, and safety precautions.</p>
 <p>Lenco Model SCD-301/SCD-41</p>	<p>Lenco SCD-301/SCD-41 Portable FM Radio with CD, MP3, and USB Player User Manual</p> <p>Comprehensive user manual for the Lenco SCD-301/SCD-41 portable FM radio. Learn how to connect to power, operate the device, use FM radio functions, CD/USB playback, MP3 features, AUX input, and troubleshooting.</p>
 <p>Lenco Model SCD-720</p>	<p>Lenco SCD-720 Portable Boombox User Manual</p> <p>User manual for the Lenco SCD-720 portable boombox, covering DAB+/FM radio, Bluetooth, CD, cassette, and USB playback. Includes setup, operation, safety, and troubleshooting guides.</p>
 <p>QFX PORTABLE STEREO SYSTEM J-49U OPERATION & SERVICE</p>	<p>QFX J-49U Portable Stereo System Operational Manual</p> <p>Comprehensive operational manual for the QFX J-49U portable stereo system. Covers setup, cassette, CD, radio, Bluetooth, USB playback, recording functions, maintenance, battery usage, and remote control operation. Includes detailed specifications.</p>
 <p>Lenco STEREO FM RADIO WITH CD PLAYER SCD-24 / SCD-27</p>	<p>Lenco SCD-24 / SCD-27 Stereo FM Radio with CD Player User Manual</p> <p>User manual for the Lenco SCD-24 and SCD-27 portable stereo FM radio with CD player. Learn about setup, operation, safety precautions, and specifications for your Lenco device.</p>

DECLARATION OF CONFORMITY

Manufacturer: Conrad Electronic SE
Licensee/holder: Conrad Electronic SE
Address: Kolln - Campus - Straße 1
D - 92242 Pleissfeld

We declare on our own responsibility, that the product:

Kind of equipment: **LENCO SCD 37 USB CD RADIO ORANGE**
Order - No: **325587**

is in compliance with following norm(s) or documents

EN 55024:2001 + A1:2003 A2:2006

EN 55024:2006

EN 55014:2001 A2:2003

EN 55024:2007

EN 55024:2002 + A1:2006 A13:2008

Regulation (EC) No. 1279/2008

The author undertakes to the manufacturer

Accounting to the regulations

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%

100%