

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [M-Wave](#) /

> [M-Wave Bicycle Lift User Manual](#)

M-Wave 430098

M-Wave Bicycle Lift User Manual

MODEL: 430098

Introduction

Welcome to the user manual for your M-Wave Bicycle Lift. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your bicycle lift. Please read this manual thoroughly before use and retain it for future reference.

The M-Wave Bicycle Lift is designed to provide a space-saving storage solution for bicycles and other heavy items, supporting weights up to 125 lbs (56.7 kg). It is particularly suitable for e-bikes and features a robust pulley system for easy lifting and lowering.

Safety Information

Always prioritize safety when installing and operating the M-Wave Bicycle Lift.

- Ensure the mounting surface (ceiling) is structurally sound and capable of supporting the lift's weight plus the maximum load (125 lbs / 56.7 kg). Consult a professional if unsure.
- Use appropriate mounting hardware for your ceiling type. The included hardware may not be suitable for all surfaces.
- Do not exceed the maximum weight capacity of 125 lbs (56.7 kg). Overloading can cause damage to the lift or injury.
- Keep hands and fingers clear of moving parts, especially during lifting and lowering operations.
- Regularly inspect the ropes, pulleys, and hooks for signs of wear, fraying, or damage. Replace worn components immediately.
- Ensure the locking mechanism engages properly when the load is at the desired height.
- Do not allow children to operate or play near the bicycle lift.
- Install the lift in an area where there is sufficient clearance to avoid accidental contact with the lifted item.
- The hooks are designed with plastic covers for scratch protection; ensure these are intact before use.
- The rope is 6.5mm thick and designed for ceilings up to 13 feet (4 meters) high. Do not extend the rope beyond its intended length.

Package Contents

Verify that all components are present before beginning installation.

- 2 x Pulley Assemblies (one with locking mechanism)
- 2 x Lifting Hooks with plastic covers
- 1 x Rope (6.5mm thick, suitable for up to 13 ft / 4m ceiling height)
- 1 x Wall Cleat (for securing excess rope)
- Mounting Hardware (screws, anchors - verify suitability for your ceiling type)

- **Strong ceiling mount**
- **E-bike compatible**
- **Scratch-free hooks**
- **Durable lifting rope**
- **Space-saving storage**



M-WAVE 

An image showing all the individual components included in the M-Wave Bicycle Lift package, including the pulley assemblies, hooks, rope, and mounting hardware.

Setup and Installation


Tools Required

- Drill
- Drill bits appropriate for mounting hardware and ceiling material
- Measuring Tape


- Pencil
- Stud Finder (if mounting to ceiling joists)
- Ladder

Installation Steps

1. **Determine Mounting Location:** Choose a ceiling location that can safely support the weight of the lift and the item being stored. Ensure there is enough space to raise and lower the item without obstruction. The two pulley assemblies should be mounted parallel to each other, spaced appropriately for the item you intend to lift (e.g., bicycle handlebars and seat).
2. **Mark Pilot Holes:** Hold one pulley assembly against the ceiling at your desired mounting point. Use a pencil to mark the locations for the mounting screws. Repeat for the second pulley assembly, ensuring it is parallel to the first and at the correct distance.
3. **Drill Pilot Holes:** Drill pilot holes at the marked locations. The size of the drill bit should match the recommended size for your mounting hardware and ceiling material.
4. **Attach Pulley Assemblies:** Securely fasten both pulley assemblies to the ceiling using the provided mounting hardware or appropriate hardware for your ceiling type. Ensure they are firmly attached and do not wobble.
5. **Thread the Rope:** Identify the pulley assembly with the locking mechanism. This will be the "control" side. Thread one end of the rope through the pulley system, following the diagram in the manual (or typical pulley system threading). The rope should pass through the pulleys on both ceiling-mounted units and then down to the hooks. Ensure the rope is correctly routed through the locking mechanism on the control side. Tie secure knots to attach the hooks to the ends of the rope that will hold the item.
6. **Install Wall Cleat:** Mount the wall cleat at a convenient height on a nearby wall to secure the excess rope when the item is lifted.

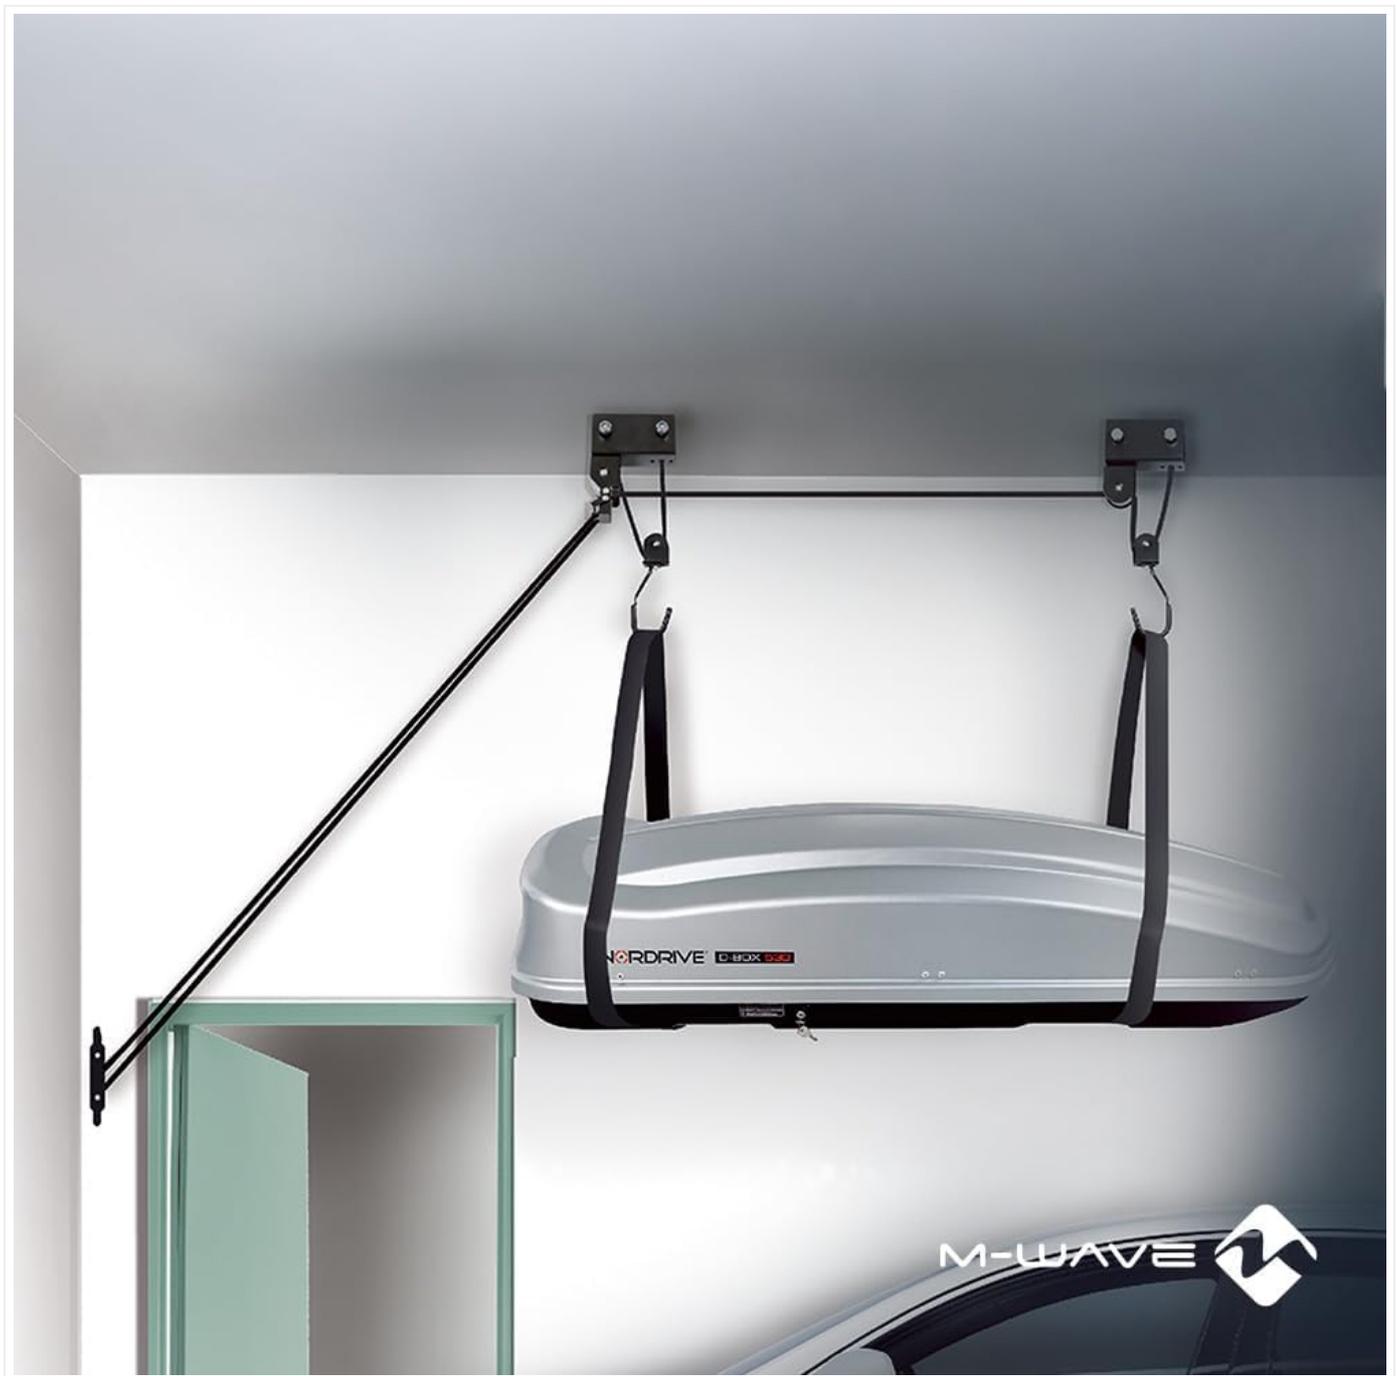

An image showing the M-Wave Bicycle Lift installed on a ceiling, with a bicycle suspended beneath it, demonstrating the typical setup and use.

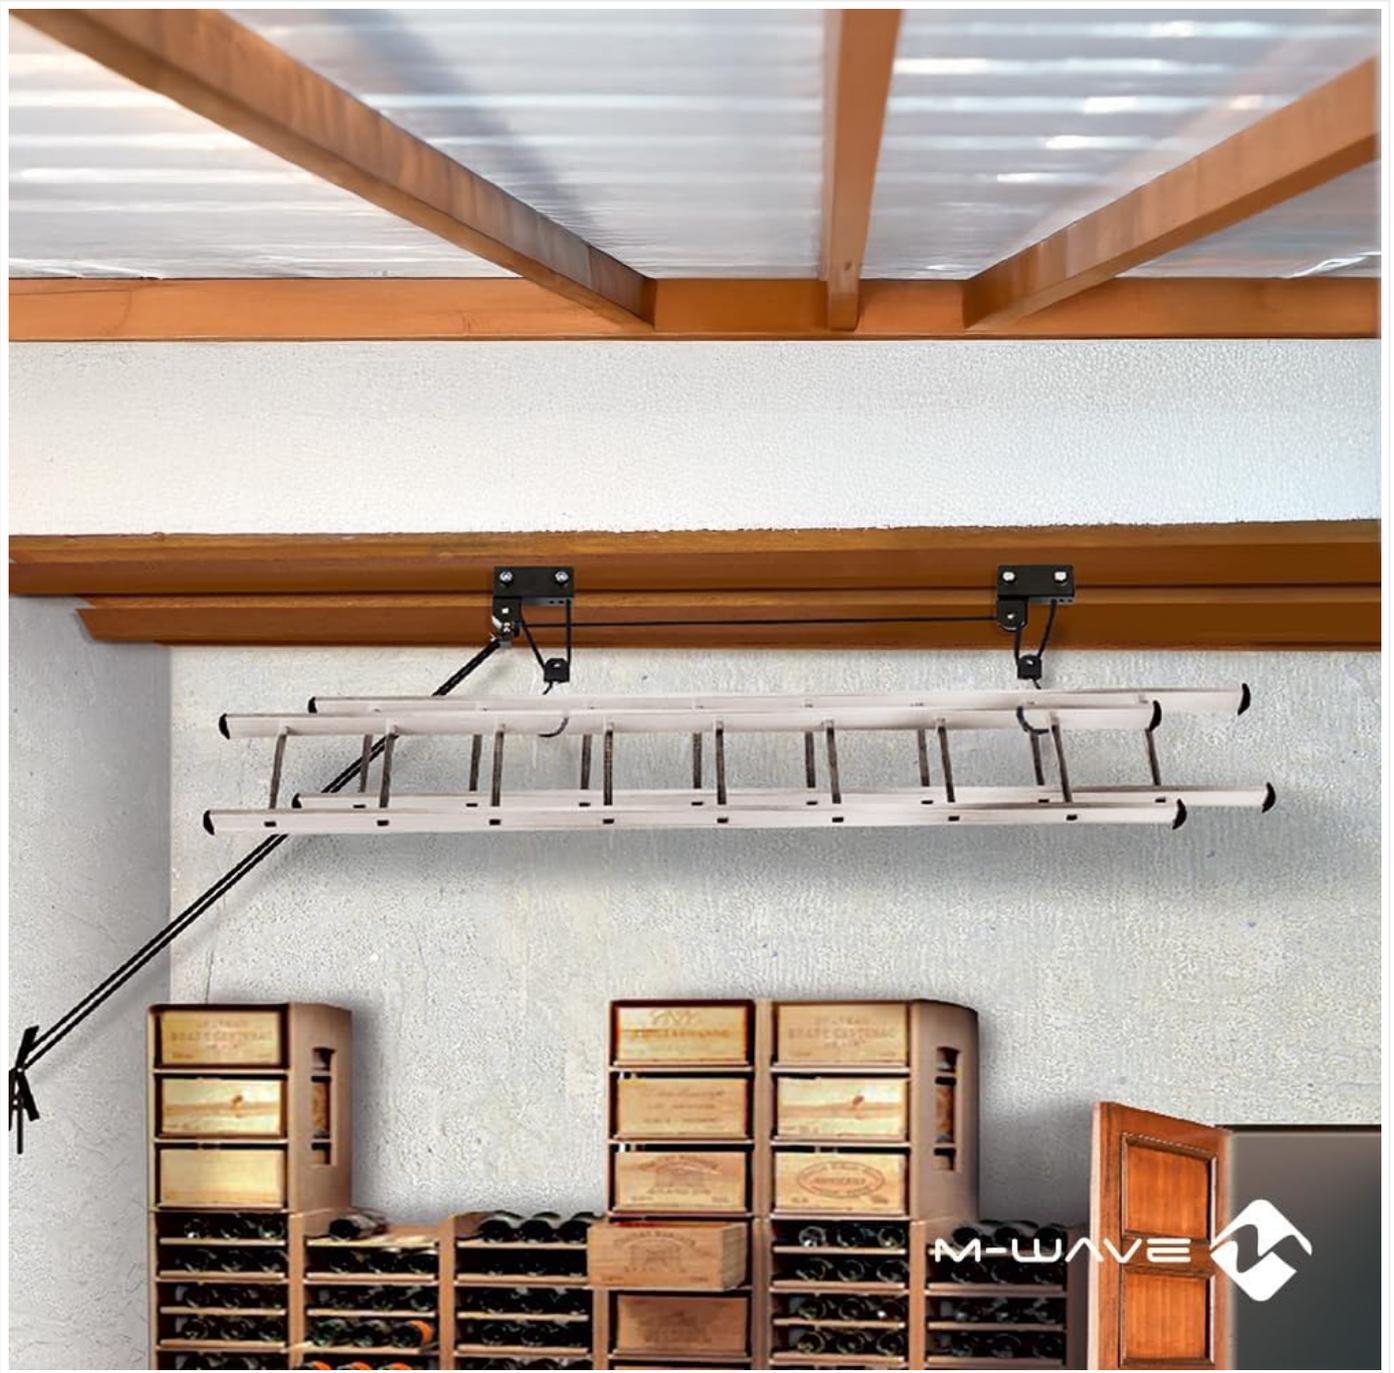

An image showing the M-Wave Bicycle Lift installed on a ceiling, with a large cargo box suspended beneath it, illustrating its versatility for various heavy items.



An image showing the M-Wave Bicycle Lift installed on a ceiling, with a ladder suspended beneath it, demonstrating its use for long, bulky items.

Operating Instructions

Lifting an Item

1. **Attach Item:** Carefully attach the hooks to the item you wish to lift. For bicycles, typically attach one hook to the handlebars and the other to the seat. Ensure the item is balanced.
2. **Pull Rope:** Stand near the control side of the lift. Pull the free end of the rope downwards to raise the item. The pulley system will reduce the effort required.
3. **Engage Lock:** Once the item reaches the desired height, slowly release tension on the rope. The automatic locking mechanism will engage, holding the item securely in place.
4. **Secure Excess Rope:** Wrap the excess rope around the wall cleat to keep it tidy and prevent accidental lowering.

Lowering an Item

1. **Release Lock:** Gently pull the rope downwards to slightly lift the item, which will disengage the locking mechanism.
2. **Control Descent:** Slowly and steadily release the rope, allowing the item to descend. Maintain control of the rope at all times.
3. **Detach Item:** Once the item is safely on the ground, detach the hooks.



An image of the M-Wave Bicycle Lift showing a maximum height indication of 4 meters (approximately 13 feet), illustrating the maximum ceiling height it can accommodate.

Maintenance

Regular maintenance ensures the longevity and safe operation of your M-Wave Bicycle Lift.

- **Rope Inspection:** Periodically inspect the entire length of the rope for any signs of fraying, cuts, or excessive wear. If the rope shows significant wear, replace it immediately with a high-strength rope of similar diameter (6.5mm).
- **Pulley Inspection:** Check the pulleys for smooth operation. Ensure they rotate freely and are not obstructed by dirt or debris.
- **Hook Inspection:** Verify that the plastic covers on the hooks are intact to prevent scratching your items. Replace hooks if they are bent or damaged.

- **Mounting Hardware:** Annually check all mounting screws and anchors to ensure they remain tight and secure. Retighten if necessary.
- **Lubrication:** Apply a small amount of silicone spray or light lubricant to the pulley axles if they become stiff. Avoid over-lubrication.
- **Cleaning:** Wipe down the metal components with a damp cloth to remove dust and grime. Do not use abrasive cleaners.

Troubleshooting

Problem	Possible Cause	Solution
Lift is difficult to raise/lower	Overloaded; Pulleys are stiff/dirty; Rope is frayed or binding	Reduce load (do not exceed 125 lbs); Clean and lubricate pulleys; Inspect and replace rope if damaged.
Locking mechanism does not engage	Rope not threaded correctly; Mechanism is dirty/obstructed; Worn mechanism	Re-thread rope according to instructions; Clean mechanism; Contact manufacturer for replacement parts if worn.
Lift sways excessively	Item not balanced; Mounting points too close/far apart; Loose mounting hardware	Re-position item on hooks for better balance; Adjust spacing of pulley assemblies if possible; Tighten all mounting hardware.
Hooks scratching item	Plastic covers are missing or damaged	Replace or repair plastic covers on hooks.

Specifications

Feature	Detail
Model	430098
Brand	M-Wave
Material	Aluminum
Color	Black
Max. Weight Capacity	125 lbs (56.7 kg)
Max. Ceiling Height	13 feet (4 meters)
Rope Thickness	6.5mm
Mounting Type	Ceiling Mount
Product Dimensions (packaged)	11 x 4.5 x 6 inches
Item Weight	2.5 Kilograms
UPC	887539023034





Warranty and Support


For warranty information or technical support, please contact M-Wave customer service or refer to the official M-Wave website. Keep your purchase receipt as proof of purchase.

Note: Specific warranty terms may vary by region and retailer. Please consult your point of purchase or the manufacturer's official documentation for detailed warranty information.

© 2024 M-Wave. All rights reserved.

Related Documents - 430098

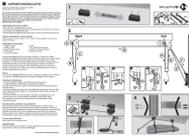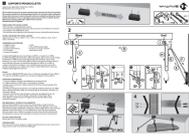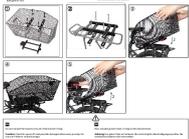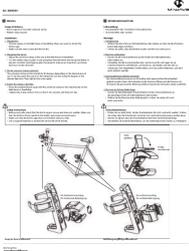	<p>M-Wave Bike Lift Strong 430098: Ceiling Mounted Bicycle Storage System - Instructions & Guide</p> <p>Detailed instructions for installing and using the M-Wave Bike Lift Strong (Art. 430098) by Messingschlager. Safely store bicycles up to 57kg on your ceiling. Includes parts list, safety warnings, and fitting guide.</p>
	<p>M-WAVE Bike Lift Installation Guide and User Manual</p> <p>Comprehensive guide for installing and using the M-WAVE Bike Lift (Art. 430098) for safely storing bicycles, roof boxes, or ladders from your garage ceiling. Includes safety instructions, parts list, and step-by-step fitting instructions.</p>
	<p>M-WAVE Art. 431603 Bicycle Basket Installation Guide</p> <p>Step-by-step installation instructions for the M-WAVE Art. 431603 bicycle basket using the QR system. Includes safety warnings and distributor information.</p>
	<p>M-WAVE Universal Bike Bottle Cage Installation Manual</p> <p>Installation and safety instructions for the M-WAVE universal bike bottle cage (Art. 340950/1), including preparation, mounting, and usage guidelines.</p>
	<p>M-WAVE Art. 230187 Folding Lock Manual</p> <p>Instructions for using and maintaining the M-WAVE Art. 230187 folding lock, including battery replacement and safety precautions.</p>
	<p>M-WAVE Art. 440400 Bicycle Rack Bag Holder - User Manual</p> <p>User manual for the M-WAVE Art. 440400 bicycle rack bag holder. Learn about maximum load capacity, secure luggage attachment, pre-ride checks, and usage guidelines.</p>

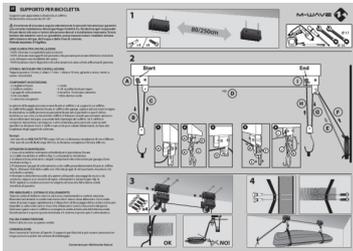

[M-Wave Bike Lift Strong 430098: Ceiling Mounted Bicycle Storage System - Instructions & Guide](#)

Detailed instructions for installing and using the M-Wave Bike Lift Strong (Art. 430098) by Messingschlagler. Safely store bicycles up to 57kg on your ceiling. Includes parts list, safety warnings, and fitting guide.


lang:it score:38 filesize: 4.02 M page_count: 4 document date: 2025-02-07

[\[pdf\] User Manual](#)

430098 manual 250207 web 1 3 4 MessingschlaglerDownload nowBikeLift Strong M Wave Numero articolo è conforme alla seguente disposizione in materia 2006 42 EC Norme e specifiche tecniche applicate EN ISO M WAVE Bike Lift bicycle lift Messingschlaglermessingschlagler content Manuals 250207messingschlagler |||

IT SUPPORTO PER BICICLETTA Supporto per appendere la bicicletta al soffitto. Per biciclette con ruote ... clean and dry place in the original box. Keep for future reference distributed by: 02/2025 Art. **430098** DE FAHRRADLIFT Fahrradlift um ein Fahrrad an der Decke aufzuhngen. Fr Fahrder mit 26 -29 R...



lang:it score:35 filesize: 4.02 M page_count: 4 document date: 2025-02-07

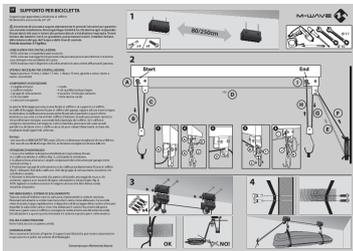

[M-WAVE Bike Lift Installation Guide and User Manual](#)

Comprehensive guide for installing and using the M-WAVE Bike Lift (Art. 430098) for safely storing bicycles, roof boxes, or ladders from your garage ceiling. Includes safety instructions, parts list, and step-by-step fitting instructions.

lang:it score:32 filesize: 1.2 M page_count: 2 document date: 2024-02-01

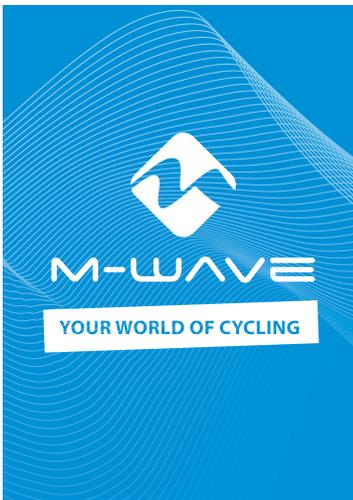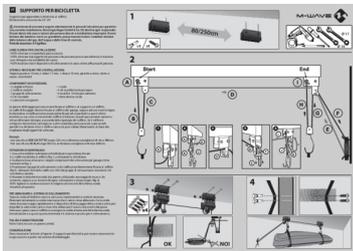

[\[pdf\] Accessories](#)

BESCHREIBUNG DESCRIPTION ART Messingschlagler neon yellow with reflective logo on M Wave eurohole card Kids· children size XS S Reflex Safety Products manuals in CS DE EN FR HU IT m wave messingschlagler content prospekte en

ART.-NR. BESCHREIBUNG UVP DESCRIPTION 11 ART.-NR. BESCHREIBUNG UVP DESCRIPTION YOUR WORLD OF C ... for 12 - 29 for using at the front or rear axle usable for almost every bike with disc brakes **430098** U 36,90 FAHRRADLIFT BIKE LIFT STRONG mit Gummi berzogenen Befestigungshaken zum Schutz v...

lang:en score:18 filesize: 26.24 M page_count: 183 document date: 2020-08-18



[\[pdf\]](#) Accessories

M WAVE Prospekt herunterladen DS 10 18 Illu reflex Spiralkabelschloss Messingschlager m wave messingschlager content prospekte de |||

YOUR WORLD OF CYCLING M-Wave, das sind erstklassige Produkte fr alle Radfahrer, die insbesondere F ... for 12 - 29 for using at the front or rear axle usable for almost every bike with disc brakes **430098** U 40,90 /set E BIKES UP TO 57 KG FAHRRADLIFT BIKE LIFT STRONG mit Gummi bezogenen Befestig...
lang:en score:12 filesize: 19.94 M page_count: 208 document date: 2022-06-22



[\[pdf\]](#) Accessories

M Wave 2024 messingschlager content prospekte en |||

YOUR WORLD OF CYCLING M-Wave, das sind erstklassige Produkte fr alle Radfahrer, die insbesondere F ... with disc brakes 154 150 mm P.C. PROTECT DISC BRAKE OK ART.-NR. BESCHREIBUNG UVP DESCRIPTION **430098** 41,90 /set E BIKES UP TO 57 KG FAHRRADLIFT BIKE LIFT STRONG mit Gummi bezogenen Befestigun...

lang:en score:12 filesize: 15.71 M page_count: 204 document date: 2023-05-26