

USARMT HTR-D10

USARMT HTR-D10 Remote Control User Manual

Compatible with Haier TVs

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your USARMT HTR-D10 Remote Control. This remote is designed as a direct replacement for various Haier TV models, offering immediate functionality without complex setup.

The HTR-D10 remote control is compatible with a wide range of Haier TV models, including but not limited to: HL19K1, HL19R1, HLC19R1, HLC19R1A, HLC19K1, HLC19K1A, HLC19K1C, HLC19KW1, HLC19KW1A, HLC19KW2, HLC19KW2A, HLC19K2A, HLC19SL2A, HLC22XSLW2, HLC22R1, HL22F1, HLC22KW2, HL22K1, HLC22K1, HL22R1, HLC22KW1, HLC22K1A, HLC22K2A, HLC22R1A, HLC22XSL2A, HLC24XK2A, HLC24XSL2A, HLC26R1A, HLC26R1B, HLC26R1, HLC32R1, HLC32K2A, HLC32R1A.

2. SETUP AND BATTERY INSTALLATION

The HTR-D10 remote control comes pre-programmed and requires no additional setup or programming. Simply install the batteries, and it will be ready for use with your compatible Haier TV.

2.1. Battery Requirements

- Two (2) AAA batteries are required.
- Ensure to use new, high-quality alkaline batteries for optimal performance and longevity.

2.2. Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



HTR-D10





Figure 1: Rear view of the HTR-D10 remote control, highlighting the battery compartment cover and the model number "HTR-D10" embossed at the top.

3. OPERATING INSTRUCTIONS

Once batteries are installed, the remote is ready to operate your compatible Haier TV. Point the remote directly at the TV's infrared sensor.





Figure 2: Front view of the HTR-D10 remote control, displaying all buttons and their labels, including power, number pad, volume, channel, navigation, and function buttons.

3.1. Button Functions Overview

Button	Function
Power (Red Button)	Turns the TV on or off.
Number Pad (0-9)	Direct channel selection.
Input	Selects video input sources (HDMI, AV, Component, etc.).
Mute	Mutes or unmutes the TV audio.
Vol +/-	Adjusts the volume level up or down.
CH +/-	Changes the TV channel up or down.
Menu	Accesses the TV's main menu.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menu options.
Enter	Confirms selections in menus.
Exit	Exits the current menu or on-screen display.
Guide	Displays the electronic program guide (if available).
CCD	Activates Closed Captioning.
MTS/SAP	Selects Multi-channel Television Sound/Secondary Audio Program.
CH.LIST	Displays the channel list.
Picture	Accesses picture settings.

Button	Function
Audio	Accesses audio settings.
ARC	Activates Audio Return Channel (if supported by TV).
Favorite	Accesses favorite channels.
Recall	Switches between the current and previously viewed channel.
Sleep	Sets the sleep timer.
Display	Displays current channel information or status.
Open/Close	Typically for DVD/Blu-ray player tray control (if integrated or connected).
Play/Pause	Controls media playback (play/pause).
Stop	Stops media playback.
Repeat	Repeats current track/chapter (if applicable).
REV (Reverse)	Rewinds media playback.
FWD (Forward)	Fast forwards media playback.
PREV (Previous)	Goes to the previous track/chapter.
NEXT	Goes to the next track/chapter.
D.MENU (Disc Menu)	Accesses DVD/Blu-ray disc menu.
D.CALL (Disc Call)	Specific disc function call.
D.AUDIO (Disc Audio)	Changes audio track on disc.
SETUP	Accesses system setup menu.
SEARCH	Initiates search function.
ANGLE	Changes camera angle on DVD/Blu-ray.
SUBTITLE	Toggles subtitles on/off or selects subtitle track.
PROGRAM	Accesses channel programming or favorite channel setup.

4. TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are inserted correctly with proper polarity (+/-).
- Replace old batteries with new ones.
- Make sure there are no obstructions between the remote and the TV's infrared sensor.
- Confirm the remote is pointed directly at the TV.

- **Limited functionality:**

- Verify your TV model is listed as compatible. While this remote is broadly compatible, some specific TV functions may vary or require the original remote.

5. MAINTENANCE

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Do not drop the remote or subject it to strong impacts.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

6. SPECIFICATIONS

- **Model:** HTR-D10
- **Brand:** USARMT
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Various Haier Television models (refer to Introduction for list)
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Ergonomic design, Pre-programmed

7. WARRANTY AND SUPPORT

This USARMT HTR-D10 remote control comes with a **30-day hassle-free return policy** from the date of purchase. For any issues or support inquiries, please contact your retailer or the manufacturer directly.

Please retain your proof of purchase for warranty claims.