

Hanzim F9

Hanzim Flameless Flickering LED Pillar Candles with Remote and Timer (9-Pack, Ivory)

Model: F9 (H01# Ivory)

1. PRODUCT OVERVIEW

The Hanzim Flameless Flickering LED Pillar Candles offer a safe and convenient alternative to traditional candles. Crafted from real wax, these battery-operated candles provide a realistic flickering flame effect and warm light, enhancing any indoor setting without the risks of open flames, smoke, or dripping wax. This 9-pack set includes various pillar sizes and two remote controls for easy operation.

Key Features:

- **Realistic Appearance:** Made from real ivory wax with LED lights that mimic a natural flickering flame.
- **Safety First:** Battery-powered design eliminates fire risk, smoke, and messy dripping wax, making them safe for homes with children and pets.
- **Convenient Remote Control:** Includes a 10-key remote for easy operation, allowing control of on/off, timer settings, light modes (flicker/static), and brightness levels.
- **Integrated Timer Function:** Set candles to automatically turn off after 2, 4, 6, or 8 hours, with the timer cycling every 24 hours.
- **Long-lasting LED:** LED lamps have a lifespan of up to 50,000 hours, providing extended use.



Figure 1: Hanzim Flameless Flickering LED Pillar Candles in a dark, atmospheric setting.



Figure 2: Safety features of Hanzim Flameless LED Candles, highlighting the absence of matches, smoke, fire risk, and dripping wax.

2. PACKAGE CONTENTS

Your Hanzim Flameless Flickering LED Pillar Candles package includes:

- 9 x LED Flameless Candles (two 4" pillars, two 5" pillars, two 6" pillars, one 7" pillar, one 8" pillar, one 9" pillar; each 2.2" diameter)
- 2 x 10-Key Remote Controls
- 1 x Operating Manual

Note: 2 AA batteries are required per candle and are NOT included in this package.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment at the bottom of each LED candle.
2. Open the battery cover by sliding it off.
3. Insert 2 AA batteries into each candle, ensuring correct polarity (+/-).
4. Replace the battery cover securely.
5. Turn the ON/OFF switch on the bottom of each candle to the "ON" position.

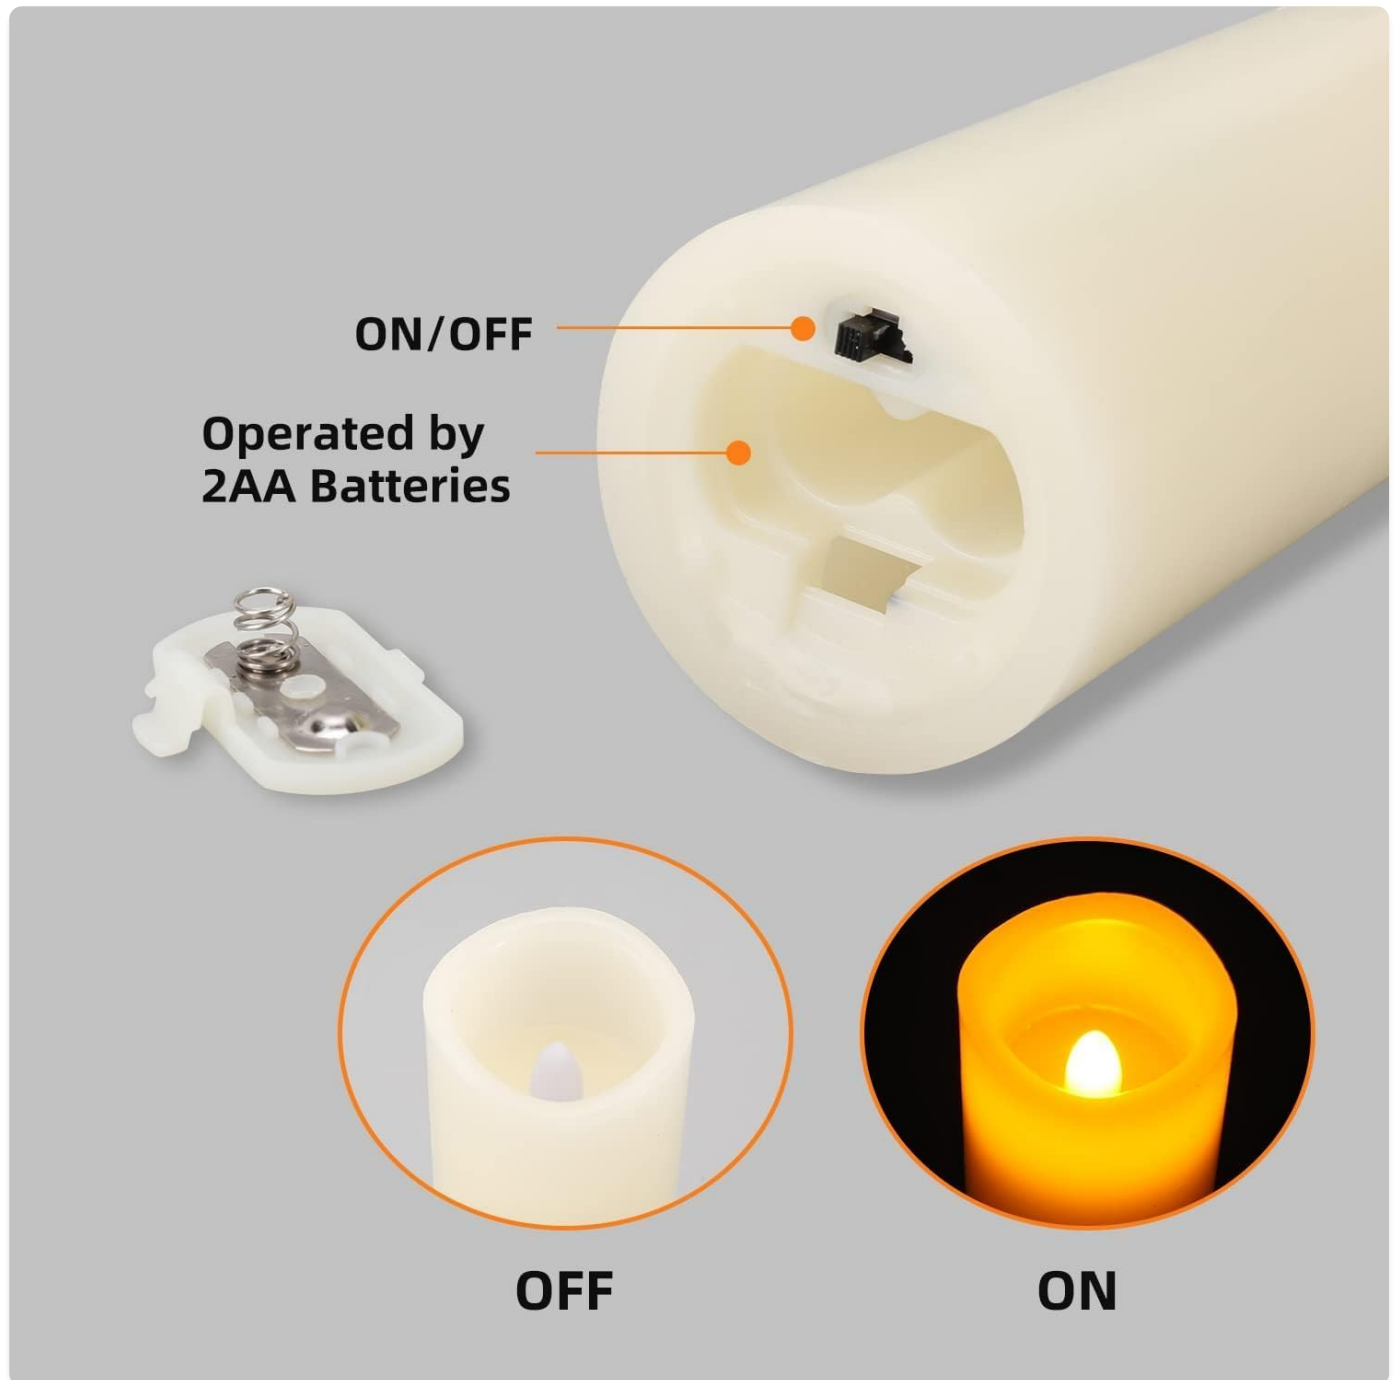


Figure 3: Battery compartment and ON/OFF switch on the base of a Hanzim Flameless LED Candle.

3.2 Initial Placement

Place the candles in your desired indoor locations. Ensure the candles are within range of the remote control for

convenient operation.

4. OPERATING INSTRUCTIONS

The Hanzim Flameless LED Candles are operated using the included 10-key remote control.



Figure 4: The 10-key remote control for Hanzim Flameless LED Candles.

4.1 Remote Control Functions

Button	Function
ON	Turns all paired candles ON.

Button	Function
OFF	Turns all paired candles OFF.
2H / 4H / 6H / 8H	Sets the timer for 2, 4, 6, or 8 hours. Candles will automatically turn off after the set time and turn on again at the same time the next day (24-hour cycle).
Candle Mode	Activates the realistic flickering flame effect.
Light Mode	Activates a steady, non-flickering light.
DIM (-)	Decreases the brightness level.
DIM (+)	Increases the brightness level.

4.2 Pairing the Remote

The remote control is typically pre-paired with the candles. If a candle does not respond, ensure its bottom switch is in the "ON" position and try pressing the "ON" button on the remote again while pointing it directly at the candle.

5. MAINTENANCE

5.1 Battery Replacement

When the light from the candles appears dim or the remote control responsiveness decreases, it's time to replace the batteries. Follow the steps in Section 3.1 to replace the 2 AA batteries in each candle.

- Always use fresh, high-quality AA batteries for optimal performance.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the candles will not be used for an extended period to prevent leakage.

5.2 Cleaning

To clean the candles, gently wipe them with a soft, dry cloth. Do not use abrasive cleaners or immerse the candles in water.

5.3 Storage

Store candles in a cool, dry place away from direct sunlight or extreme temperatures to prevent wax deformation.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Candle does not turn on.	Batteries are dead or incorrectly installed.	Check battery polarity and replace with fresh AA batteries.
	ON/OFF switch on the bottom is in the "OFF" position.	Slide the switch to the "ON" position.
Remote control is not working.	Remote battery is dead.	Replace the CR2025 coin cell battery in the remote control.
	Remote is too far or obstructed.	Ensure direct line of sight and operate within a reasonable range (approx. 10-16 ft).
Timer function is inconsistent.	Interference or low battery.	Ensure candles are not near strong electromagnetic interference. Replace batteries if needed.

7. SPECIFICATIONS

Feature	Detail
Brand	Hanzim
Model Number	F9
Color	Ivory
Material	Real Wax
Light Source Type	LED
Light Color	Warm White
Power Source	Battery Powered (2 AA batteries per candle, not included)
Battery Life (approx.)	150 hours
LED Lamp Lifetime	Up to 50,000 hours
Candle Diameter	2.2 inches
Candle Heights	Two 4", two 5", two 6", one 7", one 8", one 9"
Control Method	Remote Control
Special Features	Remote control, Timer (2/4/6/8H), Flickering/Static Light, Dimmable
Indoor/Outdoor Usage	Indoor (Not Water Resistant)
Item Weight	3.52 Pounds (total for set)
UPC	602463115682

8. WARRANTY & SUPPORT

For any questions, concerns, or support regarding your Hanzim Flameless Flickering LED Pillar Candles, please refer to the contact information provided at the point of purchase or visit the official Hanzim store on Amazon.

Specific warranty details may vary. Please retain your proof of purchase for any warranty claims.

© 2026 Hanzim. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question