

Bomann WKS 3002 CB

Bomann WKS 3002 CB Kettle User Manual

Model: WKS 3002 CB

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Bomann WKS 3002 CB Electric Kettle. This manual provides important instructions for the safe and efficient use of your appliance. Please read it thoroughly before first use and keep it for future reference.

Important Safety Instructions

- Read all instructions carefully before operating the kettle.
- Do not immerse the kettle, power base, cord, or plug in water or any other liquid.
- This appliance is intended for household use only. Do not use outdoors.
- Ensure the voltage indicated on the rating label matches your mains voltage.
- Always place the kettle on a firm, flat, heat-resistant surface.
- Do not operate the kettle without water to prevent damage to the heating element.
- Keep the appliance away from children.
- Unplug the kettle from the outlet when not in use and before cleaning.
- Do not open the lid while water is boiling to avoid scalding.
- Use only the provided power base with this kettle.

2. PRODUCT OVERVIEW AND FEATURES

The Bomann WKS 3002 CB is a 1.5-liter electric kettle designed for quick and efficient water heating. It features a durable stainless steel body and a powerful 2200 Watt heating element.

Key Features:

- **Capacity:** 1.5 Liters
- **Power:** 2200 Watts

- **Material:** Stainless Steel housing
- **Concealed Heating Element:** For easy cleaning and extended lifespan.
- **Automatic Shut-off:** The kettle switches off automatically once water boils.
- **Dry-Run Protection:** Prevents the kettle from operating without water.
- **360° Rotatable Base:** Allows for cordless operation and easy placement from any angle.
- **Cable Winder:** Integrated into the base for tidy storage.
- **Illuminated On/Off Switch:** Indicates when the kettle is operating.
- **BPA-Free Materials:** Ensures safe and healthy water heating.

Product Components:



The Bomann WKS 3002 CB electric kettle features a brushed stainless steel body with white plastic accents on the handle, lid, and base. It has a spout and a blue illuminated power switch.



This image highlights the kettle's advantages: proven Bomann quality, fast heating with 2200 Watts, compact design, and BPA-free materials.



Detailed view of the kettle's features, including a practical cable winder integrated into the base, a 360° rotatable connector for easy placement, and an illuminated on/off switch.



Emphasizing safety, this image shows the kettle with icons for BPA-free materials, stainless steel housing, and automatic shut-off, ensuring safe operation.

3. SETUP AND FIRST USE

Unpacking

1. Carefully remove the kettle and its power base from the packaging.
2. Remove all packaging materials, stickers, and labels.
3. Inspect the appliance for any signs of damage. Do not use if damaged.

Before First Use

1. Fill the kettle with clean water up to the MAX fill line.
2. Boil the water (see 'Operating the Kettle' section).
3. Discard the boiled water.
4. Repeat this process 2-3 times to remove any manufacturing residues.
5. Wipe the exterior with a damp cloth.

4. OPERATING THE KETTLE

Filling the Kettle

1. Remove the kettle from its power base.
2. Open the lid.
3. Fill the kettle with the desired amount of fresh water. Do not fill below the MIN mark or above the MAX mark. Overfilling may cause boiling water to spill out.
4. Close the lid securely.

Boiling Water

1. Place the filled kettle securely onto its power base.
2. Plug the power base into a suitable wall outlet.
3. Press the On/Off switch downwards. The indicator light will illuminate, signaling that the kettle is heating.
4. The kettle will automatically switch off once the water has boiled, and the indicator light will turn off.
5. You can manually switch off the kettle at any time by lifting the On/Off switch upwards.



A person is shown pouring hot water from the Bomann kettle into a cup, illustrating its quick heating capability and ease of use.



This image depicts a couple enjoying hot drinks, with the Bomann kettle on the table, symbolizing comfort and warmth provided by the appliance.

5. CLEANING AND MAINTENANCE

Regular cleaning and descaling will ensure the longevity and optimal performance of your kettle.

Cleaning the Exterior

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth.
- Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- Never immerse the kettle or its power base in water.

Descaling

Limescale buildup can affect the kettle's performance and taste of the water. Descale regularly, especially in hard water areas.

1. Fill the kettle with a mixture of white vinegar and water (e.g., 1 part vinegar to 2 parts water). Ensure the mixture covers the limescale but does not exceed the MAX fill line.
2. Bring the mixture to a boil.
3. Allow the mixture to soak in the kettle for at least 30 minutes, or longer for heavy buildup.
4. Empty the kettle and rinse thoroughly with fresh water several times.
5. If necessary, repeat the process or use a commercial descaling solution according to its instructions.

6. TROUBLESHOOTING

If you encounter any issues with your kettle, please refer to the following common problems and solutions:

- **Kettle does not turn on:**
 - Ensure the power base is securely plugged into a working electrical outlet.
 - Check if the On/Off switch is pressed down.
 - Verify there is water in the kettle (dry-run protection prevents operation without water).
- **Water is not heating:**
 - Confirm the kettle is properly seated on the power base.
 - Check if the On/Off switch is engaged and the indicator light is on.
- **Kettle switches off too soon:**
 - Limescale buildup can cause premature shut-off. Descale the kettle as described in the 'Maintenance' section.
 - Ensure the lid is fully closed.
- **Lid does not close properly:**
 - Check for any obstructions preventing the lid from closing.
 - Ensure the lid mechanism is clean and free of debris.

If the problem persists, please contact customer support.

7. TECHNICAL SPECIFICATIONS

Specification	Value
Model Number	WKS 3002 CB (630022)

Brand	Bomann
Capacity	1.5 Liters
Power	1850-2200 Watts
Voltage	220-240 V ~ 50 Hz
Material	Stainless Steel
Dimensions (L x W x H)	Approx. 22.5 cm (W) x 13.6 cm (D) x 34 cm (H)
Weight	Approx. 800 grams
Special Features	Automatic shut-off, dry-run protection, 360° rotatable base, concealed heating element, cable winder

Alle Fakten auf einen Blick.

BOMANN®

Füllvolumen 1,5 L

13,6 cm

22,5 cm

34 cm

A clear diagram presenting the kettle's key specifications: 1.5 L filling volume, 34 cm height, 22.5 cm width, and a 13.6 cm diameter base.

8. WARRANTY AND SUPPORT

Warranty Information

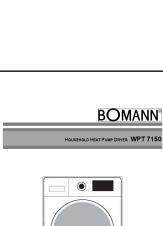
Specific warranty details may vary by region and retailer. Please refer to the warranty card included with your purchase or contact your retailer for precise warranty terms and conditions.

Customer Support

For technical assistance, spare parts, or any other inquiries, please contact Bomann customer service or your local distributor. Contact information can typically be found on the Bomann official website or on your product packaging.



© 2026 Bomann. All rights reserved.

 BOMANN® Geschirrspüler GSP 7409 Bedienungsanleitung CE	Bomann GSP 7409 Geschirrspüler Bedienungsanleitung Umfassende Bedienungsanleitung und Garantieinformationen für den Bomann GSP 7409 Geschirrspüler, einschließlich Installation, Bedienung, Wartung und Fehlerbehebung.
 BOMANN® Haushalts-Waschmaschine WA 7110 Bedienungsanleitung CE	Bomann WA 7110 Waschmaschine Bedienungsanleitung Umfassende Bedienungsanleitung und Garantieinformationen für die Bomann WA 7110 Haushaltswaschmaschine, inklusive Installations-, Betriebs-, Wartungs- und Fehlerbehebungshinweisen.
 BOMANN® Kühl-/Gefrierkombination KG 320.2 Bedienungsanleitung CE	BOMANN KG 320.2 Kühl-/Gefrierkombination Bedienungsanleitung Finden Sie detaillierte Anleitungen zur Installation, Bedienung, Wartung und Fehlerbehebung für die BOMANN KG 320.2 Kühl-/Gefrierkombination. Sicherheitshinweise und technische Daten.
 BOMANN® Wasserkocher WK 5012 CB Bedienungsanleitung CE	Bomann Wasserkocher WK 5012 CB Bedienungsanleitung Umfassende Bedienungsanleitung für den Bomann Wasserkocher WK 5012 CB, inklusive Sicherheitshinweisen, Anwendungstipps, Reinigung und Fehlerbehebung.
 BOMANN® Haushalts-Waschmaschine WA 7161 Bedienungsanleitung CE	BOMANN WA 7161: Bedienungsanleitung für Haushalts-Waschmaschinen Umfassende Bedienungsanleitung für die BOMANN WA 7161 Haushalts-Waschmaschine. Finden Sie Anleitungen zur Installation, sicheren Bedienung, Wartung und Fehlerbehebung.
 BOMANN® Haushalts Heat Pump Dryer WPT 7150 Bedienungsanleitung CE	Bomann WPT 7150 Household Heat Pump Dryer - Instruction Manual Comprehensive instruction manual for the Bomann WPT 7150 household heat pump dryer, covering installation, operation, maintenance, troubleshooting, and technical specifications.

